



[Manuals.plus](#) /

> [FUDTYSVC](#) /

> FUDTYSVC Robot Cleaner Roller Main Brush User Manual

FUDTYSVC daishengbaihuo524gs

FUDTYSVC Robot Cleaner Roller Main Brush User Manual

Model: daishengbaihuo524gs

INTRODUCTION

This manual provides essential information for the installation, maintenance, and general use of the FUDTYSVC Robot Cleaner Roller Main Brush. This replacement part is designed to ensure optimal cleaning performance for your compatible robot vacuum cleaner.

PRODUCT COMPATIBILITY

This roller main brush is compatible with the following robot vacuum cleaner models:

- Proscenic GT320 (roller brush and main brush)
- Proscenic D500 (roller brush and main brush)
- Proscenic D550 (roller brush and main brush)
- Proscenic Cocosmart 880T (roller brush and main brush)

Please verify your robot vacuum cleaner's model number before installation to ensure compatibility.

SETUP AND INSTALLATION

Follow these general steps to replace the roller main brush in your robot vacuum cleaner. Specific steps may vary slightly depending on your vacuum model. Always refer to your robot vacuum cleaner's original user manual for detailed instructions.

1. **Power Off:** Ensure your robot vacuum cleaner is powered off and unplugged from its charging base before beginning any maintenance.
2. **Access Brush Compartment:** Turn the robot vacuum cleaner upside down. Locate the main brush compartment, usually secured by latches or screws.

3. **Remove Old Brush:** Unlatch or unscrew the brush cover. Carefully lift out the old roller main brush. Note its orientation for correct installation of the new brush.
4. **Clean Compartment:** Remove any hair, dust, or debris accumulated in the brush compartment and around the brush bearings.
5. **Install New Brush:** Insert the new FUDTYSVC roller main brush into the compartment, ensuring it clicks securely into place. Make sure the ends of the brush align with the corresponding slots or bearings.
6. **Secure Cover:** Close the brush cover and secure it with the latches or screws.
7. **Test:** Place the robot vacuum cleaner back on its wheels and power it on to ensure proper operation.



Image: The FUDTYSVC Robot Cleaner Roller Main Brush, showing its bristles and central grey structure. This is the replacement part for compatible robot vacuum cleaners.

OPERATING (GENERAL USE)

Once installed, the roller main brush operates automatically as part of your robot vacuum cleaner's cleaning cycle. Ensure the brush is free from obstructions for optimal performance.

For best results, allow your robot vacuum cleaner to complete its cleaning cycles without interruption. The roller brush is crucial for picking up debris from various floor types.

MAINTENANCE

Regular maintenance of the roller main brush is essential for prolonging its lifespan and maintaining your robot vacuum cleaner's efficiency.

- **Daily/Weekly Cleaning:** After each cleaning cycle or at least once a week, remove the roller brush and carefully remove any tangled hair, string, or debris from the bristles and the brush ends. A small cleaning tool (often provided with robot vacuums) can be helpful.
- **Check for Wear:** Periodically inspect the bristles for signs of wear, damage, or excessive flattening. Worn bristles can reduce cleaning effectiveness.
- **Replacement:** The roller main brush is a consumable part. Its lifespan depends on usage frequency and floor types. It is generally recommended to replace the main brush every 6-12 months, or sooner if significant wear is observed.
- **Avoid Water:** Do not wash the roller brush with water unless specifically instructed by your vacuum cleaner's manual. Most roller brushes are not designed to be submerged.

TROUBLESHOOTING

If you experience issues related to the roller main brush, consider the following:

- **Brush Not Spinning:**
 - Check for tangled hair or debris obstructing the brush or its bearings.
 - Ensure the brush is correctly installed and seated in its compartment.
 - Verify that the brush cover is securely closed.

- **Reduced Cleaning Performance:**

- Clean the brush thoroughly to remove embedded dirt or hair.
- Inspect the bristles for wear; if they are flattened or damaged, it may be time for a replacement.
- Ensure the vacuum's dustbin is not full and filters are clean.

- **Unusual Noises:**

- Remove the brush and check for any foreign objects lodged in the brush or its motor area.
- Ensure the brush is properly aligned and not rubbing against the compartment walls.

If problems persist after troubleshooting, consult your robot vacuum cleaner's original user manual or contact the manufacturer of your robot vacuum cleaner for further assistance.

SPECIFICATIONS

Attribute	Value
Brand	FUDTYSVC
Model Name	daishengbaihuo524gs
Item Weight	1.76 ounces (50 Grams)
Package Dimensions	1.18 x 0.79 x 0.39 inches
Color	One Color
Manufacturer	daishengbaihuo
Date First Available	November 5, 2024

WARRANTY AND SUPPORT

Specific warranty information for this replacement part is not provided in this manual. Please refer to the product listing or contact the seller, FUDTYSVC, for details regarding warranty coverage and customer support for this roller main brush.