

Enhulk PC18

Enhulk Pro Cordless Pool Vacuum Instruction Manual

MODEL: PC18

Introduction

This instruction manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Enhulk Pro Cordless Pool Vacuum. Please read this manual thoroughly before first use and keep it for future reference.

Safety Information

Always follow basic safety precautions when using electrical appliances, especially near water. Ensure the unit is fully submerged before activation. Do not operate the vacuum out of water for extended periods. Always charge the unit in a dry, covered area. Keep out of reach of children.

Package Contents

Verify that all components are present before assembly:

- Main Vacuum Unit (Fuselage)
- 13.4" Wide Vacuum Head (Triangular Brush Head)
- Telescopic Pole (87.5 inches)
- Short Handle (43 inches)
- Charger
- Filter Bags (2x: 180 micron for large debris, 500 micron for fine particles)
- Product Manual



Figure 1: Main vacuum unit, telescopic pole, short handle, charger, and filter bags.

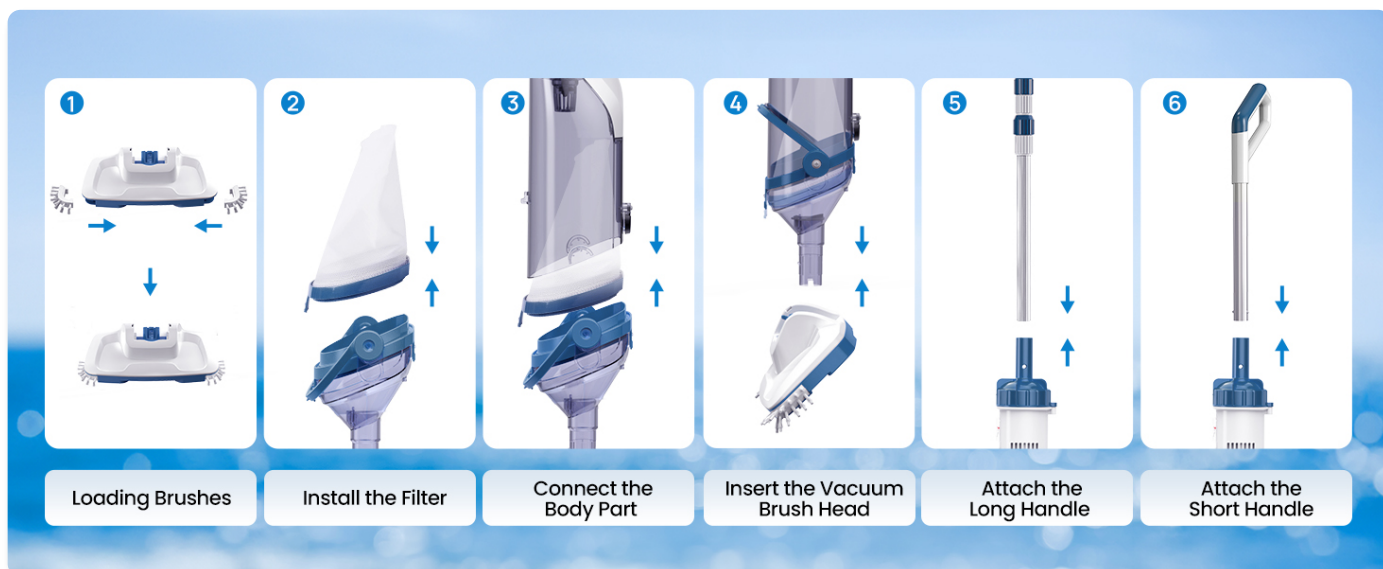


Figure 2: Detailed view of all included parts for the Enhulk PC18 pool vacuum.

Assembly Instructions

1. **Charge the Battery:** Connect the charger to the main vacuum unit. The indicator light will show charging status. A full charge takes approximately 2 hours.
2. **Load Brushes (if detached):** Ensure the brushes are securely attached to the vacuum head.
3. **Install the Filter:** Open the cleaning cover and insert the desired filter bag (180 micron for large debris, 500 micron for fine particles) into the filter compartment. Close the cover securely.
4. **Connect the Body Part:** Attach the main vacuum unit to the vacuum head, ensuring it clicks into place.
5. **Insert the Vacuum Brush Head:** Secure the assembled vacuum head to the main unit.
6. **Attach Handle:** Choose between the 87.5-inch telescopic pole for larger pools or the 43-inch short handle for spot cleaning and steps. Insert the chosen handle into the top of the main unit until it locks.



Figure 3: Visual guide for assembling your Enhulk pool vacuum.

Operating Instructions

Initial Use

Before first use, ensure the battery is fully charged. Select the appropriate filter bag based on the type of debris in your pool.

Powering On and Submerging

Press the power button located on the main unit. Submerge the vacuum unit completely into the water. The unit will activate once fully submerged. If the unit is removed from water for more than 60 seconds, it will automatically shut off to prevent damage.

Cleaning Technique

Move the vacuum slowly and steadily across the pool floor, walls, and steps. The 13.4-inch wide head and side brushes are designed to efficiently sweep debris towards the intake. For corners and tight spots, the unit can be used without the wide brush head for precision cleaning.

Video 1: Official demonstration of the Enhulk PC18 Cordless Pool Vacuum in action.



Figure 4: The 13.4-inch super head and 40W motor deliver 18.5 gal/min suction power.

DUAL CLEANING HEAD

Efficient cleaning of pool floors, corners and steps

The top panel shows a robotic pool cleaner with a transparent vacuum head. It is positioned at the edge of a swimming pool, specifically over the blue tiled steps. The head is angled downwards, and a stream of water is being drawn into it, lifting small debris like leaves and twigs from the surface. The background shows the blue tiles of the pool steps and walls.

Vacuum Head

The bottom panel shows the same robotic pool cleaner with a transparent vacuum head, but it is now on a flat pool floor. The head is angled upwards, and a stream of water is being drawn into it, lifting small debris like leaves and twigs from the surface. The background shows the blue tiles of the pool floor and walls.

Brush Head

Figure 5: Dual cleaning head for efficient cleaning of pool floors, corners, and steps.

SUPER RUNNING TIME

60 Mins
Running time

70 Mins
Running time

Others

Ours



2H
Charging Time



Figure 6: Powered by a 52Wh high-capacity battery, offering 70 minutes of runtime and 2-hour fast charging.

PERFECT NEW LABOR-**SAVING** HANDLE

 
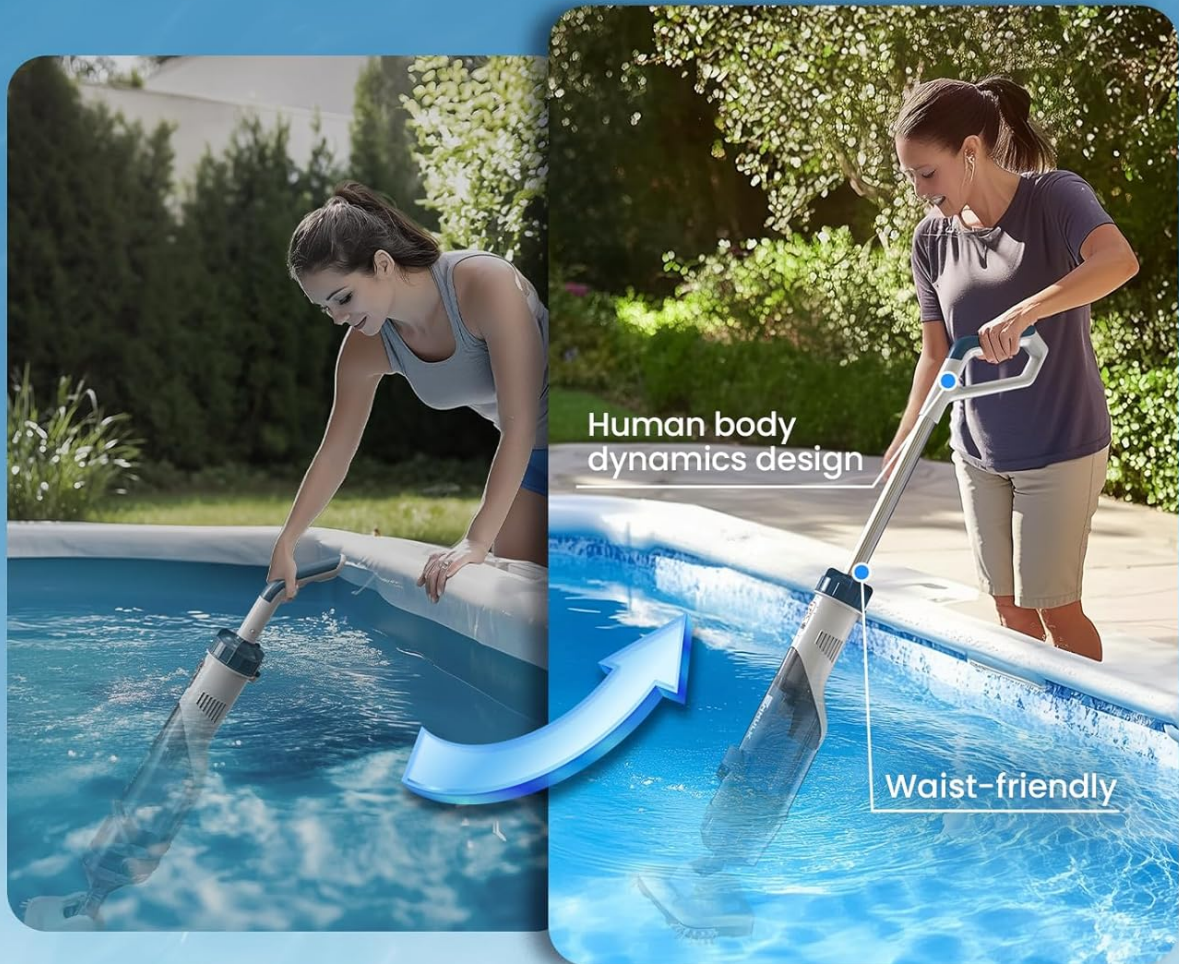 


Figure 7: Ergonomic extended pole and handle reduce strain for comfortable cleaning.

EXTENSION POLE 35.8"-87.5"



Light Weight

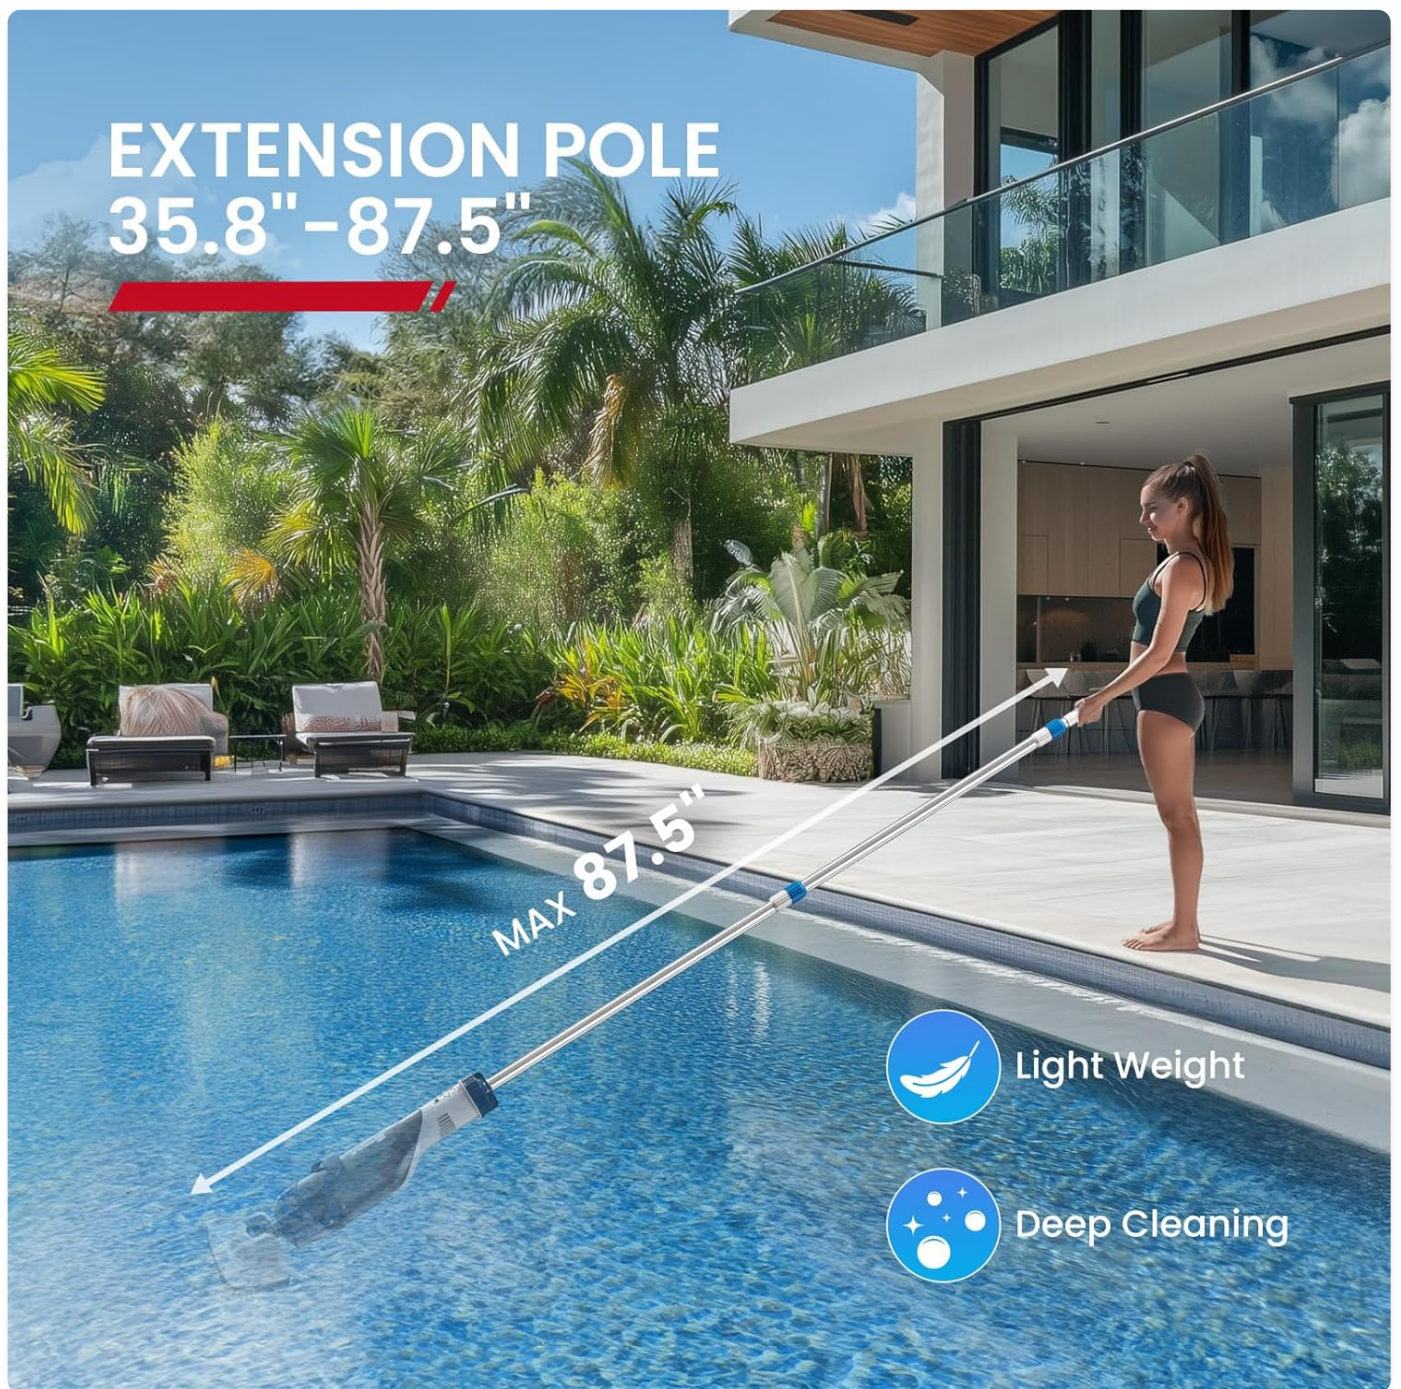

Deep Cleaning

Figure 8: The 87.5-inch telescopic pole ensures cleaning of large pools.

MULTI-FUNCTION VACUUM HEAD



Assisted wall cleaning



13.4inch large head

Figure 9: Multi-function vacuum head with side brushes assists in wall cleaning.

Maintenance

Filter Cleaning

After each use, or when suction power decreases, remove the filter bag from the unit. Empty collected debris and rinse the filter bag thoroughly with clean water. Allow the filter bag to dry completely before re-installing or storing.

Storage

Store the vacuum in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the unit is clean and dry before storage to prevent mildew or damage.

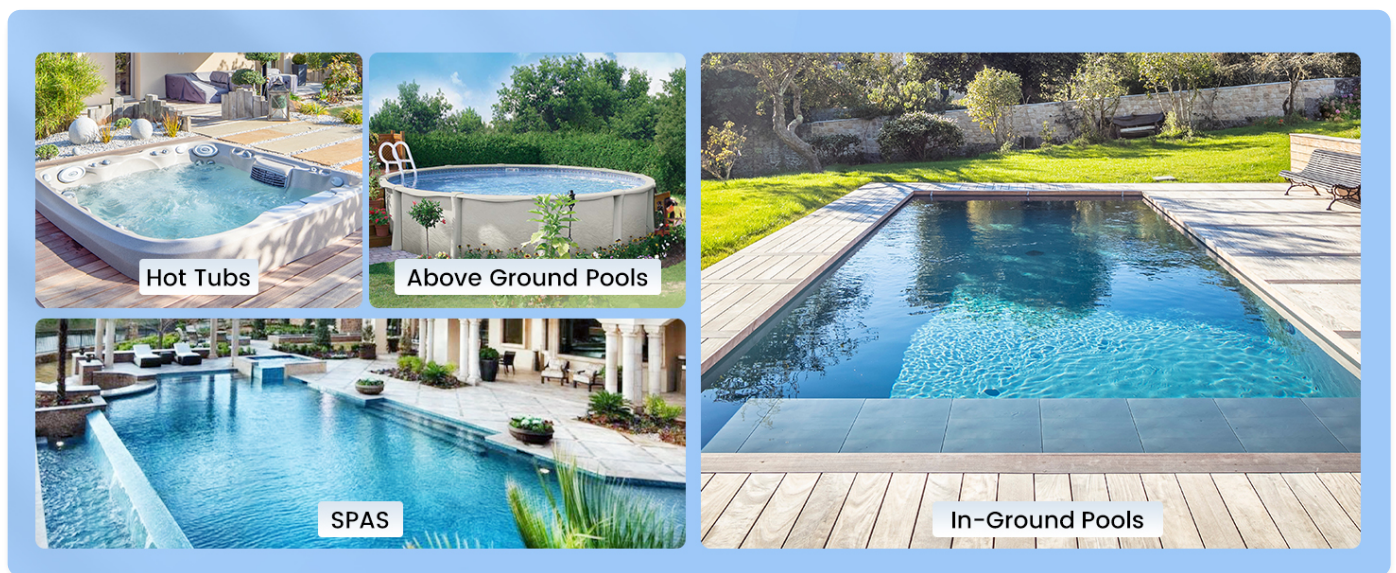


Figure 10: The package includes both 180 micron and 500 micron filter bags for different debris types.

Troubleshooting

Problem	Possible Cause	Solution
No Suction / Weak Suction	Clogged filter bag; Low battery; Debris stuck in intake.	Clean/empty filter bag; Recharge battery; Remove debris from intake.
Unit Not Turning On	Battery not charged; Not fully submerged in water.	Charge battery; Ensure unit is completely underwater.
Debris Escaping Filter	Incorrect filter type for debris; Filter not properly installed.	Use finer mesh filter (500 micron); Re-install filter securely.

Product Specifications

Feature	Detail
Model Name	PC18
Brand	Enhulk
Power Source	Battery Powered
Capacity	18.5 Gallons per Minute
Charging Time	2 Hours
Runtime	70 Minutes
Product Dimensions	7.87 x 4.72 x 27.56 inches
Item Weight	8.33 pounds
Battery Type	Lithium-Ion
Battery Weight	400 Grams
Control Method	Touch

Assembly Required	Yes
-------------------	-----



Warranty and Support

Your Enhulk Pro Cordless Pool Vacuum is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or to order replacement parts, please contact Enhulk customer service via their official website or the contact information provided in the warranty documentation.

Visit the [Enhulk Store](#) for more information.

© 2025 Enhulk. All rights reserved.

Related Documents

	<p>ENHULK 20V 12 Inch Cordless Snow Shovel ASYSN04: User Manual, Safety & Operating Instructions</p> <p>Detailed user manual and safety guide for the ENHULK 20V 12 Inch Cordless Snow Shovel (Model ASYSN04). Covers essential safety warnings, operating instructions, assembly, troubleshooting, maintenance, and product specifications for effective and safe use.</p>
	<p>Enhulk DS164 Cordless String Trimmer User Manual</p> <p>User manual for the Enhulk DS164 cordless string trimmer/weed wacker. Learn about its features, operation, maintenance, and safety guidelines for lawn care and yard work.</p>