

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TODO](#) /

› [TODO Cordless Rechargeable Electric Knife User Manual](#)

TODO 46816A

TODO Cordless Rechargeable Electric Knife User Manual

Model: 46816A

1. INTRODUCTION

Thank you for purchasing the TODO Cordless Rechargeable Electric Knife. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new electric knife. Please read this manual thoroughly before first use and retain it for future reference.

This electric knife is designed for effortless slicing and carving of various foods, including meat and bread, thanks to its powerful motor and dual stainless steel blades.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before operating the appliance.
- Keep hands, hair, clothing, and other utensils away from the blade during operation to prevent injury.
- Always ensure the safety lock button is engaged when the knife is not in use or when attaching/detaching blades.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only attachments and accessories recommended by the manufacturer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not use outdoors.
- Always unplug the charger from the power source when not in use and before cleaning.
- Blades are sharp. Handle with extreme care.

3. PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present and undamaged:

- Main Unit (Motor Handle)

- Dual Stainless Steel Blades
- USB Type-C to USB Type-A Charge Cable
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your TODO Electric Knife:





Figure 4.1: Front view of the TODO Cordless Electric Knife with the blade attached. The main unit is black with a circular handle and the blade extends upwards.



Figure 4.2: Angled view of the electric knife showing the blue LED indicator light, which illuminates when the safety lock is disengaged or during charging.



Figure 4.3: Side profile of the electric knife, highlighting its ergonomic design and the extended blade for efficient carving.



Figure 4.4: Detailed view of the trigger switch for operation and the adjacent safety lock button, which prevents accidental activation.





Figure 4.5: The two individual stainless steel blades with serrated edges, designed to interlock for effective cutting.

Key Components:

- **Blade Release Button:** Located on the top of the unit, used to safely eject the blades.
- **Safety Lock Button:** Prevents accidental activation of the knife. Must be pressed before the trigger can be engaged.
- **Trigger Switch:** Activates the blades when pressed.
- **USB-C Charging Port:** For connecting the charging cable.
- **LED Indicators:** Three LEDs indicate battery charge level, and one LED indicates safety lock status.
- **Dual Stainless Steel Blades:** Interlocking serrated blades for efficient cutting.

5. SETUP

5.1 Charging the Battery

Before first use, fully charge the electric knife. The unit is powered by a 7.4V rechargeable Li-ion battery.

1. Ensure the knife is turned off and the safety lock is engaged.
2. Connect the USB Type-C end of the supplied charging cable to the charging port on the knife unit.
3. Connect the USB Type-A end of the cable to a compatible USB power adapter (not supplied) or a USB port on a computer.
4. The LED indicators will illuminate to show charging progress. A full charge is indicated when all three LEDs are solid.
5. Charging time may vary. Disconnect the charger once fully charged.

5.2 Attaching the Blades

Always handle blades with extreme care. Ensure the unit is off and unplugged if charging.

1. Hold the two blade sections together, aligning the rivets and slots so they interlock.
2. With the blades interlocked, carefully insert the blade shaft into the blade opening on the front of the motor unit.
3. Push firmly until you hear a click, indicating the blades are securely locked into place. Do not force.
4. Gently pull on the blades to ensure they are properly seated and will not come loose during operation.

5.3 Detaching the Blades

To remove the blades for cleaning or storage:

1. Ensure the knife is off and the safety lock is engaged.
2. Locate the blade release button on the top of the unit.
3. Press and hold the blade release button firmly.
4. While holding the button, carefully pull the blades straight out from the motor unit.
5. Separate the two blade sections for individual cleaning.

6. OPERATING INSTRUCTIONS

6.1 General Operation

1. Ensure the blades are securely attached and the battery is sufficiently charged.
2. Hold the knife firmly with one hand.
3. With your thumb, press the safety lock button. The safety lock LED indicator will illuminate.
4. While holding the safety lock button, press the trigger switch with your index finger to activate the blades. The blades will begin to reciprocate.
5. Guide the knife through the food using a sawing motion, allowing the blades to do the work. Do not apply excessive pressure.
6. Release the trigger switch to stop the blades. The safety lock will automatically re-engage when the trigger is released.

6.2 Tips for Best Results

- For carving roasts or poultry, use a carving fork to steady the food.
- Allow the knife to cool down if used continuously for extended periods.
- Always cut on a stable, flat surface, preferably a cutting board.
- Avoid cutting through bones or frozen foods, as this can damage the blades or motor.

7. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your electric knife.

7.1 Cleaning the Blades

1. Always detach the blades from the motor unit before cleaning.
2. Wash the blades in warm, soapy water. Use a brush to remove any food particles from the serrations.
3. Rinse thoroughly under running water.
4. Dry the blades immediately and completely to prevent rust. Store them safely.

7.2 Cleaning the Motor Unit

1. Ensure the unit is off and unplugged from the charging cable.
2. Wipe the exterior of the motor unit with a damp cloth. Do not immerse in water or spray with liquids.
3. For stubborn stains, use a mild detergent on the cloth, then wipe with a clean, damp cloth.
4. Dry thoroughly before storing or recharging.

7.3 Storage

Store the electric knife and its components in a dry, safe place, out of reach of children. It is recommended to store the blades separately or in a blade guard to prevent accidental injury.

8. TROUBLESHOOTING

If you encounter issues with your electric knife, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Knife does not turn on.	Battery is low or depleted.	Charge the battery fully. Check LED indicators for charge status.
Knife does not turn on.	Safety lock is engaged.	Ensure the safety lock button is pressed simultaneously with the trigger switch.
Blades are not moving or moving slowly.	Blades are not properly inserted.	Remove and re-insert blades, ensuring they click into place.
Blades are not moving or moving slowly.	Food is too hard or frozen.	Do not attempt to cut frozen food or bones. Allow food to thaw.
Excessive vibration or noise.	Blades are not properly interlocked or inserted.	Remove and re-insert blades, ensuring they are correctly interlocked and seated.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	TODO
Model Number	46816A
Power	40W
Battery	DC7.4V, 1500mAh Li-ion Rechargeable
Input	5V-2A (USB Charging)
Material	ABS, PP Plastic (Body), Stainless Steel (Blade)
Blade Type	Dual Serrated Blade
Dimensions (Main Unit)	266mm x 44mm x 80mm
Dimensions (with Blade)	486mm x 44mm x 80mm
Weight	0.720kg
Special Features	Safety Lock Button, Blade Eject Button, LED Indicators

10. WARRANTY AND SUPPORT

Your TODO Electric Knife is designed for durability and performance. For any warranty claims or technical support, please contact the retailer or the manufacturer directly.

Please retain your proof of purchase for warranty purposes. Do not attempt to repair the appliance yourself, as this may void the warranty and pose safety risks.

For further assistance, you may visit the [TODO Store on Amazon](#) or contact their customer service.