

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Gracioso](#) /

> [Gracioso Q800 Desktop CD Player Instruction Manual](#)

Gracioso Q800

Gracioso Q800 Desktop CD Player

INSTRUCTION MANUAL

Introduction

Thank you for purchasing the Gracioso Q800 Desktop CD Player. This manual provides detailed instructions for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity of your CD player.

What's in the Box

- CD player *1
- TYPE-C power cable *1
- AUX cable *1
- Power adapter *1
- User manual *1

Product Overview and Features

The Gracioso Q800 is a versatile desktop CD player designed for a comprehensive audio experience. It features dual speakers for clear stereo sound, an LCD display, and multiple playback modes.

High Quality Clear Stereo Sound

Dual-speaker with HiFi sound



TF Card Mode



USB Mode



AUX Mode



Image: Front view of the Gracioso Q800 CD Player highlighting TF Card, USB, and AUX input modes.

Key Features:

- **Time Display & Alarm Function:** The integrated LCD displays the current time and can be set as an alarm clock.
- **Timer On/Off:** Program the device to turn off automatically, ideal for falling asleep to music.
- **Multi-functional Playback Modes:** Supports CD, MP3, CD-R, CD-RW, Bluetooth, USB, TF Card, FM Radio, AUX, and Sleep Music modes.
- **Bluetooth Connectivity:** Functions as both a Bluetooth receiver (to play music from your phone/computer) and a Bluetooth transmitter (to stream CD audio to other Bluetooth speakers).
- **Dual Speakers with HiFi Sound:** Delivers clear, powerful stereo sound with distinctive bass.

- **FM Radio:** Enjoy your favorite FM channels with the built-in radio function.
- **7 Sleep Sounds:** Includes natural sounds like Birdsong, Running water, Natural wind, Alpha waves, Rain, Campfires, and Thunder to aid relaxation.
- **Portable Design:** Features a specially designed handle for easy carrying.
- **Dust Cover:** Protects the CD mechanism from dust, extending product life.
- **Remote Control:** Conveniently operate the player from a distance.
- **3.5mm Headphone Jack:** For private listening.

6 Playback Modes

CD supports CD/MP3/CD-R/CD-RW standard discs



CD Mode



Bluetooth Mode



Sleep Music



TF Card Mode



USB Mode



FM Mode



Image: The Gracioso Q800 CD Player showing its various playback modes on the LCD display: CD, Bluetooth, Sleep Music, TF Card, USB, and FM Mode.

Bluetooth Receiver

Enjoy your phone music from CD Player



Image: The Gracioso Q800 CD Player receiving Bluetooth audio from a smartphone, with musical notes floating around.

Remote Control

The CD player can be operated remotely by operating it within 10 meters of the remote control.



Image: A person using the remote control to operate the Gracioso Q800 CD Player, which is placed on a cabinet.

Bluetooth Transmitter

CD player easily connects to wireless Bluetooth devices

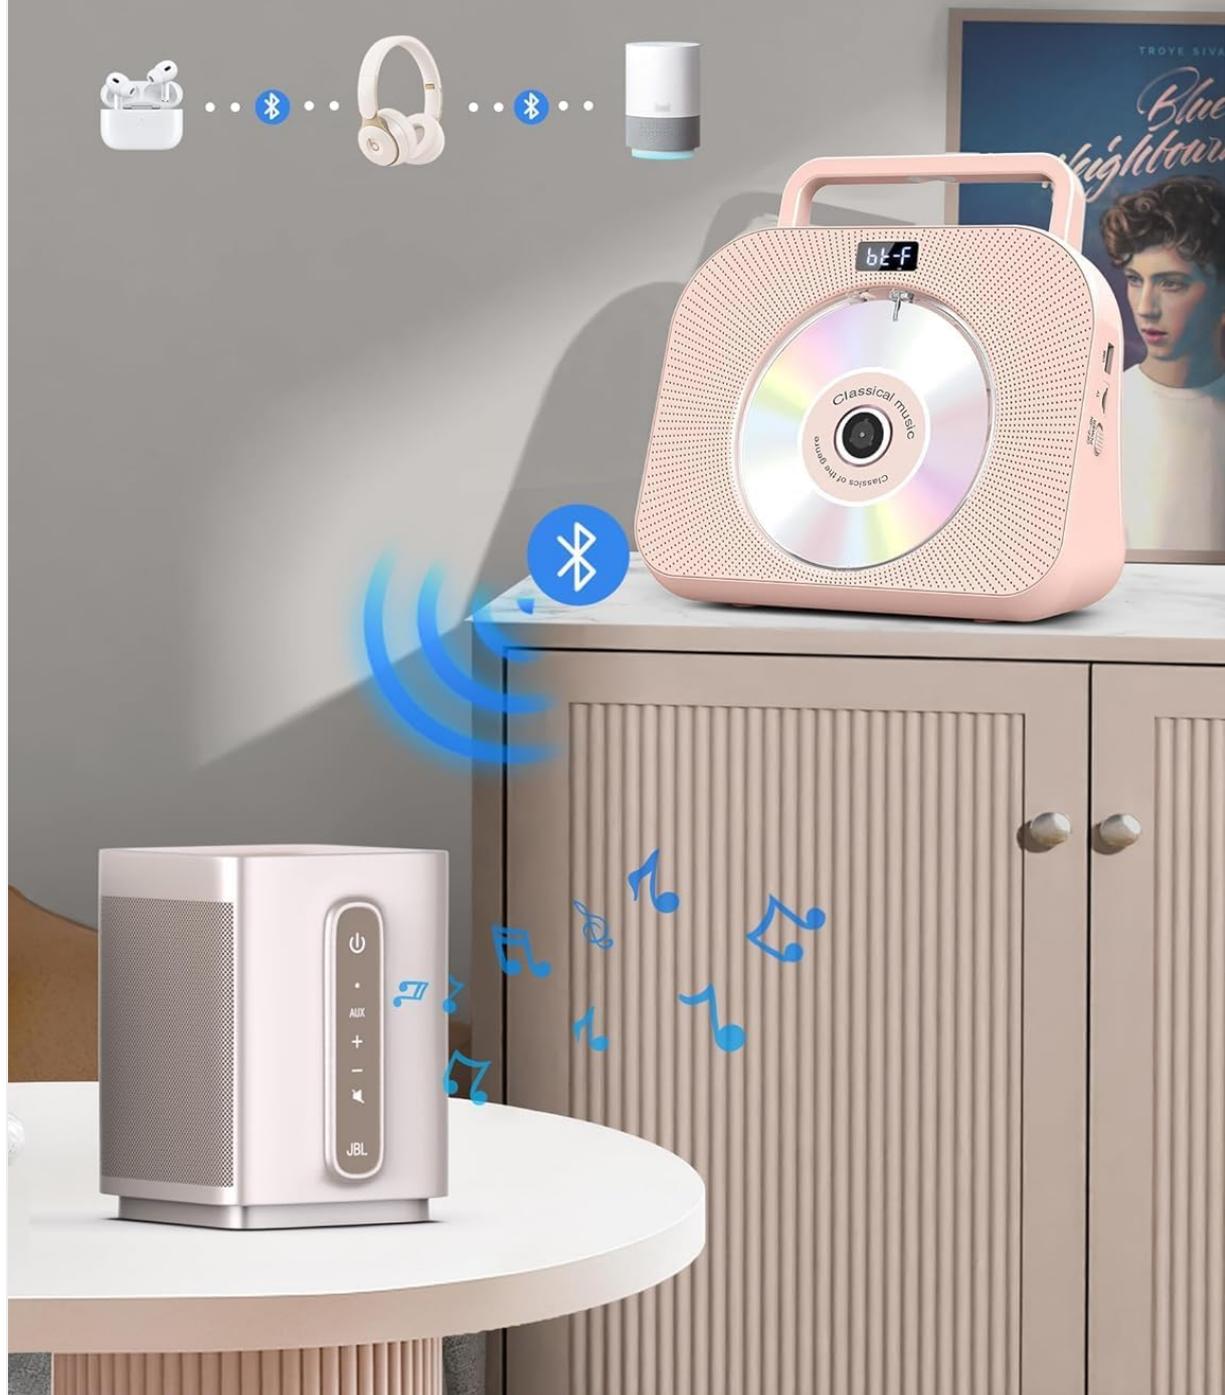


Image: The Gracioso Q800 CD Player transmitting Bluetooth audio to an external JBL speaker, demonstrating its transmitter function.

7 Types of Sleep Sounds

Sooth stress and fall asleep with nature sounds



Image: A couple sleeping while the Gracioso Q800 CD Player plays one of its seven built-in sleep sounds, with icons for different nature sounds.

Setup

1. Power Connection

1. Connect the provided TYPE-C power cable to the Type-C charging port on the back of the CD player.
2. Plug the power adapter into a standard wall outlet.
3. The LCD display will illuminate, indicating the device is receiving power.

2. Inserting a CD

1. Gently open the dust cover on the front of the CD player.
2. Place a CD (CD, MP3, CD-R, CD-RW format) onto the spindle with the label side facing up.
3. Close the dust cover firmly until it clicks into place.

3. Connecting External Devices

- **USB Drive:** Insert a USB drive into the USB port on the side of the player.
- **TF Card:** Insert a TF card into the TF card slot on the side of the player.
- **AUX Input:** Use the provided AUX cable to connect an external audio source (e.g., smartphone, MP3 player) to the AUX port on the back.
- **Headphones:** Plug 3.5mm wired headphones into the headphone jack on the back for private listening.

Operating Instructions

1. Basic Controls

- **Power Button:** Press to turn the device on or off.
- **Play/Pause Button:** Press to start or pause playback.
- **Previous/Next Buttons:** Press to skip to the previous or next track. Hold to fast forward/rewind.
- **Volume Control:** Use the volume buttons on the device or remote to adjust the sound level.

2. Mode Selection

Press the **MODE** button on the device or remote control to cycle through the available modes: CD, Bluetooth, USB, TF Card, FM Radio, AUX, and Sleep Music.

3. Bluetooth Operation

- **Bluetooth Receiver (Playing from Phone/Computer):**
 - a. Switch the CD player to Bluetooth Mode (display shows "BLUE").
 - b. On your external device (smartphone, tablet, computer), enable Bluetooth and search for "Gracioso Q800".
 - c. Select the device to pair. Once connected, you can play audio from your external device through the CD player's speakers.
- **Bluetooth Transmitter (Streaming CD to External Speaker):**
 - a. Ensure your external Bluetooth speaker is in pairing mode.
 - b. Switch the CD player to CD Mode and start playing a CD.
 - c. Press and hold the Bluetooth button on the CD player until the display indicates pairing mode. The CD player will search for nearby Bluetooth speakers.
 - d. Once connected, the CD audio will stream to your external Bluetooth speaker.

4. FM Radio Tuning

1. Switch the CD player to FM Radio Mode (display shows frequency).
2. Extend the antenna on the back of the device for better reception.
3. Use the Previous/Next buttons to manually tune to a station or press and hold to auto-scan for available stations.

5. Setting Time, Alarm, and Timer

Refer to the detailed instructions in the included paper manual for setting the clock, alarm, and sleep timer functions, as these often involve specific button sequences.

6. A-B Repeat Function

While playing a CD, USB, or TF card, press the **A-B Repeat** button at the desired starting point (A). Press it again at the desired ending point (B). The player will continuously repeat the section between A and B. Press a third time to cancel.

Maintenance

- **Cleaning the Device:** Use a soft, dry cloth to wipe the exterior of the CD player. Do not use liquid cleaners or abrasive materials.
- **Cleaning the CD Lens:** If CD playback issues occur, use a specialized CD lens cleaning disc or a cotton swab with a small amount of isopropyl alcohol to gently clean the laser head.
- **CD Care:** Handle CDs by their edges. Store them in their cases to prevent scratches and dust accumulation.
- **Dust Cover:** Keep the dust cover closed when not in use to protect the internal components.

Troubleshooting

Issue: Device is not charging.

Your browser does not support the video tag.

Video: Troubleshooting steps for when the device is not charging.

- Check if the charging interface is loose or damaged. Clean or replace the interface if necessary.
- Verify the charging cable is not damaged or has poor contact. Replace with a new charging cable if needed.
- Inspect the charging port for any clutter or blockages. Ensure it is free of dust or damage. Clean or replace the port if required.

Issue: Bluetooth is not working.

Your browser does not support the video tag.

Video: Troubleshooting steps for Bluetooth connectivity issues.

- This device does not support connecting to car Bluetooth.
- Check for environmental interference. Turn off or disable Bluetooth on other nearby devices.
- Adjust the distance between the CD player and the Bluetooth device. Bring them closer to increase signal strength.
- Reboot the speaker or remove the battery and/or disconnect the power cord for a minute to restart the device before attempting to connect to Bluetooth.
- Clear the paired device memory of the speaker and try pairing the device again.
- Ensure Bluetooth is enabled on both devices. If Bluetooth is not enabled on one of the devices, it will not be able to connect.

Issue: CD player won't play my CD.

Your browser does not support the video tag.

Video: Troubleshooting steps for CD playback issues.

- Ensure the CD door is closed tightly.
- Dust and dirt inside the laser head or on the CD can affect reading. Use a special cleaning disc or cotton swab to gently wipe the laser head.
- Check the CD for scratches, stains, or deformation. Use a clean, unscratched disc and regularly check the quality of your discs.
- If the laser head is poorly focused, it may lead to reading failure. Try to adjust the laser focus manually or use a special cleaning disc.
- If the above methods are ineffective, the internal parts of the CD player may be damaged or aging. It is recommended to contact a professional repairer for inspection and repair, or replace the CD player or related parts if necessary.

Specifications

Brand	Gracioso
Model Name	Q800
Product Dimensions	6.99 x 5.34 x 2.7 inches
Item Weight	1.3 pounds
Connectivity Technology	Bluetooth
Special Feature	Portable
Supported Disc Formats	CD, MP3, CD-R, CD-RW
Input Options	USB, TF Card, AUX (3.5mm)
Manufacturer	Dingmi

Warranty and Support

Gracioso offers a 12-month warranty for this portable CD player. For any inquiries, technical assistance, or warranty claims, please contact our customer service team. We are committed to providing world-class customer service.

Please refer to the contact information provided on the product packaging or the official Gracioso website for support details.