

KM-189

Generic KM-189 Epilator for Women User Manual

Model: KM-189

1. INTRODUCTION

The Generic KM-189 Epilator is designed for gentle and effective hair removal for women. This device provides efficient hair removal from the root, offering long-lasting results. Its ergonomic design allows for convenient use at home, suitable for various body areas including the face and sensitive zones. The KM-189 features a safe blade system to minimize skin irritation and is engineered for easy operation and cleaning, ensuring a comfortable and smooth experience.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the KM-189 Epilator. Retain this manual for future reference.

- Do not use the epilator on irritated, sunburned, or damaged skin. Consult a doctor if you have any skin conditions or concerns.
- Keep the device dry. Do not use it in or near water unless explicitly stated as waterproof (this model is not specified as waterproof).
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Use only the provided charger and accessories.
- Ensure the device is clean before and after each use to maintain hygiene and prevent skin irritation.
- If the device shows any signs of damage, discontinue use immediately and contact customer support.

3. PRODUCT OVERVIEW



Figure 1: KM-189 Epilator Main Unit

This image displays the main unit of the Generic KM-189 Epilator. The device is predominantly pink and white, featuring the epilating head with multiple tweezers. The back of the device shows the model number KM-189A and power requirements (110-220V, 50/60Hz, 3W).



Figure 2: Included Accessories

This image shows the accessories included with the epilator: a white USB charging cable and a small white cleaning brush, essential for maintenance.

4. SETUP

4.1 Initial Charging

1. Before first use, fully charge the epilator. Connect the provided USB charging cable to the epilator's charging port and plug the other end into a suitable USB power adapter (not included) or a USB port.
2. The charging indicator light (if present) will illuminate to show the device is charging.
3. Allow sufficient time for a full charge, typically several hours, as indicated by the charging light changing or turning off.

4.2 Attaching the Epilating Head

- Ensure the epilator is turned off before attaching or detaching any parts.
- Align the epilating head with the main body of the device and gently press until it clicks securely into place.
- To detach, press the release button (if available) and pull the head away from the body.

5. OPERATING INSTRUCTIONS

5.1 Preparing Your Skin

1. For optimal results, trim hair to approximately 2-3 mm (0.08-0.12 inches) in length before epilating.
2. Cleanse your skin thoroughly with a gentle cleanser to remove any oils, lotions, or makeup. Ensure skin is completely dry before proceeding.

5.2 Epilation Process

1. Turn on the epilator using the power button. If your model has multiple speed settings, select the appropriate speed based on your comfort level and hair thickness.
2. Hold the skin taut with one hand in the area you intend to epilate.
3. Gently glide the epilator over the skin against the direction of hair growth. Maintain a slow, steady movement.
4. Avoid pressing too hard on the skin to prevent irritation. Let the epilator do the work.
5. For sensitive areas, proceed with extra caution and ensure the skin is held very taut.

6. After completing epilation, turn off the device.

5.3 Post-Epilation Care

- Apply a soothing, alcohol-free moisturizer or aloe vera gel to the treated area to calm the skin and reduce redness.
- Avoid direct sun exposure, hot baths, or harsh skin products immediately after epilation.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your epilator.

1. Ensure the epilator is turned off and disconnected from the power source before cleaning.
2. Detach the epilating head from the main body.
3. Use the provided cleaning brush (Figure 2) to remove any trapped hairs from the tweezer discs and the epilator head.
4. If the head is washable (check product specifications, generally epilator heads are), rinse it under running water. Ensure it is completely dry before reattaching or storing. Do not rinse the main body of the epilator.
5. Wipe the main body of the epilator with a soft, damp cloth. Do not use abrasive cleaners or solvents.
6. Reattach the clean, dry epilating head.

6.1 Storage

- Store the epilator and its accessories in a cool, dry place, away from direct sunlight and moisture.
- Keep the protective cap on the epilating head (if provided) to protect the tweezers.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Epilator does not turn on.	Battery is depleted. Device is not properly assembled.	Charge the epilator fully. Ensure the epilating head is securely attached.
Poor hair removal performance.	Hair is too long or too short. Epilator head is dirty. Not gliding against hair growth.	Trim hair to 2-3 mm. Clean the epilating head thoroughly. Ensure you are moving the epilator against the direction of hair growth.
Skin irritation or redness.	Pressing too hard. Skin not prepared properly. Sensitive skin reaction.	Apply less pressure. Ensure skin is clean and dry. Apply a soothing moisturizer after use. If irritation persists, discontinue use.

8. SPECIFICATIONS

- **Brand:** Generic
- **Model:** KM-189

- **Power Source:** Rechargeable (via USB) / Corded Electric (110-220V, 50/60Hz, 3W)
- **Item Weight:** 1.2 Kilograms
- **Package Dimensions:** 17.7 x 15 x 4.7 cm
- **Included Components:** Epilator unit, USB charging cable, Cleaning brush
- **Color:** Disco (Pink/White)
- **Manufacturer:** Generic

9. WARRANTY AND SUPPORT

No specific warranty information is provided in the product details. For support or warranty inquiries, please refer to the retailer or manufacturer's contact information provided at the point of purchase.