

Irfora LAKUSY292998

Irfora Remote Control for V020 GPS Fishing Bait Boat User Manual

Model: LAKUSY292998

1. PRODUCT OVERVIEW

This manual provides detailed instructions for the Irfora Remote Control, designed specifically for use with the V020 GPS Fishing Bait Boat. The remote control allows for precise navigation and management of your bait boat, enhancing your fishing experience.



Figure 1.1: Front view of the Irfora Remote Control, showing the joysticks, power switch, GPS label, and LCD screen area.

2. KEY FEATURES

- Enables wireless navigation of your fishing bait boat.
- Features a strong signal with a range of up to 400-500 meters.
- Equipped with an LCD screen displaying essential information such as distance, direction, positioning points, battery life, and light status.
- Compatible with V020 GPS fishing bait boats.

3. PACKAGE CONTENTS

Upon unboxing, please ensure all items listed below are present and in good condition:

- 1 x Irfora Remote Control

Note: The V020 GPS fishing bait boat is sold separately and is not included in this package.



Item NO. : V900-04 Item: Remote control
Net Weight:201g Size:16.9X15.2X5.5cm

Figure 3.1: The remote control unit with its approximate dimensions (16.9 x 15.2 x 5.5 cm) and net weight (201g) indicated.

4. SETUP

4.1 Battery Installation

The remote control requires 4 AA batteries for operation (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

4.2 Initial Pairing with V020 GPS Fishing Bait Boat

Before first use, ensure your V020 GPS Fishing Bait Boat is powered on and within range. The remote control should automatically establish a connection. If connection issues occur, refer to the V020 GPS Fishing Bait Boat's manual for specific pairing instructions.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

To power on the remote control, slide the 'POWER' switch located on the front panel to the 'ON' position. To power off, slide the switch to the 'OFF' position.

5.2 Basic Navigation

Use the two joysticks to control the movement of the V020 GPS Fishing Bait Boat. The left joystick typically controls forward/backward movement and turning, while the right joystick may control additional functions or fine-tune direction, depending on the bait boat's capabilities. Familiarize yourself with the boat's response in an open water area before full operation.



Figure 5.1: The Irfora Remote Control positioned next to the V020 GPS Fishing Bait Boat, illustrating their intended use together.

5.3 LCD Screen Display

The LCD screen provides real-time operational data:

- **Distance:** Shows the current distance of the bait boat from your position.
- **Direction:** Indicates the boat's heading.
- **Positioning Points:** Displays saved GPS points for precise bait dropping.
- **Battery Life:** Shows the remaining battery charge for both the remote control and the bait boat.
- **Light Status:** Indicates the status of the bait boat's lights.

5.4 Intelligent Cruise Control System

The remote control features an intelligent cruise control system to simplify navigation. To activate cruise mode, press the designated button (refer to the button layout on your remote, typically labeled or indicated by an icon). Once activated, the boat will maintain a set course, freeing your hands for other tasks.

INTELLIGENT CRUISE CONTROL SYSTEM, FREE YOUR HANDS

Note: The fishing boat is not included



Figure 5.2: A visual representation of the intelligent cruise control system, showing the remote control in use with the bait boat on water, and an inset highlighting the button to enter cruise mode.

5.5 Signal Range

The remote control maintains a strong and stable signal with the V020 GPS Fishing Bait Boat up to a distance of 400-500 meters. Operating beyond this range may result in signal loss and loss of control over the bait boat.

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Do not use harsh chemicals or abrasive cleaners.

6.2 Storage

When not in use for extended periods, remove the batteries from the remote control to prevent leakage and corrosion. Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

6.3 Battery Care

Always use fresh, high-quality AA batteries. If the remote control's battery indicator shows low power, replace all four batteries simultaneously. Do not mix old and new batteries or different types of batteries.

7. TROUBLESHOOTING

- **Remote Control Not Powering On:**
 - Check if batteries are installed correctly with proper polarity.
 - Replace with fresh batteries.
 - Ensure the power switch is fully in the 'ON' position.
- **No Signal/Loss of Control:**
 - Ensure the bait boat is powered on and within the 400-500 meter operating range.
 - Check for any obstructions between the remote control and the bait boat.
 - Verify both the remote control and bait boat batteries are sufficiently charged.
- **LCD Screen Not Displaying Information:**
 - Ensure the remote control is powered on.
 - Check battery levels.
 - If the issue persists, contact customer support.

8. SPECIFICATIONS

Brand	Irfora
Model Number	LAKUSY292998
Material	Plastic
Color	Black
Product Dimensions	6.69 x 6.3 x 2.36 inches (16.9 x 15.2 x 5.5 cm)
Weight	7.1 oz (201g)
Power Source	4 x AA Batteries (not included)
Signal Range	400-500 meters
Compatible With	V020 GPS Fishing Bait Boats

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the product packaging or contact your retailer. For technical support, troubleshooting assistance, or warranty claims, please contact Irfora customer service through the retailer where the product was purchased. Please have your model number (LAKUSY292998) and purchase information ready when contacting support.

