



[Manuals.plus](#) /

> [JOYMOR](#) /

> JOYMOR Kids Play Kitchen Set (Model WPK1WHS) Instruction Manual

JOYMOR WPK1WHS

JOYMOR Kids Play Kitchen Set (Model WPK1WHS) Instruction Manual

Model: WPK1WHS | Brand: JOYMOR

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, safe operation, and maintenance of your JOYMOR Kids Play Kitchen Set. Designed for children aged 3 and up, this wooden play kitchen offers a realistic and interactive experience, encouraging imaginative play and skill development.



Image 1.1: The JOYMOR Kids Play Kitchen Set, featuring a cream and gold design.

2. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembly and use. Keep this manual for future reference.

- **Recommended Age:** Suitable for children 3 years and up.
- **Material Safety:** Constructed from high-quality, safe materials with smooth edges to prevent injuries.
- **Stable Placement:** Ensure the kitchen set is placed on a flat, stable surface to prevent tipping.
- **Adult Supervision:** Always supervise children during play.
- **Small Parts:** Some accessories may be small. Keep them away from very young children to avoid choking hazards.

Design For Safety & Stability

 Perfect Weight Distribution

 Premium Safety Materials



Smooth Edges

Stable Construction

Rigorous Safety Testing

Image 2.1: Illustration of the play kitchen's design for safety and stability, highlighting smooth edges and stable construction.

3. WHAT'S INCLUDED

Verify that all components are present before beginning assembly:

- 1 x Kids Kitchen Playset (main unit)
- 1 x Tool Kits (for assembly)
- 1 x Instruction Manual (this document)
- Various play kitchen accessories (e.g., pots, pans, utensils, coffee maker components, as depicted in product images).

Outstanding Play Kitchen Sets

JOYMOR

Cute Design & Classic Wood Finish

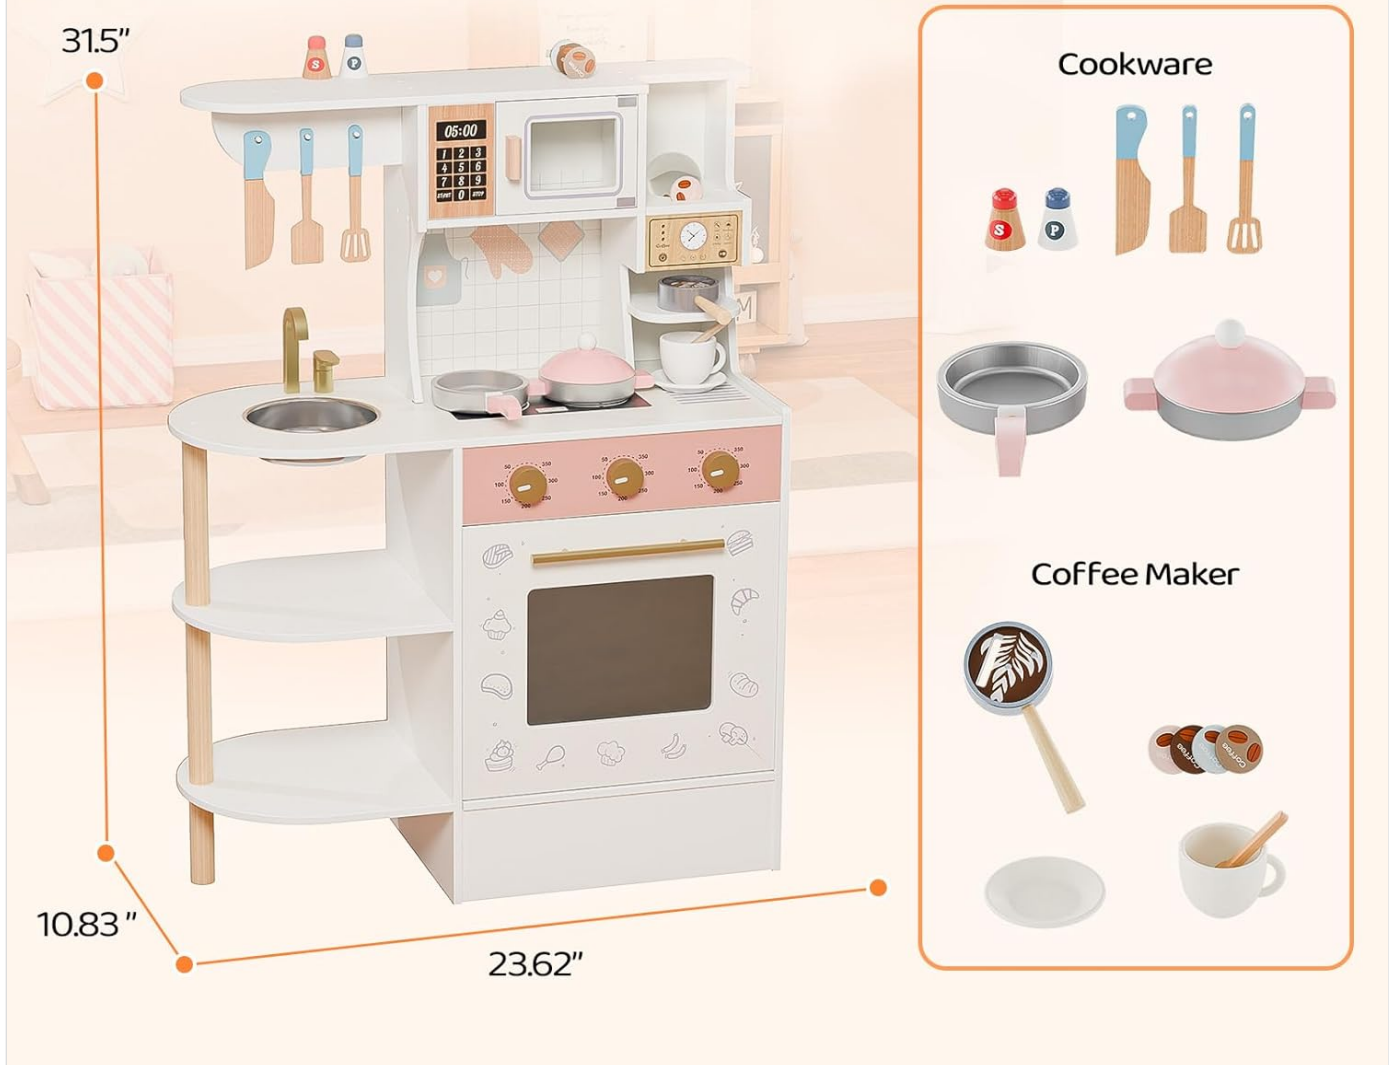


Image 3.1: Overview of the play kitchen set and included accessories such as cookware and coffee maker parts.

4. SETUP AND ASSEMBLY

Assembly of the JOYMOR Kids Play Kitchen Set is required. Please follow the detailed step-by-step instructions provided in the separate assembly guide included in your package. It is recommended to have a clear, open space for assembly.

1. Unpack all components and verify against the parts list in the assembly guide.
2. Use the provided tool kit for assembly. A power drill may expedite the process, but exercise caution to avoid overtightening screws.
3. Follow the diagrams carefully. Some steps may require attention to detail.
4. Ensure all screws and fasteners are securely tightened before allowing children to play.

Note: Some users have reported that the assembly instructions can be challenging. Take your time and refer to the diagrams closely.

5. OPERATING INSTRUCTIONS AND FEATURES

The JOYMOR Kids Play Kitchen Set is designed for interactive pretend play. Explore the various features:

- **Oven:** Features an opening door for pretend baking.
- **Stovetop:** Includes realistic turning knobs and a designated area for play cookware.
- **Kitchen Sink:** A removable sink basin and faucet for imaginative washing up.
- **Coffee Maker:** An integrated coffee maker for brewing pretend beverages.
- **Storage:** Equipped with hook storage for utensils and shelves for organizing play food and accessories.



Image 5.1: Detailed view of the play kitchen's features, including the oven, stovetop, coffee maker, sink, and various storage options.

Interactive Toy Kitchen



Image 5.2: Close-up of interactive elements such as the coffee machine and recyclable storage area.

Enhance Play Experience



Image 5.3: A child engaging with the simulation sink and mimicking microwave operation, demonstrating interactive play.

Pretend Play Kitchen With Friends



Image 5.4: A child enjoying pretend play with the kitchen set, illustrating its interactive nature.

6. MAINTENANCE AND CARE

To ensure the longevity and cleanliness of your JOYMOR Kids Play Kitchen Set, follow these care guidelines:

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Dry immediately after cleaning to prevent moisture damage to the wood.
- **Storage:** Store in a dry environment, away from direct sunlight or extreme temperatures.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten as needed.

7. TROUBLESHOOTING

If you encounter any issues with your play kitchen set, refer to the following common solutions:

Problem	Possible Cause	Solution
Parts do not fit during assembly.	Incorrect orientation of parts or misidentification of components.	Double-check the assembly diagrams and part numbers in the instruction guide. Ensure parts are oriented correctly.
Set feels wobbly after assembly.	Screws or fasteners are not fully tightened.	Carefully re-tighten all screws and connections. Ensure the set is on a level surface.
Faucet or small accessories detach easily.	Normal wear and tear or vigorous play.	Reattach the part. If it continues to detach, consider using a small amount of child-safe adhesive if appropriate, or contact customer support for replacement parts.

8. SPECIFICATIONS

Feature	Detail
Model Number	WPK1WHS
Product Dimensions	23.62 x 31.5 x 10.83 inches
Item Weight	22.6 pounds
Recommended Age	3 years and up
Manufacturer	JOYMOR

Outstanding Play Kitchen Sets



Cute Design & Classic Wood Finish



Image 8.1: Visual representation of the play kitchen's dimensions.

9. WARRANTY AND SUPPORT

For warranty information, replacement parts, or any other inquiries, please contact JOYMOR customer support. Refer to the contact information provided on the product packaging or the official JOYMOR website.

We are committed to providing a positive play experience for your child.