

## Tiskgg 85EN-WALL

# Tiskgg 33.46" Tall Fireproof Wall Safe Instruction Manual

Model: 85EN-WALL

## 1. INTRODUCTION

---

Thank you for choosing the Tiskgg 33.46" Tall Fireproof Wall Safe. This manual provides essential information for the safe and effective installation, operation, and maintenance of your new wall safe. Please read this manual thoroughly before use and retain it for future reference.

This wall safe is designed to provide secure storage for your valuables, including money, jewelry, documents, and passports. Its robust construction and design allow for discreet installation between standard 16-inch on-center wall studs.

## 2. SAFETY INFORMATION

---

Always adhere to the following safety guidelines to prevent injury or damage to the product and your property.

- **Keep Emergency Keys Separate:** Never store the emergency keys inside the safe. Store them in a secure location away from the safe and out of reach of children.
- **Child Safety:** To prevent unauthorized access and potential hazards, ensure the safe is installed securely and its contents are inaccessible to children.
- **Proper Installation:** Ensure the safe is securely mounted to wall studs as instructed to prevent it from falling or being easily removed.
- **Heavy Item:** The safe weighs approximately 38.7 pounds. Exercise caution and seek assistance when lifting or moving the safe to avoid injury.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears to ensure continuous operation of the electronic lock.

# KEEP YOUR HOME SAFE



Figure 2.1: Emphasizing child safety by securing the wall safe and its contents away from children.

## 3. PRODUCT FEATURES

The Tiskgg Wall Safe offers advanced security and convenient features:

- **Fireproof Design:** Engineered to provide enhanced protection against fire, safeguarding your important documents and valuables.
- **Heavy Duty Steel Construction:** Constructed from durable heavy-duty alloy steel with a scratch-resistant black powder coat finish, offering resistance against prying, drilling, and collision.
- **Electronic Combination Lock:** Features a reliable electronic keypad for secure access, complemented by an emergency key override.
- **Hidden Compartment:** A discreet "false bottom" provides an additional secret compartment for extra security for small, valuable items.
- **Removable Shelves:** Includes three removable shelves and key hooks, allowing for customizable internal organization to suit various item sizes.

- **Flush Mount Design:** Designed to fit seamlessly between 16-inch on-center wall studs, enabling concealment behind artwork or furniture.



Figure 3.1: Overview of the Tiskgg wall safe, showcasing its secure exterior and organized interior.

# FIREPROOF WALL SAFE



Figure 3.2: Visual representation of the safe's fireproof and anti-theft capabilities.

# REMOVABLE SHELF

The shelf can be installed or removed according to needs

With Shelf



Without Shelf



Figure 3.3: The removable shelf feature allows for customized storage configurations.

# WALL SAFES BETWEEN THE STUDS



Figure 3.4: Exterior dimensions and the location of the hidden compartment.

## 4. PACKAGE CONTENTS

Upon opening your package, please verify that all the following components are included:

- Tiskgg 33.46" Tall Fireproof Wall Safe
- Mounting Accessories (expansion bolts)
- Emergency Keys (2)
- Removable Shelves (3)
- Instruction Manual (this document)

## 5. INSTALLATION

The Tiskgg wall safe is designed for flush mounting between standard 16-inch on-center wall studs. Professional installation is recommended.

## 5.1 Tools Required

- Stud finder
- Level
- Measuring tape
- Pencil
- Drill with appropriate drill bits
- Screwdriver or wrench for expansion bolts
- Utility knife or drywall saw

## 5.2 Installation Steps

1. **Locate Wall Studs:** Use a stud finder to locate two adjacent wall studs that are 16 inches on-center. Mark the center of each stud.
2. **Measure and Mark Opening:** Based on the safe's exterior dimensions (33.46" H x 14.57" W x 3.93" D), mark the precise opening on the wall between the studs. Ensure the marked area is level and plumb. The width of 14.57" is critical for fitting between 16" on-center studs.
3. **Cut Wall Opening:** Carefully cut out the marked section of drywall using a utility knife or drywall saw. Ensure the cut is clean and precise.
4. **Insert Safe:** Gently slide the safe into the prepared wall opening. It should fit snugly between the studs.
5. **Secure Safe:** Use the provided expansion bolts to secure the safe to the wall studs through the pre-drilled holes inside the safe. Tighten all bolts firmly to ensure the safe is stable and flush with the wall surface.
6. **Concealment:** For optimal concealment, consider placing framed artwork or a mirror over the installed safe.

# HIDDEN WALL SAFE

You can bolt safe to the wall with expansions bolts

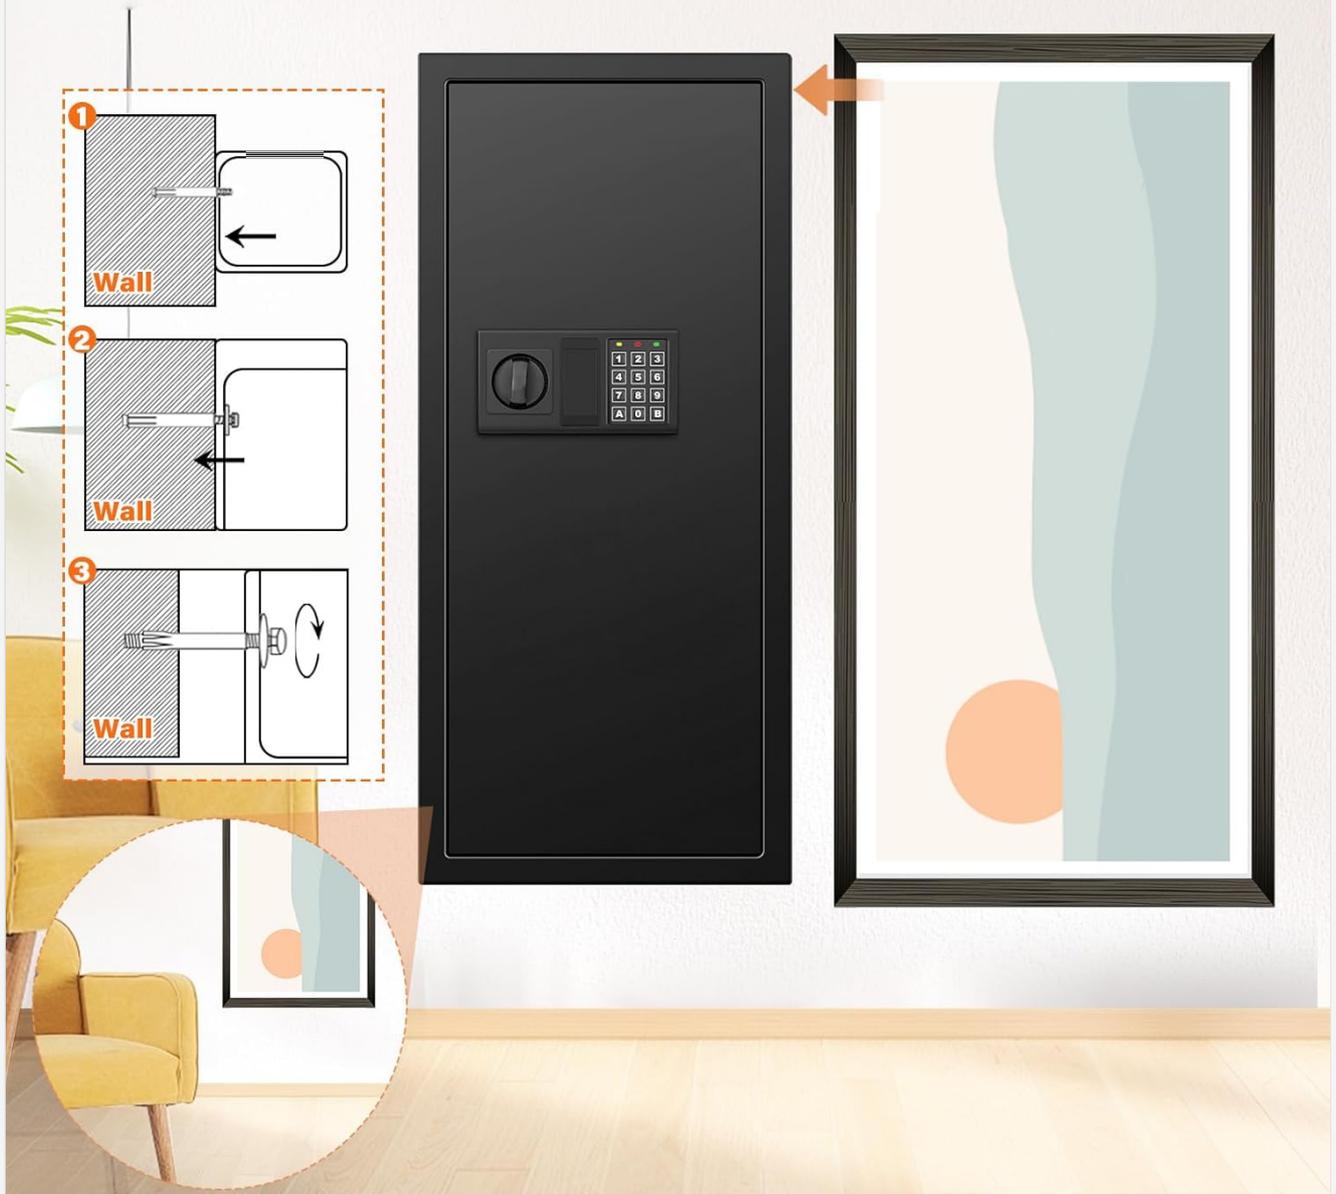


Figure 5.1: Step-by-step guide for wall-mounted installation.

## HOW TO USE THE WALL SAFE BETTER



Figure 5.2: Example of expansion bolts used for secure mounting.

## 6. OPERATION

## 6.1 Initial Opening (First Use)

When you first receive the safe, it will be locked. Use the emergency key to open it:

1. Locate the badge or cover plate on the electronic keypad.
2. Remove the badge to expose the emergency keyhole.
3. Insert the emergency key into the keyhole and turn it clockwise.
4. While the key is turned, rotate the turning knob clockwise to open the safe door.
5. Once open, remove the emergency key and store it in a secure location outside the safe.

## 6.2 Setting Your Personal Combination

It is crucial to set your personal combination immediately after the first opening. Refer to the specific instructions provided with the safe for detailed steps on programming the electronic lock. Generally, the process involves pressing a reset button inside the safe, entering your desired code, and confirming it.

**Important: Do not keep the emergency keys inside the safe after setting your combination.**

## 6.3 Opening with Combination Lock

1. Enter your programmed personal combination on the keypad.
2. If the code is correct, you will hear a confirmation sound, and the lock will disengage.
3. Within a few seconds, rotate the turning knob clockwise to open the safe door.

## 6.4 Using the Hidden Compartment

The safe features a "false bottom" that acts as a hidden compartment:

1. Open the safe door.
2. Locate the bottom panel inside the safe.
3. Gently press down on one side of the panel; it should pivot or lift to reveal the secret compartment underneath.
4. Store small, highly valuable items here for additional security.


# COMBINATION LOCK SAFE BOX



○○○  
○○○ Password  
○○○



+

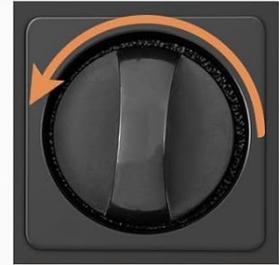

Key



+



Attention: Don't keep the emergency keys in the safe

Figure 6.1: Methods for opening the safe: electronic combination and emergency key.

# SECURITY WALL SAFE



The "false bottom" provides a hidden compartment to give additional security for items as cash.

Figure 6.2: Accessing the hidden compartment at the bottom of the safe.

## 7. MAINTENANCE

To ensure the longevity and proper functioning of your Tiskgg wall safe, follow these maintenance guidelines:

- **Cleaning:** Wipe the exterior and interior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Battery Replacement:** The electronic lock requires batteries (not included). Replace them when the low battery indicator light illuminates or if the keypad becomes unresponsive. Typically, 4 AA batteries are required.
- **Lock Mechanism:** Do not lubricate the lock mechanism. If the lock feels stiff, contact customer support.
- **Door Hinges:** Periodically check the door hinges for any signs of wear or looseness. Tighten screws if necessary.

## 8. TROUBLESHOOTING

If you encounter issues with your Tiskgg wall safe, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Safe does not open with combination.	Incorrect code entered; Low batteries; Keypad malfunction.	Re-enter code carefully. Replace batteries. Use emergency key to open, then re-program code. If issue persists, contact support.
Difficulty programming the electronic lock.	Steps not followed precisely; Timing issue.	Review the programming instructions carefully. Ensure each step is completed within the specified time frame. Try again with fresh batteries.

Problem	Possible Cause	Solution
Safe door does not close properly.	Obstruction in door frame; Misaligned hinges.	Check for any items blocking the door or locking bolts. Inspect hinges for damage or looseness.
Middle shelf space is limited by lock mechanism.	This is a design characteristic due to the internal lock housing.	Utilize the removable shelves to adjust spacing for other items. Store smaller, flatter items on the middle shelf, or remove it if larger items are needed in that section.
Safe feels loose after installation.	Mounting bolts not fully tightened; Improper stud attachment.	Re-tighten all mounting bolts. Ensure the safe is securely fastened to the wall studs. If necessary, re-evaluate the installation.

## 9. SPECIFICATIONS

Feature	Detail
Brand	Tiskgg
Model Number	85EN-WALL
Exterior Dimensions (H x W x D)	33.46" x 14.57" x 3.93" (85cm x 37cm x 10cm)
Weight	38.7 pounds
Material	Alloy Steel
Color	Black
Lock Type	Electronic Combination Lock
Mounting Type	Wall Mount (between 16" on-center studs)
Shelves	3 Removable Shelves
Batteries Required	Yes (not included)

## 10. WARRANTY AND SUPPORT

Tiskgg is committed to providing high-quality products and customer satisfaction. If you have any questions, concerns, or require assistance with your wall safe, please do not hesitate to contact our customer service team. We offer 24-hour online service to address your inquiries and provide support. Your satisfaction is our primary aim. For support, please refer to the contact information provided on your purchase receipt or the official Tiskgg website.