



[Manuals.plus](#) /

> [JOYMOR](#) /

> JOYMOR Kids Wooden Play Kitchen Sets Instruction Manual

JOYMOR B0DM22F4S3

JOYMOR Kids Wooden Play Kitchen Sets Instruction Manual

Model: B0DM22F4S3

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Recommended Age:** This play kitchen is suitable for children aged 3 years and up.
- **Adult Assembly Required:** Assembly should be performed by an adult.
- **Supervision:** Children should be supervised during play to ensure safe use.
- **Choking Hazard:** Contains small parts before assembly. Keep unassembled parts away from young children.
- **Stability:** Ensure the play kitchen is assembled correctly and placed on a flat, stable surface to prevent tipping.
- **Cleaning:** Use a damp cloth for cleaning. Avoid harsh chemicals.
- **No Warming Applicable:** This toy does not have any heating elements.

Design For Safety & Stability

Perfect Weight Distribution

Premium Safety Materials



Smooth Edges



Stable Construction



Rigorous Safety Testing

Figure 1: Design for Safety and Stability. The play kitchen features smooth edges and a stable construction for safe play.

2. PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact JOYMOR customer service.

- 1 x JOYMOR Kids Wooden Play Kitchen Playset (main components)
- 1 x Tool Kit (assembly hardware and basic tools)
- 1 x Instruction Manual (this document)
- Assorted Play Kitchen Accessories (cookware, ice maker components)

Outstanding Play Kitchen Sets

Cute Design & Classic Wood Finish



Figure 2: Overview of the Play Kitchen and Included Accessories. This image illustrates the main components and some of the play items.

3. ASSEMBLY INSTRUCTIONS

Assembly of the JOYMOR Kids Wooden Play Kitchen requires adult supervision and careful attention to the provided diagrams. It is recommended to have a Phillips head screwdriver and potentially a power drill (on low torque settings) for faster assembly, though a manual screwdriver is sufficient.

- 1. Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Identify each part by comparing it to the parts list in the separate assembly manual.
- 2. Review Diagrams:** Thoroughly review the step-by-step diagrams in the dedicated assembly instruction booklet. Pay close attention to the orientation of each piece.
- 3. Assemble Base Structure:** Begin by assembling the main base and side panels according to the diagrams. Ensure all screws are tightened securely but do not overtighten.
- 4. Install Features:** Attach the refrigerator, oven, stovetop, sink, and storage shelves as indicated in the instructions.

5. **Attach Accessories:** Secure any hooks, knobs, and other decorative or functional accessories.
6. **Final Check:** Once assembled, ensure all connections are secure and the structure is stable. Check for any loose parts or sharp edges.



Figure 3: Assembled Play Kitchen. This image shows the complete product after successful assembly.

4. OPERATING INSTRUCTIONS

The JOYMOR Kids Wooden Play Kitchen is designed for imaginative play, mimicking real kitchen functions. Here's how to interact with its various features:

- **Refrigerator:** Open the refrigerator door to store play food items. The ice maker dispenser allows for pretend ice cube dispensing.
- **Oven:** The oven door opens and closes. Use the turning knobs above the oven to simulate temperature control.
- **Stovetop:** Place play pots and pans on the stovetop burners. The knobs can be turned to simulate cooking.
- **Kitchen Sink:** The sink basin can be used for pretend washing of dishes. The faucet and handles are fixed for

imaginative play.

- **Storage:** Utilize the hook storage for hanging utensils and the shelves for organizing play kitchen accessories.

Experience Modern Kitchen Use



Oven



Ice Maker



Stovetop



Hook Storage



Refrigerators



Kitchen Sink



Locker Storage



Storage Shelf



Figure 4: Interactive Play. A child demonstrates using the oven and other features of the play kitchen.

Interactive Toy Kitchen

JOYMOR



Simulated Refrigerator



Knowing Kitchenware



Make Ice Cubes

Figure 5: Modern Kitchen Features. An overview of the various functional areas within the play kitchen.

5. MAINTENANCE AND CARE

Proper care will extend the life of your JOYMOR Kids Wooden Play Kitchen.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn marks, use a mild soap solution and immediately wipe dry. Avoid abrasive cleaners or harsh chemicals.
- **Avoid Moisture:** Do not immerse any part of the play kitchen in water. Prolonged exposure to moisture can damage the wood.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperatures, which can cause warping or fading.
- **Regular Inspection:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain structural integrity. Inspect for any signs of wear, splintering, or damage.

Organized Chef's Corner



Figure 6: Organized Play Area. This image highlights the sink and storage shelves, emphasizing the importance of keeping the play kitchen tidy.

6. TROUBLESHOOTING

If you encounter any issues with your JOYMOR Kids Wooden Play Kitchen, please refer to the following common solutions:

Problem	Possible Cause	Solution
Missing or Damaged Parts	Packaging error or transit damage.	Immediately contact JOYMOR customer service with your purchase details and a description of the missing/damaged parts.

Problem	Possible Cause	Solution
Difficulty During Assembly	Incorrect part orientation, misinterpretation of diagrams, or insufficient tools.	Review the assembly instruction booklet carefully, paying close attention to part numbers and orientations. Ensure you are using the correct tools. Do not force parts together.
Play Kitchen Feels Unstable	Screws not fully tightened, uneven assembly, or placement on an uneven surface.	Check all screws and tighten them securely. Ensure the play kitchen is on a flat, level surface. Re-check assembly steps if necessary.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	46.85 x 12.68 x 31.85 inches (L x W x H)
Item Weight	46.2 pounds
Model Number (ASIN)	B0DM22F4S3
Manufacturer Recommended Age	3 years and up
Brand	JOYMOR
Material	Wood

8. WARRANTY AND CUSTOMER SUPPORT

For any questions, concerns, or assistance with your JOYMOR Kids Wooden Play Kitchen, please contact JOYMOR customer service directly. Please have your purchase information and model number (ASIN: B0DM22F4S3) ready when contacting support.

While specific warranty details are not provided in this manual, JOYMOR is committed to customer satisfaction. Please refer to your purchase documentation or the seller's website for any applicable warranty information.

You can often find support contact information on the official [JOYMOR brand page](#) or through your original point of purchase.

© 2024 JOYMOR. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.