

Craftersmark Picture Light

Craftersmark 16-inch Gold Battery Operated Picture Light User Manual

MODEL: PICTURE LIGHT

Introduction

Thank you for choosing the Craftersmark 16-inch Gold Battery Operated Picture Light. This manual provides detailed instructions for the installation, operation, and maintenance of your new picture light. Please read this manual thoroughly before use to ensure proper function and longevity of the product.

What's in the Box

- 1 x Craftersmark 16-inch Gold Picture Light
- 1 x Remote Control
- 1 x Mounting Hardware Set (screws, anchors)
- 1 x USB-C Cable
- 1 x Instruction Manual (this document)

Key Features

- **Wide Lighting Range:** Equipped with a 16-inch light bar and unique focusing cup design, providing a broad illumination range suitable for artworks up to 40 inches wide and 80 inches high.
- **Adjustable Brightness & Color Temperature:** Features 36 high-quality LED beads with a maximum brightness of 350 lumens. Offers three color temperature options: 3000K (warm yellow), 5000K (natural white), and 6500K (cool white).
- **Long-lasting Rechargeable Battery:** Built-in 5000mAh rechargeable battery provides approximately 10-13 hours of lighting at maximum illumination on a single charge.
- **Dual Control Options:** Operate the light using either the integrated touch buttons on the light body or the included remote control.
- **Magnetic Installation & Flexible Adjustment:** Designed with a magnetic suction structure for easy removal of the light bar for charging. An adjustable metal gooseneck hook allows for 360° rotation to

direct light precisely.

- **High Color Rendering Index (CRI 95+):** Ensures accurate reproduction of artwork colors, enhancing visual appeal.

Easy installation

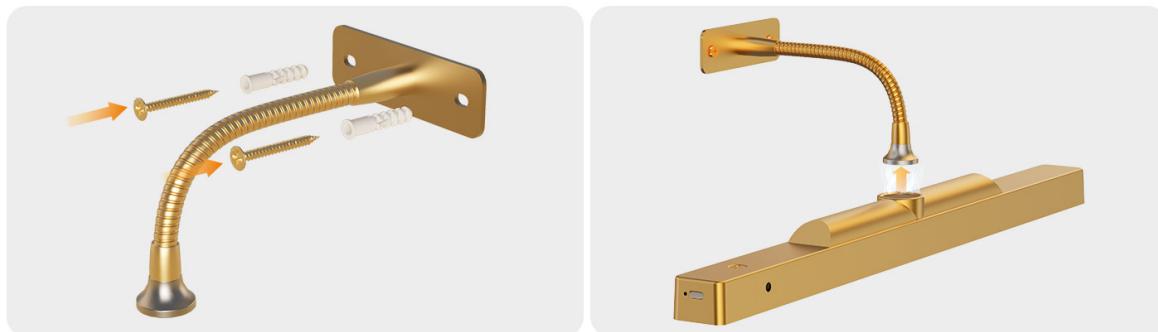


Image: The picture light provides a wide illumination range, effectively lighting large artworks.

3 Color Temperature



Image: The light offers three distinct color temperatures to suit different preferences and artwork types.

350LM High Bright

3 Brightness Adjustable



Image: Adjust the brightness to your desired level for optimal display.

Others



Image: High CRI 95+ ensures true color representation of your art.

Setup and Installation

Follow these steps to install your Craftersmark Picture Light:

- 1. Prepare the Mounting Location:** Choose a suitable location above your artwork. Ensure the surface is clean and dry.
- 2. Mark Drill Holes:** Hold the mounting bracket against the wall at the desired height. Use a pencil to mark the positions for the drill holes.
- 3. Drill Holes:** Drill pilot holes at the marked positions. If installing into drywall, insert the provided wall anchors.
- 4. Attach Mounting Bracket:** Secure the mounting bracket to the wall using the provided screws.
- 5. Attach Gooseneck:** Screw the flexible gooseneck arm into the mounting bracket.
- 6. Attach Light Bar:** The light bar attaches magnetically to the end of the gooseneck. Simply align the magnetic connection points and let it snap into place.


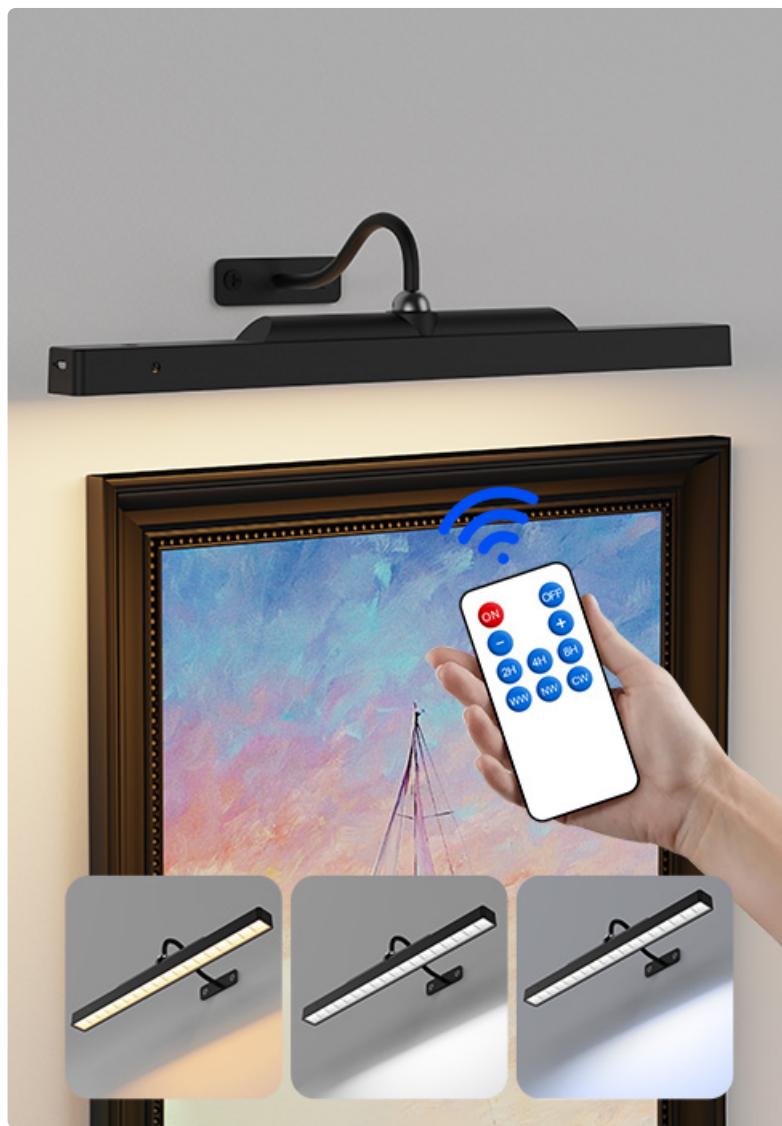


Image: Simple two-step installation process.



Magnetic Design

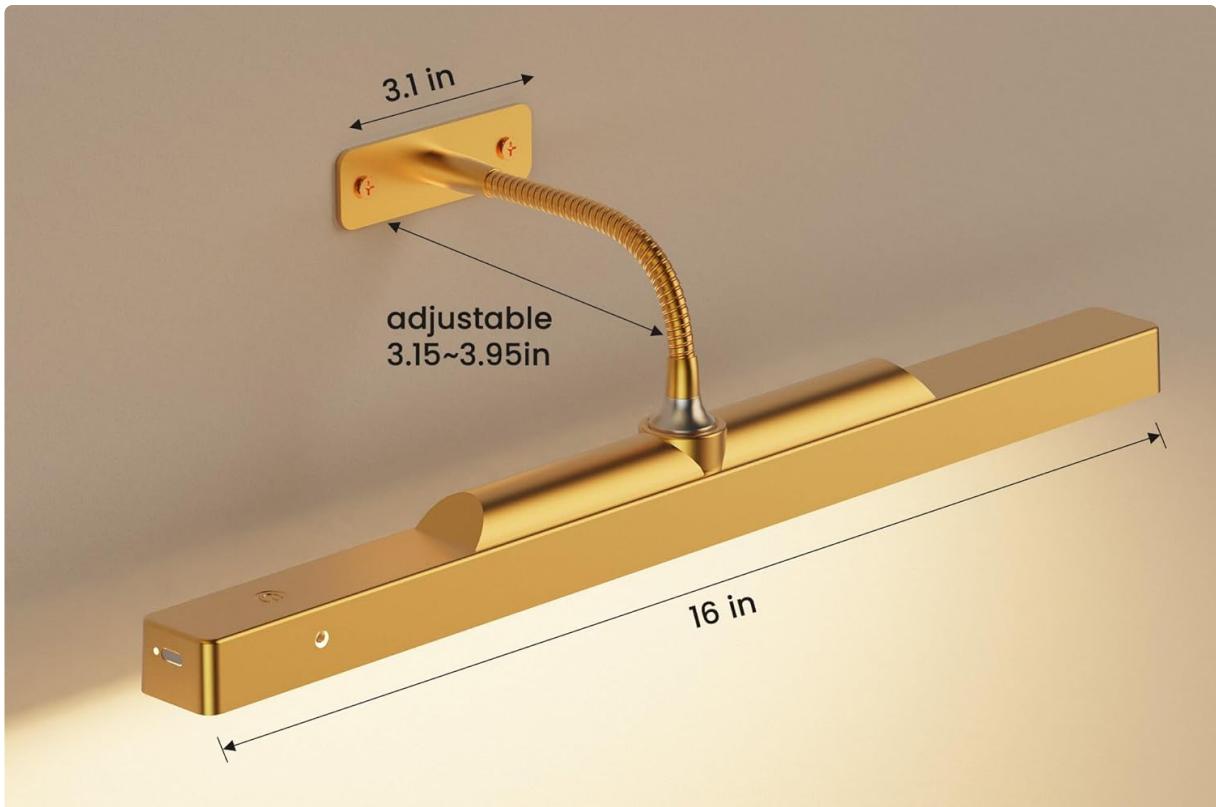

360° Rotation



Easy to Install

Image: The magnetic design allows for easy removal of the light bar for charging.

Operating Instructions

Your picture light offers both touch and remote control for convenience.

Touch Control

- **Power On/Off:** Lightly touch the power button on the light bar to turn the light on or off.
- **Adjust Color Temperature:** While the light is on, touch the color temperature button to cycle through 3000K (Warm White), 5000K (Natural White), and 6500K (Cool White).

Remote Control

The remote control provides comprehensive functionality:

- **ON/OFF:** Press the 'ON' or 'OFF' button to power the light.
- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease the brightness.
- **Color Temperature Selection:** Press 'WW' for Warm White (3000K), 'NW' for Natural White (5000K), or 'CW' for Cool White (6500K).
- **Timer Setting:** Set the light to automatically turn off after a specified duration by pressing '2H' (2 hours), '4H' (4 hours), or '8H' (8 hours).

Image: Control your picture light conveniently with the remote.

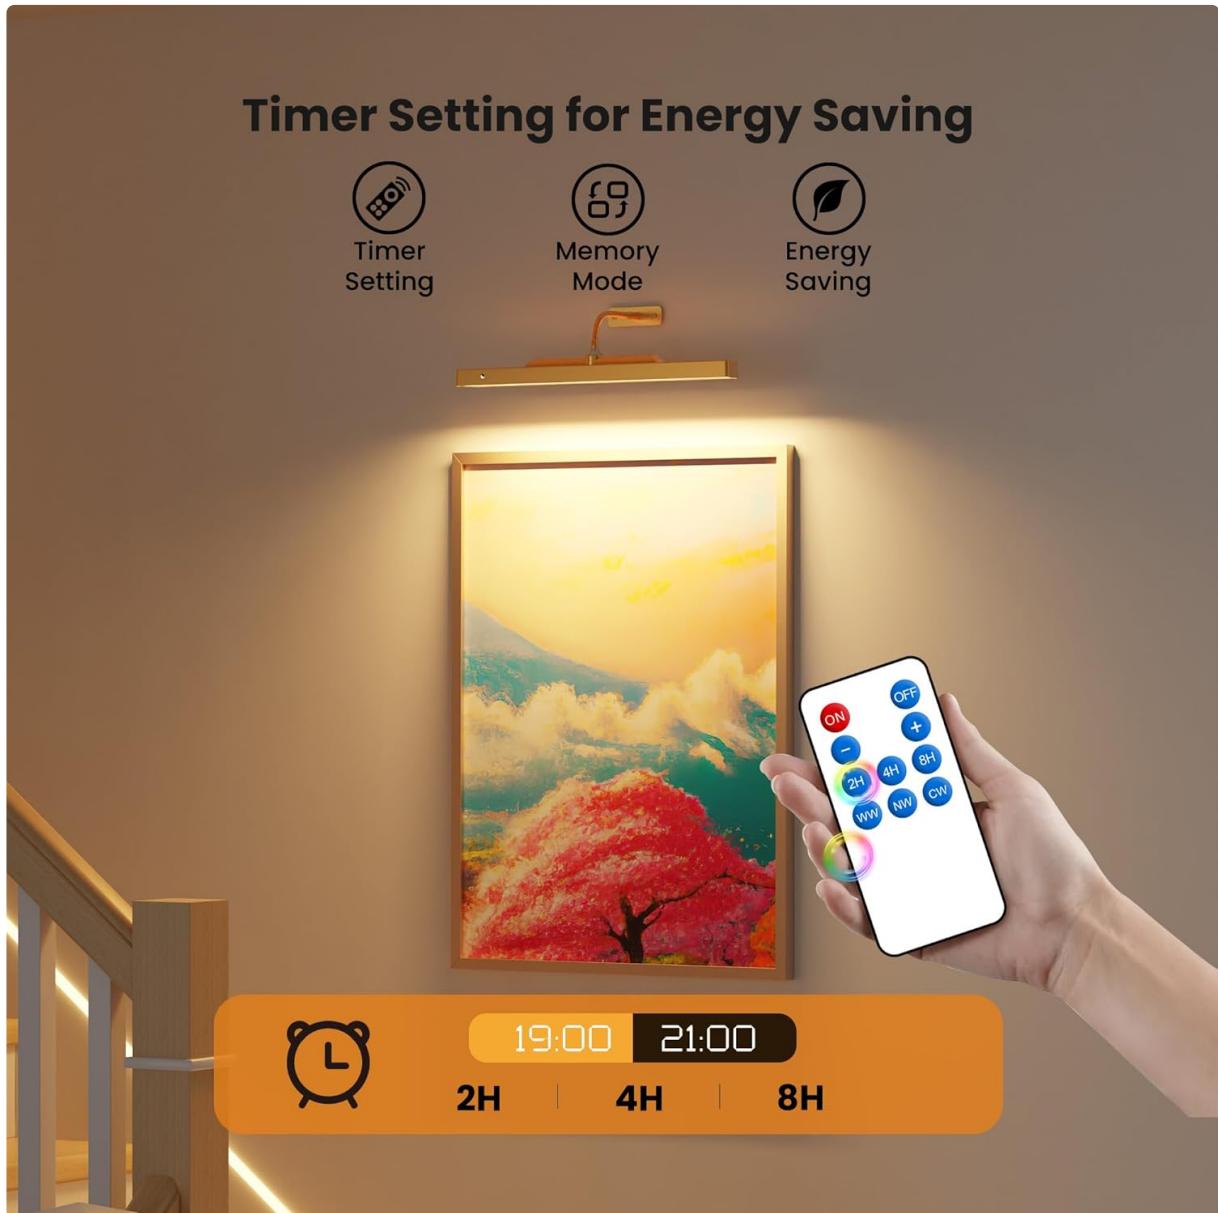


Image: Utilize the timer function for energy saving and convenience.

Adjusting Light Direction

The flexible gooseneck allows for 360° rotation. Gently bend and position the light bar to achieve the desired illumination angle for your artwork.

Flexible and Adjustable



Image: The flexible gooseneck allows for precise light positioning.

Your browser does not support the video tag.

Video: Demonstrates the flexible and adjustable nature of the picture light, allowing for optimal positioning.

Charging the Battery

The picture light is equipped with a 5000mAh rechargeable battery. When the battery is low, the light indicator will signal the need for charging.

- Remove Light Bar:** Gently detach the light bar from the magnetic gooseneck for easy access to the charging port.
- Connect USB-C Cable:** Plug the provided USB-C cable into the charging port on the light bar and connect the other end to a suitable USB power adapter (not included).
- Charging Indicator:** The indicator light will show the charging status. It will typically turn green or off when fully charged.
- Reattach Light Bar:** Once fully charged, reattach the light bar to the magnetic gooseneck.

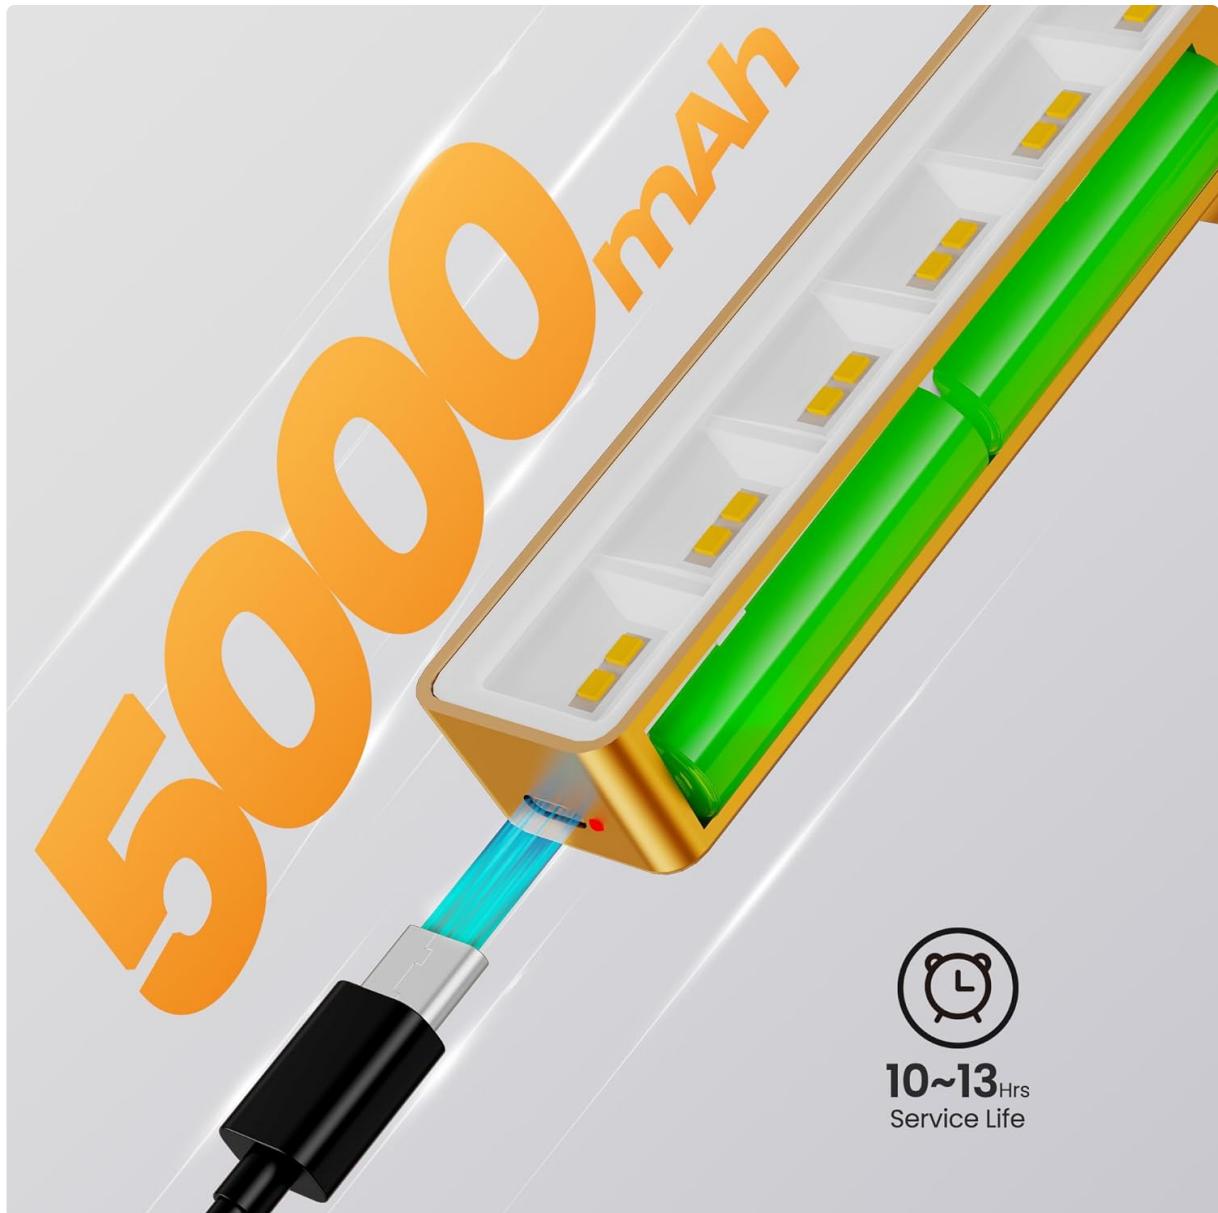


Image: The 5000mAh battery provides extended use and is easily rechargeable via USB-C.

Maintenance

- Cleaning:** Use a soft, dry cloth to wipe the surface of the light. Do not use abrasive cleaners or solvents, as they may damage the finish.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the light regularly, even if not in constant use.
- Storage:** If storing the light for an extended period, ensure it is fully charged and store it in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted.	Charge the light using the provided USB-C cable.

Problem	Possible Cause	Solution
Remote control is not working.	Remote battery is low or depleted. Obstruction between remote and light.	Replace the remote control battery. Ensure a clear line of sight to the light's receiver.
Light turns off unexpectedly.	Timer function activated. Low battery.	Check if a timer was set. Recharge the battery.
Light bar detaches easily from gooseneck.	Improper attachment or excessive force during adjustment.	Ensure the light bar is securely seated on the magnetic connection. Adjust the gooseneck gently.

Specifications

Feature	Detail
Brand	Craftersmark
Model Name	Picture Light
Color	Gold
Material	Metal, Plastic
Product Dimensions	16"L x 1.18"W x 0.9"H
Power Source	Battery Powered
Battery Type	2 Lithium Ion batteries (included)
Battery Capacity	5000mAh
Light Source Type	LED
Number of Light Sources	36
Brightness	350 Lumen (Max)
Color Temperature	3000K, 5000K, 6500K (Adjustable)
Control Method	Remote, Touch
Special Features	Adjustable Color Temperature, Dimmable, Remote Control, Timer Setting
Installation Type	Surface Mount (Magnetic)
Indoor/Outdoor Usage	Indoor
Item Weight	14 ounces

Warranty and Support

This Craftersmark Picture Light comes with a Limited Warranty. For specific details regarding warranty coverage, please refer to the warranty information provided with your purchase or contact Craftersmark customer support.

If you encounter any issues or have questions not covered in this manual, please contact our customer support team for assistance.