

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cesun](#) /
- › [Cesun Automatic Bathroom Trash Can User Manual](#)

**Cesun AMZUSIJS01WHT030151**

# Cesun Automatic Motion Sensor Trash Can User Manual

Model: AMZUSIJS01WHT030151

## INTRODUCTION

---

Thank you for choosing the Cesun Automatic Motion Sensor Trash Can. This innovative and stylish trash can is designed to provide a hygienic and convenient waste disposal solution for your home or office. Featuring touchless operation, odor sealing, and a slim, space-saving design, it is perfect for bathrooms, bedrooms, and other compact areas. Please read this manual carefully to ensure proper setup, operation, and maintenance of your new trash can.



Image: The Cesun Automatic Motion Sensor Trash Can, showcasing its sleek cream white design and motion sensor on the lid.

## PRODUCT FEATURES

---

- **Touchless Operation:** Equipped with an infrared motion sensor for hands-free lid opening and closing.
- **Odor-Free Design:** The lid seals tightly to contain odors, maintaining a fresh environment.

- **Space-Saving Slim Profile:** Ideal for tight spaces in bathrooms, bedrooms, and offices.
- **Durable Construction:** Made from robust PP+ABS material with a waterproof design for longevity and easy cleaning.
- **Battery Powered:** Operates on 2 AA batteries (not included) for cordless convenience.



Image: Diagram illustrating key features: Motion Sensor, Odor Control, Narrow Design, Waterproof, and 4 Gallon Capacity.

## SETUP INSTRUCTIONS

---

1. **Unpack the Unit:** Carefully remove all components from the packaging.
  2. **Install Batteries:**
    - Locate the battery compartment on the underside of the lid.
    - Open the battery cover.
    - Insert 2 AA alkaline batteries (not included), ensuring correct polarity (+/-).
    - Close the battery cover securely.
- Video: Official Cesun video demonstrating the simple battery installation and the touchless lid operation.
3. **Place Trash Bag:** Line the inner bucket with a standard 4-gallon trash bag. Ensure the bag is properly seated and does not obstruct the sensor mechanism.
  4. **Attach Lid:** Carefully place the lid onto the main body of the trash can, ensuring it is securely fitted.
  5. **Positioning:** Place the trash can in your desired location. Ensure there is a clear space of at least 15.7 inches (40cm) above the sensor for optimal operation.

## OPERATING INSTRUCTIONS

---

The Cesun Automatic Motion Sensor Trash Can is designed for simple, hands-free operation.

1. **Opening the Lid:** Wave your hand approximately 6-8 inches (15-20 cm) above the motion sensor located on the front of the lid. The lid will automatically open.
2. **Closing the Lid:** The lid will automatically close after 5 seconds of inactivity. If you wish to close it sooner, wave your hand over the sensor again.
3. **Manual Override:** While the unit is powered on, avoid manually opening or closing the lid. If it is accidentally closed manually, allow the sensing system a few moments to reset before using the sensor again.



Image: A visual guide demonstrating the simple wave-to-open and automatic close function of the trash can.

## MAINTENANCE AND CARE

---

Regular cleaning and proper care will ensure the longevity and optimal performance of your Cesun trash can.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, a mild soap solution can be used. Avoid abrasive cleaners or harsh chemicals.
- **Cleaning the Sensor:** Gently clean the motion sensor area with a dry, soft cloth to ensure proper functionality. Do not use wet cloths or cleaning solutions directly on the sensor.
- **Water Exposure:** While the unit features a waterproof design, avoid prolonged exposure to excessive water or submerging any part of the unit.
- **Battery Replacement:** Replace batteries when the lid operation becomes slow or inconsistent. Always use new AA alkaline batteries.
- **Odor Control:** The tight-sealing lid helps contain odors. For persistent odors, ensure trash bags are tied securely and emptied regularly.

 



Image: The trash can demonstrating its waterproof capabilities, with water splashing over the lid.

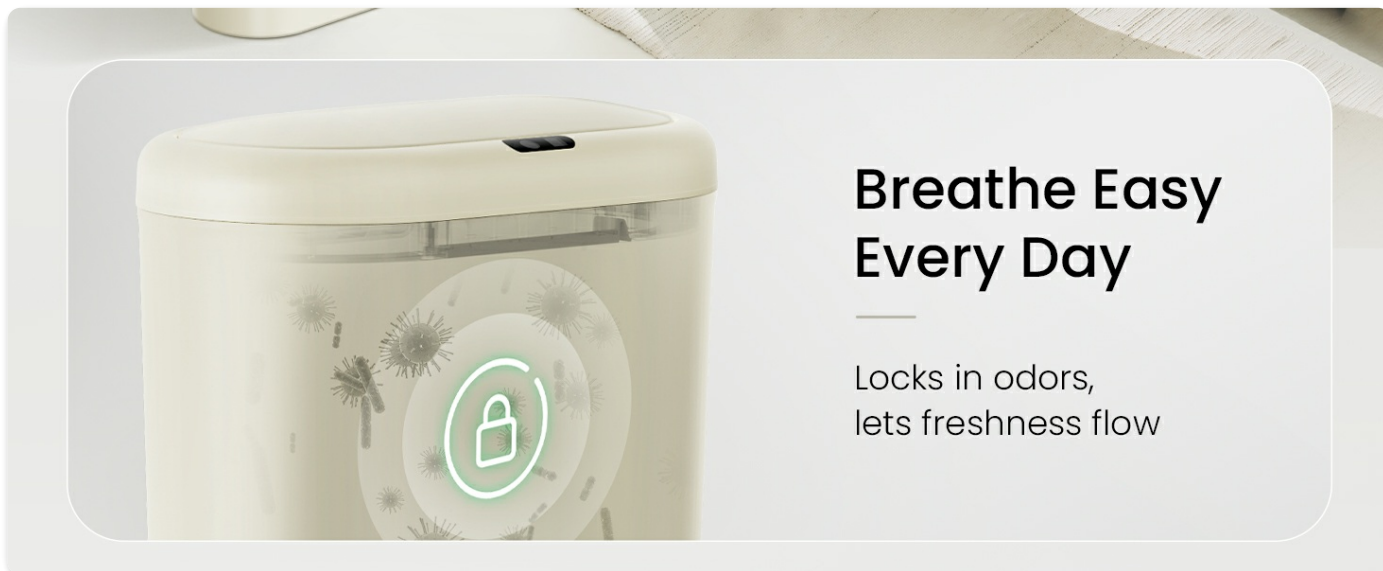

## Breathe Easy Every Day

Locks in odors,  
lets freshness flow

Image: Graphic illustrating the odor-sealing capability of the trash can, keeping the air fresh.

## TROUBLESHOOTING

If you encounter any issues with your Cesun Automatic Motion Sensor Trash Can, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lid does not open or close.	Low or dead batteries; incorrect battery installation; sensor obstruction.	Replace batteries with new AA alkaline batteries, ensuring correct polarity. Clear any obstructions from the sensor area.
Lid opens and closes immediately.	Sensor interference; manual override engaged.	Ensure no objects are continuously in the sensor's range. If manually closed, allow the system to reset for a few seconds before using the sensor.
Blue light flashing.	Indicates the lid is in the process of closing.	Do not attempt to use the sensor while the blue light is flashing. Wait for the light to stop and the lid to fully close before re-engaging the sensor.
Odor is present.	Trash bag not sealed; trash not emptied regularly.	Ensure trash bags are securely tied and emptied frequently.
Lid is noisy during operation.	Mechanism may require lubrication or is obstructed.	Ensure no debris is caught in the lid mechanism. If noise persists, contact customer support.

# Troubleshooting Instructions

## Touchless Motion Sensor Not Working?

### 1. Check the Batteries:

- o ✓ Ensure batteries are installed correctly.
- o ✓ Replace any low-power batteries.

### 2. Blue Light Flashing:

- o × Avoid using the sensor when the blue light is flashing, as the lid is closing.
- o ✓ Wait for the blue light to stop flashing and the lid to fully close before using the sensor again.

### 3. Manual Operation Prohibited:

- o × Do not open or close the lid manually when the unit is powered on.
- o ✓ If manually closed accidentally, allow the sensing system to reset before using it again.

### 4. Placement:

- o × Do not place the unit in or under a cabinet.
- o ✓ Keep a clear area of 15.7inches (40cm) above the unit.

### 5. Environment:

- o × Avoid prolonged exposure of the trash can to water.
- o ✓ Gently clean the sensor with a dry cloth to ensure proper functionality.

Image: A visual summary of troubleshooting tips for the motion sensor trash can.

## SPECIFICATIONS

Feature	Detail
Brand	Cesun
Model Number	AMZUSIJS01WHT030151
Capacity	4 Gallons
Color	Cream White
Material	PP+ABS Plastic
Opening Mechanism	Motion-Sensor (Infrared Induction)
Sensing Distance	Approx. 15.7 inches (40 cm)
Power Source	2 x AA Batteries (not included)
Product Dimensions	12 x 6.77 x 13.7 inches (L x W x H)
Weight	2.25 Pounds
Recommended Use	Indoor (Bathroom, Bedroom, Living Room, Home Office)

# Know Your Trash Can

**Battery Operated**

Requires 2 AA batteries (not included)

**Battery Recommendations**

AA alkaline battery

**Infrared Sensing Distance**

15.7inches (40cm)

**Sensor Modes**

Infrared induction

**Capacity**

4.0 gallons

**Inner Bucket**

Not included

**Material**

Plastic

**Dimensions**

12.0 x 6.9 x 13.4 inches

Image: A detailed overview of the product's technical specifications.

## SAFETY INFORMATION

- Do not immerse the product in water.
- Do not force the lid open or closed manually when the sensor is active, as this may damage the mechanism.
- Keep the sensor area clean and free from obstructions.
- Dispose of batteries responsibly according to local regulations.
- This product is intended for indoor use only.

## WARRANTY AND SUPPORT

For warranty information or technical support, please contact Cesun customer service through the retailer where the product was purchased or visit the official Cesun website. Please have your model number (AMZUSIJS01WHT030151) and purchase details ready when contacting support.