

[Manuals.plus](#) /

› [WLIVE](#) /

› WLIVE Farmhouse 9-Drawer Dresser Instruction Manual

WLIVE ASNG115BL

WLIVE Farmhouse 9-Drawer Dresser Instruction Manual

Brand: WLIVE | **Model:** ASNG115BL

INTRODUCTION

Thank you for choosing the WLIVE Farmhouse 9-Drawer Dresser. This versatile storage organizer is designed to provide ample space and a rustic charm to your bedroom, living room, or hallway. Its robust construction and thoughtful design ensure both functionality and aesthetic appeal.



Image: The WLIVE Farmhouse 9-Drawer Dresser, showcasing its black finish, nine drawers, and overall design.

SAFETY INFORMATION

For the safety of your household, especially children and pets, it is crucial to install the included anti-tipping device. Furniture tip-overs can cause serious or fatal crushing injuries. Always secure the dresser to the wall according to the instructions provided in the assembly manual.

ANTI-TIP LOCK DETAILS



Image: Detailed view of the anti-tipping lock mechanism and its proper installation to prevent furniture from tipping over.

SETUP AND ASSEMBLY

Assembly of the WLIVE Farmhouse Dresser is required. Please follow the detailed installation instructions provided in the package. All parts and accessories are coded for easy identification, and precise holes ensure accurate and faster assembly.

- It is recommended to have two people for assembly to ensure stability and ease of handling larger components.
- When installing screws, apply steady pressure and avoid over-tightening, especially with power tools, to prevent stripping the wood or screws.
- Ensure all cam locks and dowels are securely fastened before proceeding to the next step.

Product Size



Image: Product dimensions and individual drawer sizes, useful for planning assembly space and understanding component scale.

PRODUCT FEATURES AND OPERATION

This dresser is designed for optimal storage and durability. It features nine drawers, including six smaller drawers and three larger drawers, providing versatile storage solutions for various items.

- **Spacious Storage:** The dresser includes six 13.31-inch depth, 14.8-inch width drawers and three 13.3-inch depth, 21.37-inch width drawers, offering extensive storage capacity for clothing, accessories, and more.
- **Enhanced Stability:** Each large drawer is equipped with a middle support plate, increasing its stability and load capacity.
- **Smooth Operation:** Drawers feature smooth metal slides, allowing for easy pulling and full extension without tipping.
- **TV Stand Functionality:** The sturdy wood top surface can support up to 130lbs and is suitable for placing a TV up to 70 inches.



LARGE DRAWER OFFER

MORE STORAGE PLANS



100+
Clothes



40+
Toys



150+
Socks



90+
Hats



100+
Underwear



60+
Tissue



100+
Snacks



80+
Books

Image: An illustration of the dresser's internal storage capacity, demonstrating how various items can be organized within its drawers.



Image: Detailed features of the dresser, including the design of the handles, the smooth operation of the drawer slides, and the sturdy base.

SUPPORT PLATES

STRONGER LOAD CAPACITY



Image: A view of the support plates within the drawers, designed to enhance load capacity and prevent sagging.



Image: Visual representation of the dresser accommodating different television sizes, up to 70 inches, on its top surface.

MAINTENANCE

Proper care will extend the life and appearance of your dresser.

- Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- Promptly clean up spills to prevent staining or damage to the wood finish.
- Avoid placing hot items directly on the surface; use coasters or protective pads.
- Keep the dresser away from direct sunlight and extreme temperature changes to prevent warping or fading.
- Periodically check and tighten all hardware to ensure stability.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

Issue	Possible Cause	Solution
-------	----------------	----------

Issue	Possible Cause	Solution
Drawers do not close completely or are wobbly.	Incorrect installation of drawer slides or misaligned drawer boxes.	Review assembly instructions for drawer slide orientation and ensure all connections are secure. Check for obstructions in the drawer glides.
Screws strip easily during assembly.	Over-tightening, using incorrect tools, or material weakness.	Use a hand screwdriver for final tightening. If using a power drill, set it to a low torque setting. If a screw is stripped, try a slightly larger screw or wood glue with a toothpick in the hole.
Dresser feels unstable after assembly.	Loose connections or uneven floor.	Ensure all bolts and screws are tightened. Verify the dresser is on a level surface; use shims if necessary. Install the anti-tipping device securely.

SPECIFICATIONS

Feature	Detail
Brand	WLIVE
Product Dimensions	15.67"D x 62.2"W x 31.5"H
Color	Black
Mounting Type	Floor Mount
Room Type	Bedroom, Closet, Home Office, Living Room
Special Features	Adjustable Feet, Safety Stop, Scratch Resistant
Assembly Required	Yes
Model Name	ASNG115 Wood dresser/BL
Item Weight	111.3 pounds
Material	Engineered Wood
Drawer Weight Capacity	Up to 30 lbs per drawer
Tabletop Weight Capacity	Up to 130 lbs

WARRANTY AND SUPPORT

WLIVE is committed to providing quality products and customer satisfaction. While specific warranty details are not provided in this manual, please retain your proof of purchase for any potential claims.

If you encounter any problems during assembly, operation, or with the product's condition, please do not hesitate to contact WLIVE customer support for assistance. Our team is ready to provide solutions and support.

For contact information, please refer to the packaging or the retailer's website where the product was purchased.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question