

RCA DISCO-204

RCA Disco 204 Bluetooth Speaker User Manual

Model: DISCO-204

Brand: RCA

1. INTRODUCTION

The RCA Disco 204 Flame Effect Bluetooth Speaker is designed to deliver powerful audio and dynamic visual effects for an enhanced entertainment experience. This portable speaker features dual 4-inch woofers for rich sound, LED flame lights that synchronize with music, and multiple playback options including Bluetooth, USB, SD, and FM radio. Its portable design with a trolley handle and wheels ensures easy transport for both indoor and outdoor events.

What's in the Box

- RCA Disco 204 Bluetooth Speaker
- Power cable
- Auxiliary cable





Image: Front view of the RCA Disco 204 Bluetooth Speaker, showcasing its dual woofers and vibrant, multi-colored LED flame effects. The speaker has a black casing with a central RCA logo.

2. SETUP GUIDE

2.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided power cable to the speaker's charging port and plug the other end into a standard electrical outlet. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.

2.2 Powering On/Off

Locate the Power button on the control panel. Press and hold the Power button for a few seconds to turn the speaker ON. Repeat the action to turn the speaker OFF.

3. OPERATING INSTRUCTIONS

3.1 Control Panel Overview



Disco
Lights



Memory
Devices input



Mode Flame
Effect Lights



Mode
Karaoke



USB
Port



Bluetooth
Wireless



Mic
Port



Aux
Port



FM
Radio



Karaoke
Function



Easy
Portable



High Fidelity
Speaker



Image: An angled view of the RCA Disco 204 speaker, accompanied by a graphic overlay of icons representing its various features: Disco Lights, Memory Devices input, Flame Effect Lights, Karaoke Mode, USB Port, Bluetooth Wireless, Mic Port, Aux Port, FM

Radio, Karaoke Function, Easy Portable, and High Fidelity Speaker.

Familiarize yourself with the control panel located on the top of the speaker. It includes buttons for power, mode selection, volume control, track navigation, and light effects.

3.2 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "RCA DISCO 204" from the list.
4. Once paired, the speaker will emit a confirmation sound, and the LED light will stop flashing.

You can now stream audio wirelessly from your device to the speaker.

3.3 USB/SD Card Playback

Insert a USB flash drive or an SD card (with pre-loaded MP3 audio files) into the respective port on the speaker. The speaker will automatically switch to USB/SD mode and begin playing music. Use the control buttons to navigate tracks or adjust volume.

3.4 FM Radio

Press the "Mode" button to switch to FM Radio mode. Use the scan button to automatically search and save available radio stations. Use the track navigation buttons to switch between saved stations.

3.5 Microphone Use (Karaoke Function)

Connect a microphone (not included) to the microphone input jack. Adjust the microphone volume, treble, bass, and echo controls on the speaker's control panel for a customized karaoke experience.

3.6 LED Light Modes


The RCA Disco 204 features dynamic LED flame lights that enhance the party atmosphere. Press the dedicated light mode button to cycle through various light effects, including:

- **Multicolor Gradation:** Lights flow with the rhythm of the music, creating a wave-like effect.
- **Sound Responsive:** Shades of colors change and react to the music or your voice.
- **Reactive Color Show:** Vivid colors run through the speaker and change slowly, with rotating ring colors.



Multicolor Gradation

To the rhythm of the music,
Multicolored waves they go
Back and forth to the bottom
Through the rings swivels.

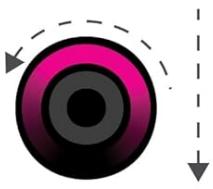

Sound Responsive

The shades of colors
Go up and down repeatedly
Mind to the rhythm of music
Or your voice.



Reactive Color Show

Vivid colors run through
The speaker and change
To the rhythm of music,
While roating ring colors
They move slowly.



Image: A visual representation of the speaker's LED light modes, illustrating Multicolor Gradation, Sound Responsive, and Reactive Color Show effects with accompanying text descriptions.



TWS Lumina Beat TRUE WIRELESS PARTY SPEAKER

The Lumina Beat is a Unique wireless speaker unlike any other you've seen. Featuring a rainbow of pulsing LED lights to tower speaker easily connects to your Smartphone, or gives you the option to switch to the radio, a wired device's playlist, or TF card for never-ending audio options. With a Convenient finger loop Holder, carrying the fun is easier and lighter Than ever.

Image: The RCA Disco 204 speaker highlighted with the branding "TWS Lumina Beat" and icons indicating "7 Vibrant Light Modes" and "LED Color Flame Effect," emphasizing its visual features.

3.7 True Wireless Stereo (TWS) Function

The TWS function allows you to connect two RCA Disco 204 speakers wirelessly for a true stereo sound experience. To activate TWS:

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the TWS button (if available, or a designated pairing button) until you hear a confirmation sound.
3. The two speakers will automatically pair with each other.
4. Once paired, connect your mobile device to the primary speaker via Bluetooth as described in section 3.2.



CONNECT 2 AT ONES

connect two speakers at the same time, synchronized from your smartphone or tablet and make your party unforgettable

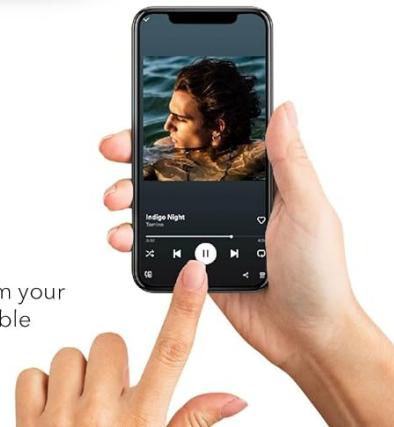


Image: Two RCA Disco 204 speakers positioned to show their wireless connection capability, with a smartphone in the foreground demonstrating music being played, highlighting the True Wireless Stereo (TWS) feature.

4. MAINTENANCE

4.1 Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid getting moisture into any openings.

4.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged before storage to maintain battery health.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is drained; Power cable not connected properly.	Charge the speaker fully; Ensure power cable is securely connected.
No sound	Volume too low; Incorrect input mode; Device not connected.	Increase volume on speaker and connected device; Select correct input mode (Bluetooth, USB, SD, FM); Ensure device is properly paired/connected.
Bluetooth pairing fails	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in pairing mode; Move device closer to speaker; Turn off other Bluetooth devices nearby.
FM radio static	Weak signal; Antenna not extended.	Relocate speaker for better reception; Extend the antenna fully.

6. SPECIFICATIONS

Model Name: DISCO

Speaker Type: Portable Speaker

Special Features: Bass Boost, Dual Speaker, LED Light, Portable

Connectivity Technology: Bluetooth, USB

Wireless Communication Technology: Bluetooth

Audio Output Mode: Stereo

Woofer Diameter: 4 Inches (Dual)

Power Source: Battery Powered

Control Method: Touch

Product Dimensions: 6"D x 6"W x 16"H

Item Weight: 4.4 pounds (2 Kilograms)

Color: Black

Material: Plastic

Included Components: Power cable, Auxiliary cable

UPC: 850068964123

Item Model Number: DISCO-204

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a Limited Warranty. Please refer to the warranty card included with your purchase or visit the official RCA website for detailed terms and conditions regarding warranty coverage and duration.

7.2 Customer Support

For technical assistance, troubleshooting, or service inquiries, please visit the official RCA support website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the product packaging.

Related Documents

	<p>RCA DISCO-2121 Rechargeable Speaker User Manual and Features Comprehensive guide to the RCA DISCO-2121 rechargeable speaker, detailing its control panel functions, remote control operations, charging, wireless connection, and LED lights. Includes FCC compliance information.</p>
	<p>RCA RP7887 Superadio Portable Radio User Manual Comprehensive user manual for the RCA RP7887 Superadio portable AM/FM radio, detailing operations, controls, safety, warranty, and maintenance for optimal performance.</p>
	<p>RCA History: Radio-Craft Magazine Advertisements (1938 & Earlier) Explore a collection of historical advertisements from Radio-Craft magazine, showcasing RCA Victor radios, NBC broadcasting, and RCA communications services from 1938 and earlier decades. Discover the evolution of radio technology.</p>
	<p>RCA RP5600 Clock Radio with CD Player User Manual User manual for the RCA RP5600 clock radio with CD player, detailing features, operation, safety, and warranty information.</p>



Grabador de video de red

[\[pdf\] User Manual](#)

Joyce Zhou Grabador de video red ES UD 6L0202D2181A01 Baseline User Manual of Network Video Recorder 76 77 96NI | V3 3 4 20150825 ftp distriseg uy HIKVISION Europa 2021 02 NVR Product Manuals multi language 99 OldUserManuals 04 Spanish |||

Grabador de video de red Manual de usuario UD.6L0202D2181A01 User Manual of Network Video Recorder Manual de usuario COPYRIGHT 2015 Hangzhou Hikvision Digital Technology Co., Ltd. RESERVADOS TODOS LOS DERECHOS. Cualquier otra informacion, incluida, entre otras, las descripciones, imagenes y graficos s...
lang:es score:12 filesize: 15.56 M page_count: 262 document date: 2015-09-11

Manual de usuario
UD.6L0202D2181A01



[\[pdf\] User Manual Recall](#)

English CD RECEIVER AUTORADIO RADIO DEH P5100UB Please read through this manual before using the product for first time to ensure proper use After reading please keep in a safe and accessible place future reference Before You Start Information User 5 For Canadian model About unit Features sales service Pioneer products 6 Visit our website OperationManual1208 pioneerelectronics StaticFiles Manuals Car

English Franais Espanol CD RECEIVER AUTORADIO CD RADIO CD DEH-P5100UB Operation Manual Mode d emploi Manual de instrucciones Contents Thank you for purchasing this PIONEER product. Please read through this manual before using the product for the first time, to ensure proper use. After reading, ...
lang:en score:11 filesize: 2.11 M page_count: 218 document date: 2008-12-05

Operation Manual
Mode d'emploi
Manual de instrucciones



[\[pdf\] User Manual Recall](#)

English CD RECEIVER AUTORADIO RADIO DEH P510UB 2 Grab the front panel and remove 3 Put into provided protective case for safe keeping Attaching 1 Slide to left until it OperationManual1208 pioneerelectronics StaticFiles Manuals Car 80

English Franais Espaol CD RECEIVER AUTORADIO CD RADIO CD DEH-P510UB Operation Manual Mode d emploi Manual de instrucciones Contents Thank you for purchasing this PIONEER product. Please read through this manual before using the product for the first time, to ensure proper use. After reading, p...

lang:en **score:10** filesize: 2.13 M page_count: 218 document date: 2008-12-05