

Candy CWC033M

Candy CWC033M Wine Cooler User Manual

Model: CWC033M

1. PRODUCT OVERVIEW

The Candy CWC033M Wine Cooler is designed for enthusiasts who wish to store up to 33 bottles under optimal conditions. This appliance features an electronic temperature control system, a double-glass reversible door, and LED internal lighting, ensuring efficient performance and elegant presentation of your wine collection.



Image 1.1: Front view of the Candy CWC033M Wine Cooler, showcasing its sleek black design and the arrangement of wine bottles on metal shelves.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent injury and damage. Keep this manual for future reference.

- **WARNING!** Do not connect multiple sockets or portable power supplies to the rear of the appliance.
- **WARNING!** When placing the appliance in its chosen location, ensure the power cord is not trapped or damaged.
- Do not step on the power cord.
- For electrical power, use a separate, easily accessible earthed socket. The appliance must be earthed.
- For UK only: The appliance's power cord is fitted with a 3-conductor (earthed) plug suitable for a standard 3-conductor (earthed) socket. Never cut or remove the third conductor (earth connection). After installation, the plug must be accessible.

- **WARNING!** Do not damage the refrigeration circuit.

Daily Use and Child Safety

- This appliance can be used by children aged 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Prevent children from playing with the appliance.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances but not to clean or install them.
- Keep children under 3 years of age away from the appliance unless continuously supervised.
- Cleaning and user maintenance shall not be made by children without supervision.
- The appliance must be positioned so that the plug is accessible.
- In case of leakage of illuminating gas or other flammable gases in the vicinity of the appliance, turn off the leaking gas valve, open doors and windows, and do not unplug the appliance's power cord.
- Wait at least 7 minutes before reconnecting the power supply after disconnecting it.
- Do not lift the appliance by its door handles.
- Keys must be kept out of reach of children and not near the appliance, to prevent children from being locked inside the appliance.

**AVVERTENZA!**

- ▶ **AVVERTENZA:** Non applicare prese multiple o alimentatori portatili sulla parte posteriore dell'elettrodomestico.
- ▶ **AVVERTENZA:** quando l'elettrodomestico viene collocato nella sede prescelta, accertarsi che il cavo di alimentazione non sia incastrato o danneggiato.
- ▶ Non calpestare il cavo di alimentazione.
- ▶ Per l'alimentazione elettrica utilizzare una presa separata collegata a terra e facilmente accessibile. L'elettrodomestico deve essere collegato a terra.
- ▶ **Solo per il Regno Unito:** il cavo di alimentazione dell'elettrodomestico è dotato di una spina a 3 conduttori (collegata a terra) adatta a una presa standard a 3 conduttori (collegata a terra). Non tagliare né smontare mai il terzo conduttore (collegamento a terra). Dopo l'installazione dell'elettrodomestico, la spina deve essere accessibile.
- ▶ **AVVERTENZA:** non danneggiare il circuito di refrigerazione.

Utilizzo quotidiano

- ▶ Questo elettrodomestico può essere utilizzato da bambini di almeno 8 anni, da persone con ridotte capacità fisiche, sensoriali o mentali e da persone inesperte solo sotto stretta sorveglianza o se hanno appreso le modalità di utilizzo sicuro dell'elettrodomestico e sono consapevoli dei relativi pericoli.
- ▶ Impedire ai bambini di giocare con l'elettrodomestico.
- ▶ I bambini di età da 3 a 8 anni possono riempire e svuotare gli elettrodomestici refrigeranti, ma non devono pulirli o installarli.
- ▶ Tenere lontano dall'elettrodomestico i bambini di età inferiore a 3 anni, a meno che non siano costantemente sorvegliati.
- ▶ La pulizia e la manutenzione non devono essere effettuate da bambini non sorvegliati.
- ▶ L'elettrodomestico deve essere posizionato in modo che la spina sia accessibile.
- ▶ In caso di perdite di gas illuminante o altri gas infiammabili in prossimità dell'elettrodomestico, spegnere la valvola del gas che fuoriesce, aprire porte e finestre e non staccare la spina del cavo di alimentazione dell'elettrodomestico.
- ▶ Attendere almeno 7 minuti per ricollegare l'alimentazione dopo averla scollegata.
- ▶ Non sollevare l'elettrodomestico mantenendolo per le maniglie della porta.
- ▶ Le chiavi devono essere conservate fuori dalla portata dei bambini e non vicine all'elettrodomestico, per evitare che i bambini restino chiusi all'interno dell'elettrodomestico.

Image 2.1: Excerpt from the safety information section of the manual, detailing warnings and guidelines for safe operation and child safety.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

3.2 Placement

- Place the wine cooler on a firm, level surface away from direct sunlight and heat sources (e.g., ovens, radiators).
- Ensure adequate ventilation around the appliance. Maintain a minimum clearance of 10 cm (4 inches) from walls and other objects.
- The appliance must be positioned so that the power plug is easily accessible.
- This model is designed as a freestanding unit. Do not integrate it into cabinetry without proper ventilation considerations.

3.3 Electrical Connection

- Before plugging in, ensure the voltage indicated on the appliance's rating plate matches your household electricity supply.
- Connect the appliance to a separate, easily accessible earthed socket. The appliance must be properly earthed to prevent electrical shock.
- Do not use extension cords or multiple sockets.
- After positioning the appliance, wait at least 7 minutes before connecting it to the power supply. This allows the refrigerant to settle.

4. OPERATING INSTRUCTIONS

4.1 Initial Start-up

After connecting the appliance to power, the internal light will illuminate, and the display will show the current internal temperature. Allow the wine cooler to operate for at least 2-3 hours empty to reach the desired temperature before loading bottles.

4.2 Temperature Control

- The Candy CWC033M features electronic temperature regulation.
- The temperature range can be set from 6°C to 18°C (43°F to 64°F).
- Use the control panel buttons (usually '+' and '-' or up/down arrows) to adjust the desired temperature. The display will show the set temperature, then revert to the actual internal temperature.
- For optimal long-term storage of red wines, a temperature of 12-14°C (54-57°F) is generally recommended. White wines are often served cooler, around 8-12°C (46-54°F).

4.3 Loading Bottles

- The wine cooler has a net capacity for 33 standard Bordeaux-style bottles.
- Arrange bottles on the three metal shelves to allow for proper air circulation.
- Avoid overloading shelves.

4.4 Internal LED Light

The appliance is equipped with a white LED internal light. This light can typically be switched on or off via a dedicated button on the control panel, allowing you to illuminate your wine collection as desired.

5. MAINTENANCE AND CLEANING

5.1 Cleaning the Interior

- Always unplug the appliance before cleaning.
- Clean the interior with a soft cloth dampened with a solution of mild detergent and warm water.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals as they can damage surfaces.
- Dry all surfaces thoroughly after cleaning.
- The metal shelves can be removed for easier cleaning.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. For stubborn marks, use a mild detergent.
- Clean the door gasket regularly to ensure a proper seal and energy efficiency.

5.3 Defrosting

The wine cooler features an automatic defrost system. Any frost that forms on the back wall will melt and evaporate. Ensure the drain hole at the back of the interior is clear to allow water to escape.

5.4 Power Outage

In case of a power outage, keep the door closed to maintain the internal temperature for as long as possible. The appliance will resume operation automatically once power is restored.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Appliance does not operate	No power supply; Plug not fully inserted; Blown fuse/tripped circuit breaker.	Check power connection; Ensure plug is secure; Check household fuse/circuit breaker.
Temperature is not cold enough	Door not closed properly; Door gasket damaged; Excessive door openings; Appliance near heat source; Temperature setting too high.	Ensure door is fully closed; Inspect/replace gasket; Reduce door openings; Relocate appliance; Adjust temperature setting lower.
Excessive noise	Appliance not level; Objects touching the back/sides; Compressor noise (normal).	Adjust leveling feet; Ensure clearance around appliance; Compressor noise is normal during operation.
Water on floor	Drain hole blocked.	Clear the drain hole at the back of the interior.

If the problem persists after checking these points, please contact authorized service personnel.

7. SPECIFICATIONS

Model: CWC033M

Brand: Candy

Energy Efficiency Class: G

Annual Electricity Consumption: 140 kWh/year

Net Capacity: 33 Bottles

Temperature Regulation: Electronic

Temperature Range: 6°C to 18°C (43°F to 64°F)

Door Type: Double glass, reversible, Black

Handle: Internal

Shelves: 3 metal shelves

Internal Light: LED, White

Climate Class: N-ST

Noise Level: 37 dB(A)

Net Weight: 29 Kg (63.9 lbs)

Dimensions (HxWxD): 850 x 475 x 456 mm (33.5 x 18.7 x 18.0 inches)

Cooling Method: Compressor

Electrical Plug Type: Type F - 2 pin (German)

8. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For specific details regarding your warranty period and terms, please refer to the documentation provided with your purchase or visit the official Candy website.

Returns and Defects

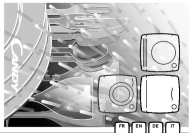 
If you wish to return a product within 30 days of receipt because you have changed your mind, please consult your retailer's return policy. If you have received a defective or damaged product, please consult your retailer's page on defective or damaged products. For specific information on purchases made through a marketplace, consult the relevant marketplace help page.

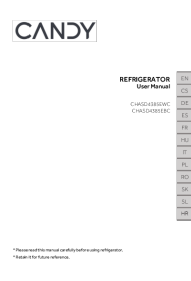 
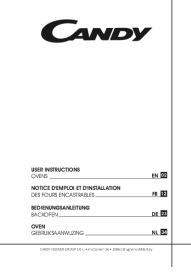 
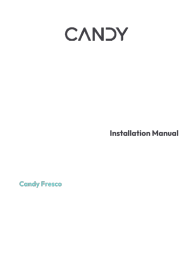 
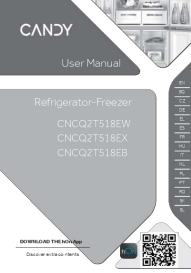 

Customer Service

For technical assistance, spare parts, or further inquiries, please contact Candy customer support. Contact information can typically be found on the official Candy website or in your purchase documentation. You can visit the [Candy Store on Amazon](#) for more product information.

© 2024 Candy. All rights reserved. Information subject to change without notice.

Related Documents - CWC033M

	<p>Manuale d'Uso e Manutenzione Lavastoviglie Candy</p> <p>Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.</p>
---	---

 The image shows the cover of the Candy Refrigerator User Manual. It features the Candy logo at the top left. Below it, the text 'REFRIGERATOR User Manual' is displayed. Further down, the model numbers 'CNCQ2T518EW' and 'CNCQ2T518EB' are listed. On the right side, there is a vertical list of languages: EN, FR, DE, NL, ES, PT, IT, PL, RU, and AR. At the bottom left, there is a small note: '*Please read this manual carefully before using refrigerator. *Keep for future reference.'	<p>Candy CHASD4385EWC/EBC Refrigerator User Manual</p> <p>Comprehensive user manual for Candy CHASD4385EWC and CHASD4385EBC refrigerators, covering installation, operation, maintenance, safety, and troubleshooting. Learn how to use your Candy refrigerator efficiently and safely.</p>
 The image shows the cover of the Candy Oven User Manual. It features the Candy logo at the top left. Below it, the text 'Oven User Manual' is displayed. Further down, the model numbers 'CNCQ2T518EW', 'CNCQ2T518EX', and 'CNCQ2T518EB' are listed. On the right side, there is a vertical list of languages: EN, FR, DE, NL, ES, PT, IT, PL, RU, and AR. At the bottom left, there is a small note: '*Please read this manual carefully before using oven. *Keep for future reference.'	<p>Candy Oven User Manual: Comprehensive Guide to Operation and Maintenance</p> <p>Official user manual for Candy ovens, providing detailed instructions on safety, installation, operation, cleaning, maintenance, and troubleshooting. Available in English, French, German, and Dutch.</p>
 The image shows the cover of the Candy Fresco Installation Manual. It features the Candy logo at the top left. Below it, the text 'Installation Manual' is displayed. Further down, the model numbers 'CNCQ2T518EW', 'CNCQ2T518EX', and 'CNCQ2T518EB' are listed. On the right side, there is a vertical list of languages: EN, FR, DE, NL, ES, PT, IT, PL, RU, and AR. At the bottom left, there is a small note: '*Please read this manual carefully before using refrigerator. *Keep for future reference.'	<p>Candy Fresco Installation Manual</p> <p>This installation manual provides comprehensive instructions for the Candy Fresco refrigerator, covering safety warnings, installation procedures, dimensions, and connection details for kitchen manufacturers and installers.</p>
 The image shows the cover of the Candy Refrigerator-Freezer User Manual. It features the Candy logo at the top left. Below it, the text 'Refrigerator-Freezer User Manual' is displayed. Further down, the model numbers 'CNCQ2T518EW', 'CNCQ2T518EX', and 'CNCQ2T518EB' are listed. On the right side, there is a vertical list of languages: EN, FR, DE, NL, ES, PT, IT, PL, RU, and AR. At the bottom left, there is a small note: '*Please read this manual carefully before using refrigerator. *Keep for future reference.'	<p>Candy Refrigerator-Freezer User Manual</p> <p>Comprehensive user manual for Candy Refrigerator-Freezer models CNCQ2T518EW, CNCQ2T518EX, and CNCQ2T518EB. Includes safety information, intended use, product description, control panel operation, installation, and maintenance tips.</p>
 The image shows the cover of the Candy Refrigerator-Freezer CNCQ2T518EW, CNCQ2T518EX, CNCQ2T518EB User Manual. It features the Candy logo at the top left. Below it, the text 'Refrigerator-Freezer User Manual' is displayed. Further down, the model numbers 'CNCQ2T518EW', 'CNCQ2T518EX', and 'CNCQ2T518EB' are listed. On the right side, there is a vertical list of languages: EN, FR, DE, NL, ES, PT, IT, PL, RU, and AR. At the bottom left, there is a small note: '*Please read this manual carefully before using refrigerator. *Keep for future reference.'	<p>Candy Refrigerator-Freezer CNCQ2T518EW, CNCQ2T518EX, CNCQ2T518EB User Manual</p> <p>User manual for Candy Refrigerator-Freezer models CNCQ2T518EW, CNCQ2T518EX, and CNCQ2T518EB. This guide provides instructions on installation, operation, safety, maintenance, and troubleshooting.</p>