

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Silver Crest](#) /

› [Silver Crest 6L 1800W Digital Air Fryer S-18 Instruction Manual](#)

Silver Crest S-18

Silver Crest 6L 1800W Digital Air Fryer S-18 Instruction Manual

Model: S-18

1. INTRODUCTION

Thank you for choosing the Silver Crest 6L 1800W Digital Air Fryer. This appliance uses rapid hot air circulation technology to cook your favorite foods with little to no oil, resulting in healthier meals. Please read this manual thoroughly before use to ensure safe and optimal operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Hot steam is released through the air outlet openings during hot air frying. Keep your hands and face at a safe distance from the steam and from the air outlet openings.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Silver Crest Air Fryer.

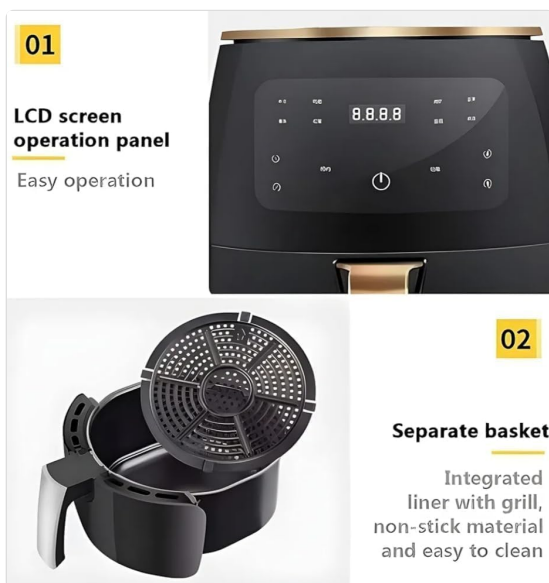


Image: The digital LCD screen operation panel for easy control and the separate basket design, featuring an integrated non-stick liner with a grill for easy cleaning.



Image: View inside the air fryer basket, showing the

removable cooking rack designed for optimal air circulation around food.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Digital LCD Touch Control Panel:** For setting time, temperature, and selecting cooking presets.
- **Removable Frying Basket:** Non-stick coated for easy food release and cleaning.
- **Removable Grill/Rack:** Sits inside the basket to elevate food for even cooking.
- **Handle:** For safely pulling out the frying basket.
- **Air Inlet:** Located on the top of the unit.
- **Air Outlet:** Located at the back of the unit.

4. SETUP

Before first use, follow these steps:

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean:** Wash the frying basket and grill/rack thoroughly with hot water, some dishwashing liquid, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a moist cloth.
3. **Position:** Place the appliance on a stable, horizontal, and level surface. Do not place the appliance on non-heat-resistant surfaces. Ensure there is at least 10 cm of free space around the appliance for proper ventilation.
4. **Pre-heat (Optional):** It is recommended to run the air fryer for about 10-15 minutes at 200°C (390°F) without any food inside to burn off any manufacturing residues. A slight odor may be present during this process; this is normal.



Image: The Silver Crest Air Fryer alongside its packaging, illustrating the product and its initial presentation.

5. OPERATING INSTRUCTIONS

Operating your Silver Crest Air Fryer is straightforward:

1. **Prepare Food:** Place the ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the frying basket back into the main unit. Ensure it clicks securely into place.
3. **Power On:** Plug the power cord into a grounded wall outlet. The digital display will illuminate.
4. **Set Temperature and Time:** Use the digital touch control panel to set the desired cooking temperature (with temperature control feature) and time. Many models include preset functions for common foods like chips, meat, and pizza.
5. **Start Cooking:** Press the start button to begin the cooking process. The air fryer will automatically shut off when the timer reaches zero.
6. **Shake/Flip (Optional):** For some foods, it is recommended to shake or flip the ingredients halfway through the cooking time to ensure even browning. Carefully pull out the basket, shake, and reinsert. The appliance will resume cooking.
7. **Remove Food:** Once cooking is complete, carefully pull out the basket using the handle. Use tongs to remove the cooked food.
8. **Cool Down:** Allow the appliance to cool down completely before cleaning.



Image: The Silver Crest Air Fryer in operation, with the basket pulled out to show crispy fried food, demonstrating its use in a modern kitchen environment.

General Cooking Guide:

Food Item	Temperature	Time	Notes
French Fries (frozen)	200°C (390°F)	15-20 min	Shake halfway
Chicken Wings	180°C (360°F)	20-25 min	Flip halfway
Fish Fillet	160°C (320°F)	10-15 min	
Vegetables (mixed)	180°C (360°F)	10-15 min	Toss with a little oil

Note: Cooking times and temperatures are approximate and may vary based on food quantity, size, and desired crispiness. Always ensure food is cooked thoroughly.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Clean Basket and Rack:** The frying basket and grill/rack are non-stick. Clean them with hot water, dishwashing liquid, and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes. They may also be dishwasher safe (check product specific instructions if available).
3. **Clean Interior:** Wipe the inside of the appliance with a hot water and non-abrasive sponge.
4. **Clean Exterior:** Wipe the exterior of the appliance with a moist cloth. Do not use harsh abrasive cleaners or scouring pads.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not work	Appliance is not plugged in.	Plug the main plug into a grounded wall socket.
	The timer has not been set.	Set the timer to the desired preparation time.
Food not cooked evenly	Too much food in the basket.	Reduce the amount of food in the basket.
	Food not shaken/flipped.	Shake or flip ingredients halfway through cooking.
White smoke comes from the appliance	Fat residues from previous use.	Clean the basket and grill/rack thoroughly after each use.
	Excess oil/grease from food.	Ensure food is not excessively oily. Pat dry if necessary.

8. SPECIFICATIONS

Detailed technical information for the Silver Crest Air Fryer S-18:

- **Brand:** Silver Crest
- **Model:** S-18
- **Capacity:** 6 Liters
- **Power:** 1800 Watts
- **Special Features:** Temperature Control, Digital Screen
- **Material:** Stainless Steel
- **Color:** Black
- **Dimensions (Depth x Width x Height):** 40 cm x 25 cm x 40 cm
- **Recommended Use:** Reheating, Frying, Roasting, Baking

Extra large Capacity Air Fryer

Fry in a healthier way with less or no oil. With air fryer you can enjoy the same fried and crispy foods with less fat and grease



BLACK

RED

GREEN

220V-240V 50-60HZ



MADE IN CHINA

305x305x340mm

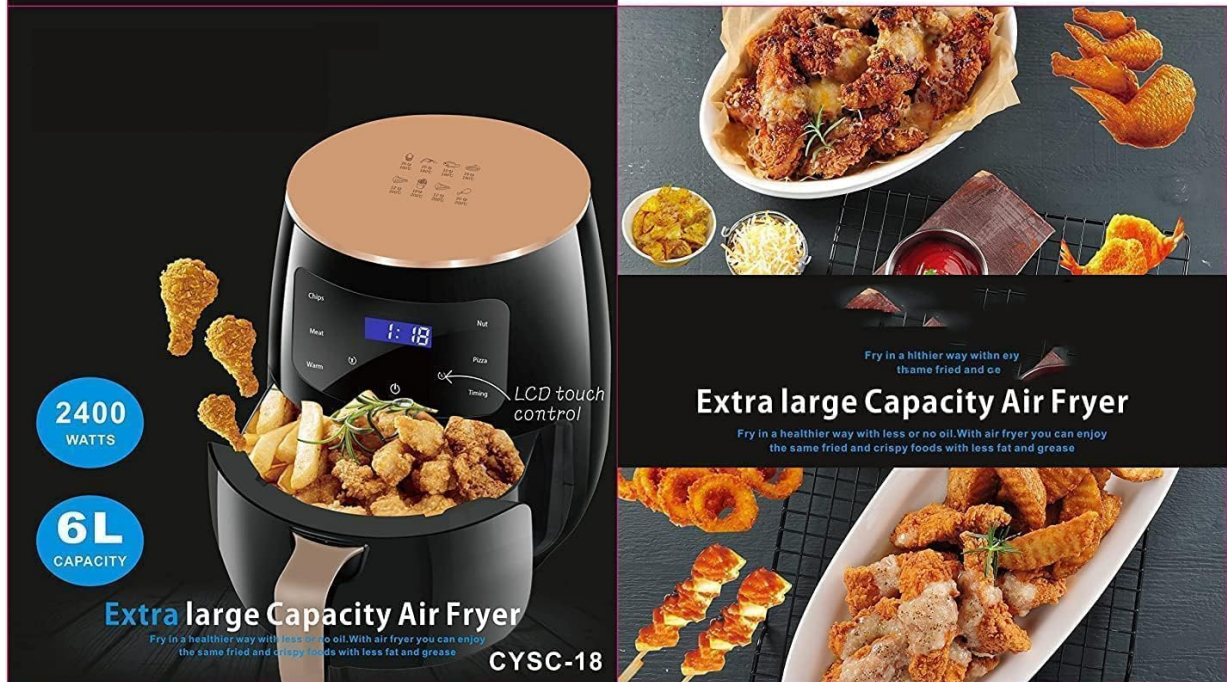


Image: An overview of the Silver Crest Air Fryer, highlighting its dimensions and showcasing various types of food that can be prepared, such as chicken, fries, and onion rings.

9. WARRANTY AND SUPPORT

This Silver Crest Air Fryer is designed for household use. For warranty information and customer support, please refer to the warranty card included with your purchase or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

For technical assistance or service inquiries, please contact the authorized service center in your region.