

SFP701

Ninja Combi SFP 701

ALL IN ONE MULTICOOKER, OVEN & AIR FRYER USER MANUAL

Model: SFP701

Introduction

Welcome to the comprehensive user manual for your new Ninja Combi SFP 701 All in One Multicooker, Oven & Air Fryer. This versatile appliance is designed to simplify your cooking experience with its 14-in-1 functionality, allowing you to prepare complete meals quickly and efficiently. Featuring revolutionary Combi Cooker Technology, it combines hyper steam and air fry to deliver perfectly cooked dishes with juicy interiors and crispy exteriors.

Please read this manual thoroughly before first use to ensure safe operation and optimal performance of your Ninja Combi. Keep this manual for future reference.



Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Product Components and Accessories

Your Ninja Combi SFP 701 comes with essential accessories designed to enhance your cooking versatility:

- **Combi Cooker Pan:** The primary cooking vessel, also doubles as a serving dish.
- **Bake Tray:** Used for baking and roasting.
- **Crisper Tray:** Ideal for air frying and achieving crispy results.



Included accessories

Comes with a bake tray, crisper plate, and Combi Cooker Pan, which doubles as a serving dish.

Overview of the included accessories: Combi Cooker Pan, Bake Tray, and Crisper Plate.



Ninja Combi™ Cooker Technology

HyperSteam and Air Fry combine to create juicy insides and deliciously crispy outsides—all at once.

Illustration of Ninja Combi Cooker Technology, combining HyperSteam and Air Fry for optimal cooking.

Setup

1. **Unpack:** Carefully remove all packaging materials, including any protective film or stickers from the appliance and its accessories.
2. **Clean:** Before first use, wash the Combi Cooker Pan, Bake Tray, and Crisper Tray in warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the Ninja Combi on a clean, dry, level surface. Ensure there is adequate space (at least 6 inches) around the unit for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The unit will power on and display the default settings.

Operating Instructions

Control Panel Overview

The digital control panel allows for effortless one-touch cooking with 14 customizable smart programs. Familiarize yourself with the buttons and display:

- **Power Button:** Turns the unit on/off.
- **Function Dial/Buttons:** Selects desired cooking function (e.g., Combi Meals, Air Fry, Bake).
- **Temperature/Time Controls:** Adjusts cooking temperature and time.
- **Start/Stop Button:** Begins or pauses the cooking cycle.



Effortless one-touch cooking

Create endless meal options
with 14 customizable smart programs.

The intuitive control panel for selecting cooking functions and settings.

Cooking Functions

The Ninja Combi offers 14 versatile cooking functions:

- **Combi Meals:** Combines steam and air fry for complete meals.
- **Combi Crisp:** For crispy results with steam.
- **Combi Bake:** For baking with steam.
- **Steam:** Steams food for tender results.
- **Proof:** Proofs dough for baking.
- **Rice/Pasta:** Dedicated settings for rice and pasta.
- **Air Fry:** Crisps food with little to no oil.
- **Bake:** Traditional baking function.

- **Broil:** For quick browning and melting.
- **Pizza:** Optimized for cooking pizzas.
- **Toast:** For toasting bread.
- **Sear/Sauté:** For searing meats and sautéing vegetables.
- **Slow Cook:** For slow cooking meals.
- **Sous Vide:** Precision cooking for tender results.

General Cooking Steps

1. **Prepare Food:** Place ingredients in the appropriate pan or tray.
2. **Insert Pan:** Slide the pan/tray into the unit.
3. **Select Function:** Use the function controls to choose your desired cooking mode.
4. **Set Temperature/Time:** Adjust the temperature and cooking time as needed for your recipe.
5. **Start Cooking:** Press the Start/Stop button to begin.
6. **Monitor Progress:** The display will show remaining time. Some functions may require preheating.
7. **Finish:** The unit will beep when cooking is complete. Carefully remove food using oven mitts.



Replaces your countertop oven

Cook up to a 6-lb whole chicken, 10" pizza,
or a 5-lb roast.

The Ninja Combi can accommodate a 6-lb whole chicken, replacing your countertop oven.



Replaces your air fryer

Cook up to 2 lbs of fries with up to 75% less fat.

***Tested against deep-fried, hand-cut French fries**

Cook up to 2 lbs of fries with up to 75% less fat, effectively replacing your air fryer.



Cook a complete meal in just 15 minutes

**Make full meals for the family 50% faster
than a wall oven.**

Prepare complete meals, such as salmon with asparagus and rice, in as little as 15 minutes.



XL capacity

Cook full meals for up to 8 people.
Perfect for families or entertaining.

*1 ½ boxes (24 oz) of pasta

The XL capacity allows you to cook full meals for up to 8 people, perfect for families or entertaining.



14-in-1 functionality

Create thousands of different meals,
including pasta and rice dishes, all in one cooker.

A visual representation of the 14-in-1 functionality, showcasing a wide variety of meals that can be prepared.

Maintenance and Cleaning

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Ninja Combi.

- **Always Unplug:** Before cleaning, always unplug the unit from the power outlet and allow it to cool completely.
- **Dishwasher Safe Parts:** The Combi Cooker Pan, Bake Tray, and Crisper Tray are dishwasher safe for easy cleanup.
- **Hand Washing:** For best results and to prolong the life of non-stick coatings, hand wash accessories with warm, soapy water using a non-abrasive sponge.
- **Main Unit:** Wipe the exterior of the main unit with a clean, damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior:** Wipe the interior of the unit with a damp cloth after each use. For stubborn food residue, use a mild detergent and a soft brush.
- **Storage:** Store the appliance in a clean, dry place once it has cooled and been cleaned.

Troubleshooting

If you encounter any issues with your Ninja Combi, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Unit does not turn on.	Power cord not securely plugged in. No power at the outlet.	Ensure the power cord is firmly plugged into a working electrical outlet. Check your circuit breaker.
Food not cooking evenly.	Overcrowding the pan/tray. Incorrect temperature or time setting.	Do not overcrowd the pan; cook in smaller batches if necessary. Adjust temperature and time according to recipe guidelines. Shake or flip food halfway through cooking for air fry functions.
Smoke coming from the unit.	Food residue or grease buildup. High-fat foods.	Ensure the unit and accessories are clean before use. For high-fat foods, use a small amount of water in the bottom of the Combi Cooker Pan to reduce smoke.
Display shows an error code.	Internal malfunction or sensor issue.	Unplug the unit from the power outlet, wait 5 minutes, then plug it back in. If the error persists, contact customer support.

Specifications

Attribute	Detail
Product Dimensions	14.92 x 15.4 x 13.11 inches (14.92"D x 15.4"W x 13.11"H)
Item Weight	19 pounds
Model Number	SFP701
Color	Gray
Country of Origin	USA
ASIN	B0DM2NFM6S

Warranty and Support

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the manufacturer's official website. The warranty typically covers defects in material and workmanship under normal household use for a specified period from the date of purchase.

If you require technical support, have questions about your product, or need to order replacement parts, please visit the official Generic brand website or contact their customer service department. Contact details are usually provided in the product packaging or on the manufacturer's website.

