

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MiBOXER](#) /

› [MiBOXER C1 Color Temperature Remote 2.4G User Manual](#)

MiBOXER C1

MiBOXER C1 Color Temperature Remote 2.4G User Manual

Model: C1

1. INTRODUCTION

This manual provides comprehensive instructions for the MiBOXER C1 Color Temperature Remote 2.4G. This device is designed for intuitive control over color temperature (CCT) and brightness of compatible MiBOXER lighting products. Please read this manual thoroughly before use to ensure proper operation and to maximize the product's lifespan.



Image 1.1: Front view of the MiBOXER C1 Color Temperature Remote.



Image 1.2: Miboxer C1 Remote, its packaging, and included user manual.

Key Features:

- **Color Temperature Control:** Adjust CCT for optimal lighting warmth.
- **2.4GHz Wireless Technology:** Reliable, long-range connectivity.
- **User-Friendly Design:** Simple, intuitive interface for easy adjustments.
- **Compact and Ergonomic:** Comfortable and portable for daily use.
- **Versatile Compatibility:** Works with various Miboxer lighting products.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or gently pry open the cover.
3. Insert two AAA batteries, ensuring correct polarity (+ and - terminals).
4. Replace the battery compartment cover until it clicks securely into place.

2.2 Linking the Remote to Lighting Devices

The C1 remote uses 2.4GHz wireless technology to communicate with compatible MiBOXER lighting devices. Follow these steps to link the remote:

1. Ensure the lighting device you wish to control is powered off.
2. Power on the lighting device. Within 3 seconds of powering on, press the "ON" button for the desired zone (1-4) on the C1 remote **three times**.
3. The lighting device should flash three times, indicating successful linking.
4. If the linking fails, power off the lighting device and repeat the process.

2.3 Unlinking the Remote from Lighting Devices

To unlink a lighting device from a specific zone on the C1 remote:

1. Ensure the lighting device you wish to unlink is powered off.
2. Power on the lighting device. Within 3 seconds of powering on, press the "ON" button for the desired zone (1-4) on the C1 remote **five times**.
3. The lighting device should flash ten times, indicating successful unlinking.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the button layout and functions of your MiBOXER C1 remote:



Image 3.1: Detailed button description for the MiBOXER C1 Remote.

3.1 Button Functions

- **ON:** Turns all linked lights ON.
- **OFF:** Turns all linked lights OFF.
- **Warmer white (left diamond button):** Increases the color temperature towards warmer tones.
- **Cooler white (right diamond button):** Increases the color temperature towards cooler tones.
- **Brightness - (left gear button):** Decreases the brightness level.
- **Brightness + (right gear button):** Increases the brightness level.
- **S1 (Scene button):** Activates a pre-set scene or mode (functionality may vary with specific lighting devices).
- **Zone 1-4 ON (I):** Turns ON lights linked to the specific zone. Also used for linking/unlinking.
- **Zone 1-4 OFF (O):** Turns OFF lights linked to the specific zone.

3.2 Adjusting Color Temperature and Brightness

1. **Select Zone:** Press the "I" button for the desired zone (1-4) to select it. To control all linked lights, ensure no specific zone is selected or press the main "ON" button.
2. **Adjust Color Temperature:** Use the "Warmer white" (left diamond) and "Cooler white" (right diamond) buttons to fine-tune the color temperature.
3. **Adjust Brightness:** Use the "Brightness -" (left gear) and "Brightness +" (right gear) buttons to set the desired light intensity.

4. MAINTENANCE

4.1 Cleaning

To maintain the appearance and functionality of your remote:

- Wipe the remote with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or if the indicator light (if present) signals low power. Refer to Section 2.1 for battery installation instructions.

4.3 Storage

When not in use for extended periods, store the remote in a cool, dry place. If storing for several months, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted and not depleted. Replace if necessary.
- **Range:** Confirm the remote is within the effective operating range of the lighting device.
- **Interference:** Minimize potential 2.4GHz interference from other wireless devices.

5.2 Linking Issues

- **Timing:** Ensure the "ON" button is pressed within 3 seconds of powering on the lighting device.

- **Repetition:** Confirm the "ON" button is pressed exactly three times for linking or five times for unlinking.
- **Compatibility:** Verify that the lighting device is compatible with the MiBOXER C1 remote.

6. SPECIFICATIONS

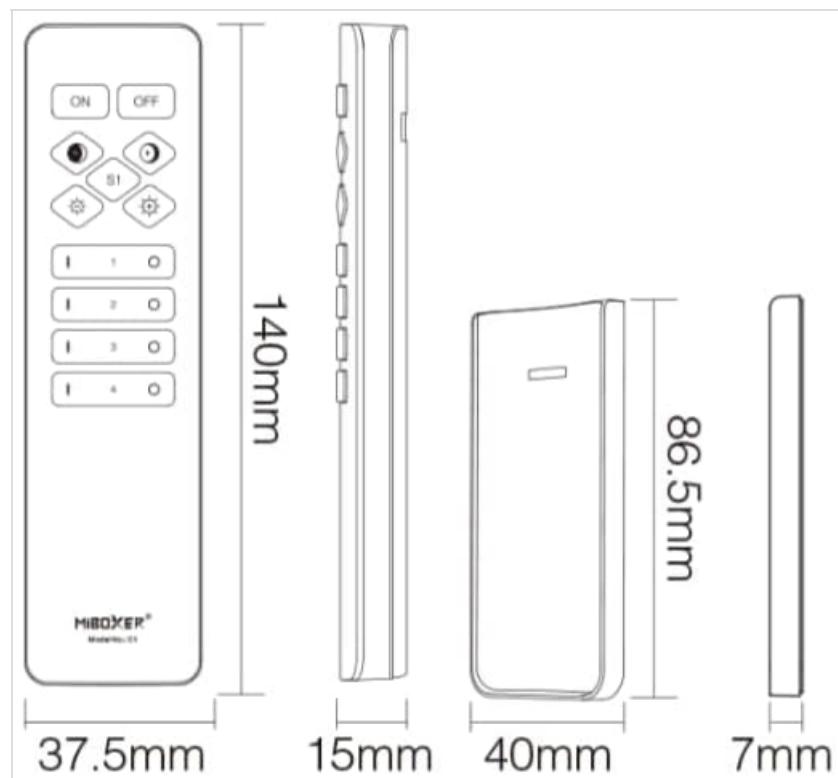


Image 6.1: Dimensional diagram of the MiBOXER C1 Remote.



Image 6.2: Packaging dimensions for the MiBOXER C1 Remote.

Feature	Detail
Brand	MiBOXER
Model Number	C1
Color	Black
Special Feature	2.4G Remote CCT & Brightness Control
Item Weight	1.92 ounces (approx. 54.4 grams)
Package Dimensions	5.5 x 1.8 x 1 inches (approx. 140 x 46 x 25 mm)
Max Number of Supported Devices	1 (per zone, up to 4 zones)
Compatible Devices	Color temperature and Brightness adjustable MiBOXER lighting products
Power Source	2x AAA Batteries (not included)

7. WARRANTY AND SUPPORT

 
MiBOXER products are designed for reliability and performance. For specific warranty information, please refer to the warranty card included with your product or contact your retailer. For technical support, product inquiries, or to explore other MiBOXER products, please visit the official MiBOXER store or website.

MiBOXER Store: [Visit the MiBOXER Store on Amazon](#)

© 2024 MiBOXER. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - C1

	<p>CCT Remote Model C3 - 2.4GHz Wireless Lighting Control</p> <p>User guide for the MiBoxer CCT Remote, Model C3. Learn about its features, specifications, functions, linking/unlinking procedures, and installation. This 2.4GHz wireless remote offers stable signal, anti-interference, and a 30m control distance for commercial, hotel, and home lighting.</p>
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

  Made in China	<p>MiBOXER FUT022 RF Wireless Touching LED Remote Controller - User Manual</p> <p>Detailed user manual and technical specifications for the MiBOXER FUT022 RF Wireless Touching LED Remote Controller. Learn about its functions, how to use it for color temperature and brightness adjustment, and connection diagrams.</p>
	<p>MiBOXER FUT039 RGB+CCT LED Strip Controller - Product Overview</p> <p>Detailed information on the MiBOXER FUT039, a 2.4GHz RF RGB+CCT LED strip controller offering 16 million colors, dimming, color temperature adjustment, smartphone app control, and voice control compatibility.</p>
	<p>MiBOXER LS2-WP Waterproof 5-in-1 LED Controller User Manual</p> <p>User manual for the MiBOXER LS2-WP Waterproof 5-in-1 LED Controller, detailing features, parameters, function instructions, connection diagrams, and RF remote linking/unlinking.</p>
	<p>CCT Remote Control Model C3 - User Guide and Specifications</p> <p>Detailed guide for the CCT Remote Control Model C3, featuring 2.4GHz wireless technology, CCT and brightness adjustment for lighting, and compatibility with MiBoxer/Mi-Light series. Includes product features, specifications, function descriptions, pairing/clearing instructions, installation guide, and precautions.</p>
	<p>MiBOXER SPIW5 LED Controller: Guía Completa de WiFi y DMX 5-en-1</p> <p>Manual detallado del Controlador LED Miboxer SPIW5 5-en-1 con control WiFi y DMX. Aprenda sobre la configuración, integración con la aplicación Tuya Smart, emparejamiento de controles remotos, control por voz con Alexa y Google Home, y varios modos de iluminación.</p>