

- › [Supreme Trimmer](#) /
- › [Supreme Trimmer Recharge ST777 Professional Barber Trimmer User Manual](#)

## Supreme Trimmer ST777

# Supreme Trimmer Recharge ST777 Professional Barber Trimmer User Manual

Model: ST777 | Brand: Supreme Trimmer

### 1. PRODUCT OVERVIEW

The Supreme Trimmer Recharge ST777 is a professional-grade barber trimmer designed for precision and durability. It features a high-performance motor, advanced DLC blades, and a versatile charging system to ensure continuous operation and superior grooming results.



Image 1.1: Supreme Trimmer Recharge ST777 and Charging Dock.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Supreme Trimmer Recharge ST777
- 2 Removable NRG1200 Lithium Batteries
- Smart Charging Dock
- USB-C Cables (2)
- 4 Trimmer Guards (1mm, 2mm, 3mm, 4mm)
- Blade Oil
- Cleaning Brush



Image 2.1: Contents of the Supreme Trimmer Recharge ST777 Box.

### 3. KEY FEATURES

#### 3.1 Powerful Motor

The ST777 is equipped with a high-performance motor operating between 7500-8000 RPM. This motor provides exceptional cutting power for all hair types, making it suitable for sharp lines, fades, and efficient debulking.

# POWERFUL MOTOR



# 7500

## RPM

**DELIVERS A BLAZING 7500 RPM  
FOR UNMATCHED SPEED AND  
CUTTING POWER. ✓**

Image 3.1: Powerful 7500 RPM Motor.

### 3.2 Zero-Gap DLC Blades

The durable Diamond-Like Carbon (DLC) blades are pre-set to a zero-gap for your convenience, ensuring crisp edge-ups, smooth cuts, and close trims without requiring manual adjustments. Replacement blades TB540 and TB440 are available separately.

# ZERO GAPPED

PRE-SET TO ZERO GAP FOR YOUR CONVENIENCE — NO ADJUSTMENTS NEEDED.



Image 3.2: Zero-Gapped DLC Blades.

# SHARP BLADES

STANDARD TOOTH BLADES PERFECT FOR SHARP LINES OR DESIGN WORK



REPLACEMENT BLADE  
TB440



Image 3.3: Sharp Standard Tooth Blade (TB440).



## SHARP BLADES

COMES WITH A STANDARD TOOTH BLADE DESIGNED TO TACKLE THICK OR COARSE HAIR EFFORTLESSLY.




Replacement Blade (TB440)

Image 3.4: Blade Types: Standard (TB440) and Deep Tooth (TB540).

### 3.3 Unlimited Runtime & Smart Charging

The trimmer includes two removable NRG1200 lithium batteries, allowing you to swap them for nonstop performance. Each battery provides up to 2 hours of runtime. The smart charging dock offers three charging options: charge the trimmer, charge a spare battery, or charge a phone/other device via the USB-C port. LED indicators provide charging status.

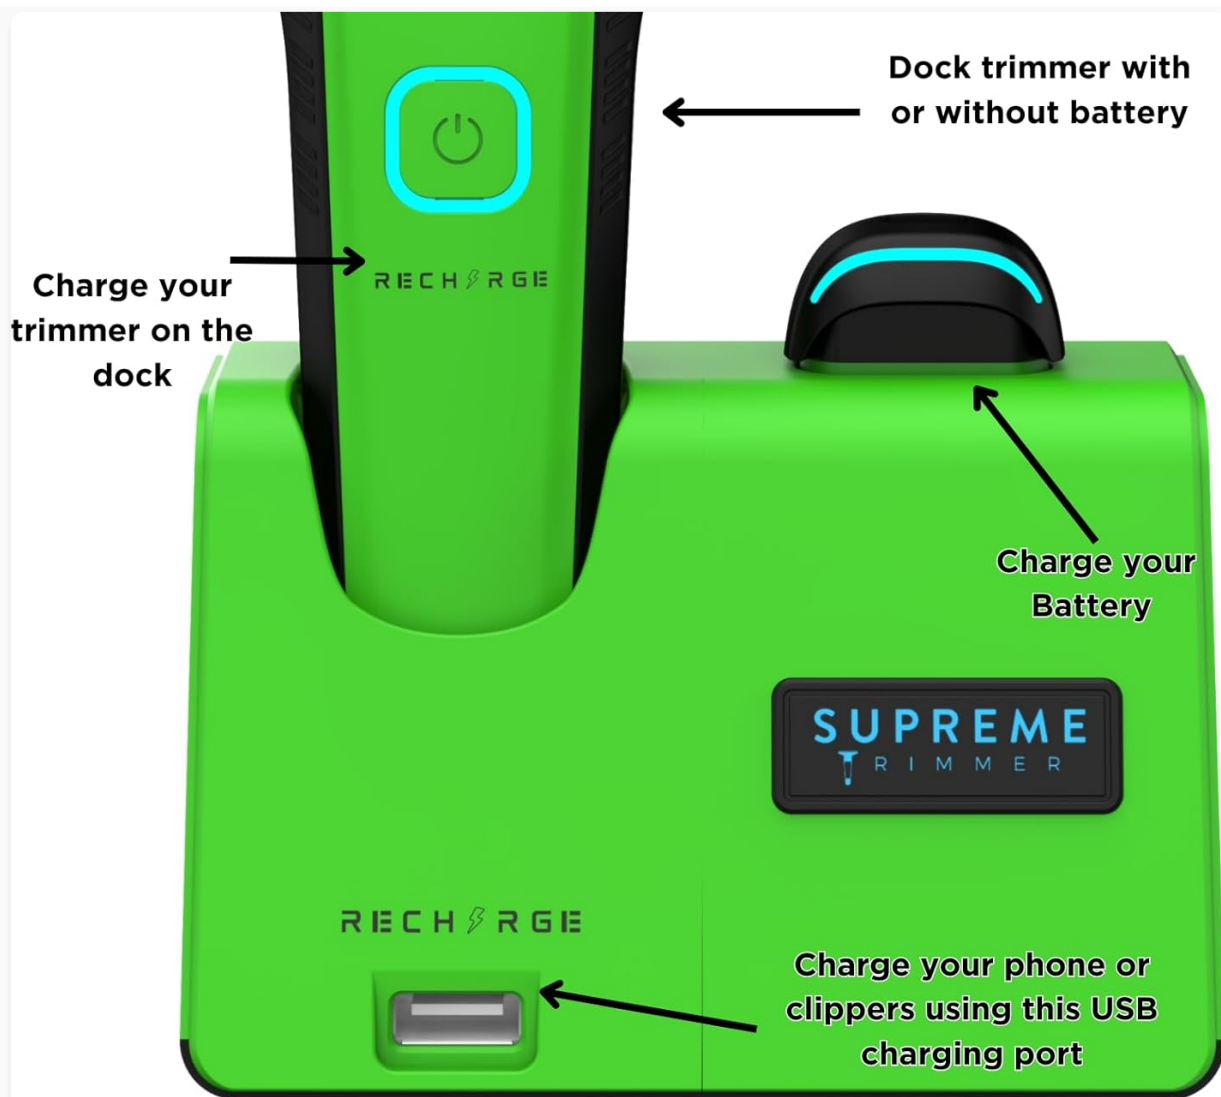

## Charge 3 ways

Image 3.5: Three Charging Options with the Smart Charging Dock.



### DETACHABLE BATTERY

INCLUDES 2 DETACHABLE BATTERIES, EACH PROVIDING 2 HOURS OF RUNTIME, ENSURING CONTINUOUS USE WITHOUT INTERRUPTION.

Image 3.6: Detachable NRG1200 Battery.

Your browser does not support the video tag.

Video 3.1: This video provides an overview of the RECHARGE Trimmer's specifications, including its motor, blades, and



charging capabilities.

### 3.4 Ergonomic Design

The trimmer features a lightweight, ergonomic design for maximum comfort and easy handling during use. A convenient release button is located on the back for quick battery removal.



Image 3.7: Ergonomic Design for Comfortable Handling.

## 4. SETUP & FIRST USE

### 4.1 Charging the Trimmer

Before first use, fully charge the trimmer. You have multiple options:

1. **Using the Smart Charging Dock:** Place the trimmer directly into the dock. The LED indicator on the trimmer will show charging status.
2. **Direct USB-C Connection:** Plug one of the provided USB-C cables directly into the port at the bottom of the trimmer and connect to a suitable power source.
3. **Charging Spare Battery:** Place a spare NRG1200 battery into the designated slot on the smart charging dock.



## 4.2 Attaching/Detaching Guards

To attach a guard, align it with the trimmer blade and push gently until it clicks into place. To detach, pull the guard away from the blade. The kit includes 1mm, 2mm, 3mm, and 4mm guards for various hair lengths.

## 5. OPERATING INSTRUCTIONS

The Supreme Trimmer Recharge ST777 is designed for versatile use. Press the power button to turn the trimmer on or off.

### 5.1 General Trimming

For general trimming, hold the trimmer against the hair and move it slowly against the direction of hair growth. Use the appropriate guard for your desired length. The zero-gapped blades are ideal for creating sharp lines and detailed work.

Your browser does not support the video tag.

Video 5.1: This video demonstrates the practical application of the RECHARGE Trimmer for various grooming tasks.

Your browser does not support the video tag.

Video 5.2: This video showcases the Supreme Trimmer in action, demonstrating its effectiveness for professional grooming.

Your browser does not support the video tag.

Video 5.3: This video features the Supreme Trimmer in use, highlighting its precision and ease of handling.

## 6. MAINTENANCE

### 6.1 Cleaning the Blades

Regular cleaning ensures optimal performance and longevity of your trimmer. Follow these steps:

1. Remove any hair or debris from the blades using the provided cleaning brush.
2. For a deeper clean, remove the blade and soak it in a blade wash solution (not included).
3. Thoroughly dry the blades before reattaching them securely to the trimmer.

## KEEP IT CLEAN:

REMOVE ANY HAIR OR DEBRIS.



FOR A DEEPER CLEAN, REMOVE THE BLADE AND SOAK IN BLADE WASH



THOROUGHLY DRY THE BLADES THEN REATTACH THEM SECURELY



Image 6.1: Blade Cleaning Steps.

### 6.2 Blade Replacement

It is recommended to replace trimmer blades every 6-12 months, depending on usage. Sharp blades prevent uneven cuts, reduce pulling, and extend the trimmer's lifespan.

## PRO TRIP:

REPLACE TRIMMER BLADES EVERY 6-12 MONTHS DEPENDING ON USAGE. SHARP BLADES PREVENT UNEVEN CUTS, REDUCE PULLING, AND EXTEND THE CLIPPER'S LIFESPAN



Image 6.2: Recommended Blade Replacement.

## 7. TROUBLESHOOTING

If you encounter issues with your Supreme Trimmer Recharge ST777, consider the following common solutions:

- **Trimmer not turning on:** Ensure the battery is fully charged and properly inserted. Try swapping with the second battery.
- **Reduced cutting performance:** Clean the blades thoroughly to remove any hair or debris. Apply a drop of blade oil. If performance does not improve, consider replacing the blades.
- **Blades getting hot:** Ensure blades are clean and lubricated. Excessive friction from dirty or unlubricated blades can cause heat. Allow the trimmer to cool down before resuming use.
- **Charging issues:** Verify that the USB-C cable is securely connected to both the trimmer/dock and the power source. Check if the power source is active.

## 8. SAFETY INFORMATION

Please read and adhere to the following safety guidelines:

- Avoid using on infants.
- Keep away from water sources to prevent electrical hazards.
- Follow recommended cleaning and maintenance procedures to ensure safe operation.
- Use with caution to prevent skin irritation or eye injury from cutting blades.
- Do not attempt to disassemble or repair the trimmer yourself. Contact customer support for assistance.

## 9. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	ST777
Brand	Supreme Trimmer

Motor Speed	7500-8000 RPM
Blades	Zero-Gap DLC Blades (TB440 standard)
Battery Type	NRG1200 Lithium (2 included)
Runtime per Battery	Up to 2 hours
Charging Options	Smart Charging Dock, Direct USB-C
Power Source	Battery Powered; Corded/Cordless
Item Weight	0.96 Kilograms
Recommended Uses	Beard, Face, Head, Mustache, Neck

## 10. SUPPORT & PROTECTION PLANS





For any product inquiries, technical support, or warranty information, please contact Supreme Trimmer customer service. Additionally, protection plans are available for purchase to extend coverage for your device:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases

Please refer to the specific terms and conditions of each protection plan for full details.

© 2025 Supreme Trimmer. All rights reserved.
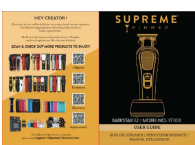
## Related Documents - ST777

	<a href="#">Supreme Trimmer DARKSTAR 82 User Guide &amp; Technical Specifications</a> Comprehensive user guide for the Supreme Trimmer DARKSTAR 82 (Model ST800), detailing features, operation, maintenance, technical specifications, and warranty information.
	<a href="#">Supreme Trimmer Vader Clipper &amp; Trimmer User Manual</a> Comprehensive user manual for the Supreme Trimmer Vader Clipper (STC5098) and Vader Trimmer (ST3778), detailing features, accessories, operation, charging, safety warnings, and warranty information.
	<a href="#">Supreme Trimmer STC779 Rechargeable Hair Clipper User Manual &amp; Guide</a> Comprehensive user manual for the Supreme Trimmer STC779, detailing features, operation, accessories, maintenance, and warranty information for this professional cordless hair clipper.
	<a href="#">Supreme Trimmer Darkstar 72 User Guide &amp; Warranty Information</a> Comprehensive user guide for the Supreme Trimmer Darkstar 72 (Model ST 700), covering features, accessories, technical specifications, operation, and warranty information. Learn how to use and maintain your high-performance cordless hair trimmer.



[Supreme Trimmer DARKSTAR 72 User Guide - Models STC72 & ST700](#)

Comprehensive user guide for the Supreme Trimmer DARKSTAR 72, covering features, operation, accessories, technical specifications, blade information, safety warnings, and warranty details for models STC72 and ST700.



[Supreme Trimmer DARKSTAR 82 User Guide](#)

User guide for the Supreme Trimmer DARKSTAR 82, providing setup instructions, maintenance tips, and warranty information for this professional hair clipper.