

[manuals.plus](#) /

› [Hello Kitty](#) /

› [Hello Kitty Ambient Light Clock HKCLKPROJ01 User Manual](#)

Hello Kitty HKCLKPROJ01

Hello Kitty Ambient Light Clock

Model: HKCLKPROJ01 | Brand: Hello Kitty

1. PRODUCT OVERVIEW

The Hello Kitty Ambient Light Clock combines a digital time display with a soft, ambient projection light. It features a multi-alarm function and projects Hello Kitty-inspired hearts, stars, and bows. This USB-powered device is designed for use on a nightstand, desk, or shelf, serving as both a decorative item and a practical alarm clock.

Key Features:

- **Charming Hello Kitty Design:** Integrates the iconic Hello Kitty character into its aesthetic.
- **Ambient Projection Light:** Projects soft lights with heart, star, and bow patterns onto surrounding surfaces.
- **Multi-Alarm Functionality:** Allows setting of multiple alarms for scheduling.
- **USB-Powered:** Conveniently powered via a USB connection.



Image 1.1: The Hello Kitty Ambient Light Clock displaying time and projecting patterns.

2. WHAT'S IN THE Box

- Hello Kitty Ambient Light Clock (includes integrated Hello Kitty figure, clock, and ambient projection light)
- USB Power Cable

3. SETUP

3.1 Initial Setup

1. **Unpack:** Carefully remove the Hello Kitty Ambient Light Clock and its accessories from the packaging.
2. **Insert Batteries (Optional):** For backup power or portable use, open the battery compartment (typically on the bottom or back) and insert the required batteries (e.g., AAA batteries, not included). Ensure correct polarity.
3. **Connect Power:** Plug the provided USB power cable into the clock's USB port and connect the other end to a compatible USB power adapter (not included) or a powered USB port.

4. **Placement:** Place the clock on a stable, flat surface such as a nightstand, desk, or shelf.

Video 3.1: Demonstration of the Hello Kitty Ambient Light Clock, including battery installation and light activation.

4. OPERATING INSTRUCTIONS

4.1 Setting Time and Date

Refer to the buttons on the back or bottom of the clock. Typically, there is a 'SET' or 'MODE' button to enter setting mode and '+' / '-' buttons to adjust values. Press 'SET' repeatedly to cycle through time (hours, minutes), date (year, month, day), and 12/24-hour format settings. Use '+' / '-' to change the flashing value.

4.2 Setting Alarms

The clock supports multiple alarms. Locate the 'ALARM' or 'AL' button. Press it to view alarm settings. Use 'SET' or 'MODE' to select which alarm to set (e.g., AL1, AL2) and then use '+' / '-' to set the desired alarm time. Activate or deactivate alarms using a dedicated switch or button.

4.3 Ambient Light and Projection Control

The ambient light and projection feature can be activated and controlled via a button, often located on the top or side of the clock. Pressing this button typically cycles through different light colors or modes, and activates the projection of hearts, stars, and bows. Hold the button to turn the light off.



Image 4.1: The ambient light and projection feature in operation.

5. MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If using batteries, replace them when the display dims or functions become unreliable. Ensure the clock is disconnected from USB power before replacing batteries.
- **Storage:** Store the clock in a cool, dry place when not in use for extended periods.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Clock display is blank or dim.	No power or low batteries.	Ensure USB cable is securely connected to a powered source. If using batteries, replace them.
Time is inaccurate or falling behind.	Internal clock issue or low battery.	Replace batteries if applicable. Reset the time. If the issue persists, contact customer support.

Issue	Possible Cause	Solution
Ambient light/projection is not working.	Light function is off or unit is not powered.	Ensure the clock is powered. Press the light control button to activate or cycle through modes.
Alarm does not sound.	Alarm is not set or volume is too low.	Verify alarm time and activation. Check alarm volume settings.

7. SPECIFICATIONS

Feature	Detail
Model Number	HKCLKPROJ01
Product Dimensions	1 x 1 x 1 inches
Item Weight	6.7 ounces
Power Source	USB-Powered (Optional batteries for backup)
Manufacturer	Southern Telecom
Recommended Age	0 - 10 years

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Hello Kitty product support website. Keep your proof of purchase for any warranty claims.