

## Wahl 3025656

# Wahl Pro Series Rechargeable Eyebrow, Ear & Nose Hair Trimmer (Model 3025656) User Manual

Brand: Wahl

## 1. IMPORTANT SAFETY INFORMATION

For your safety and to ensure proper operation, please read and adhere to the following guidelines:

- Keep away from water sources.
- Do not use on infants.
- Always unplug the trimmer from the power source before cleaning.
- Avoid contact with eyes and skin.
- Always test the trimmer on a small area of skin before use to check for any adverse reactions.
- Always follow the recommended cleaning and maintenance procedures.

## 2. PRODUCT OVERVIEW

The Wahl Pro Series Rechargeable Eyebrow, Ear & Nose Hair Trimmer is a versatile grooming tool designed for precision and convenience. It features multiple interchangeable heads to address various facial hair trimming needs.

- **Multi-Purpose Trimmer:** Includes a precision trimming head for intricate detailing, a rotary head for hygienic nose and ear trimming, and a DualTech hair trimmer ideal for grooming eyebrows.
- **Extended Run Time:** Provides up to 2 hours of use on a full charge, suitable for multiple grooming sessions.
- **Hygienic Grooming:** Detachable stainless steel heads are easy to clean by rinsing with water.



Figure 1: The Wahl Pro Series Trimmer with its various attachments and charging cable.

This kit includes the main trimmer unit, multiple trimming heads, guide combs, a charging adapter, and a storage pouch for organized keeping of all accessories.

## KIT CONTENTS

all contents shown are included



Figure 2: All components included in the Wahl Pro Series Trimmer kit.

### 3. COMPONENTS AND ATTACHMENTS

The Wahl Pro Series Trimmer comes with specialized heads for different grooming tasks:

- **Rotary Trimming Head:** Designed for safe and hygienic removal of nose and ear hair.
- **DualTech Double-Sided Detail Trimmer:** Ideal for shaping eyebrows and precise detailing.
- **Precision Detail Attachment:** For intricate detailing around the beard and mustache.
- **Multi-Length Guide Comb:** Attaches to the DualTech trimmer head for up to 4 different eyebrow trimming lengths.
- **Small Detail Guide:** Attaches to the precision detail trimming head for intricate cutting lengths.



EAR



NOSE



BROW



DETAIL BEARD



**POWERFUL  
MULTI-PURPOSE DETAILER**  
for nose, eyebrow, and beard detailing

Figure 3: Visual representation of the trimmer's multi-purpose functionality for various facial hair areas.

# MULTI-ANGLE TRIMMING

double sided detail trimmer  
for trimming at any angle



The Brand Used  
By Professionals®

**DUALTECH®**  
**DETAIL HEAD**

Figure 4: The DualTech detail head allows for multi-angle trimming, enhancing precision and ease of use.

## UNIQUE TRIMMING ANGLE

for ultimate control and ease of use



Figure 5: The unique trimming angle of the DualTech head provides ultimate control for detailed grooming.



Figure 6: The detail trimmer guide comb offers four trimming lengths, adjustable by rotating the position before reattaching.

## 4. SETUP

### Charging the Trimmer

The Wahl Pro Series Trimmer is rechargeable and provides up to 2 hours of run time on a full charge. To charge the device:


1. Ensure the trimmer is turned off.
2. Connect the charging adapter to the trimmer's charging port.
3. Plug the adapter into a standard USA electrical outlet.
4. Allow the trimmer to charge fully before its first use.

## DETAIL TRIMMER GUIDE COMB


4 trimming lengths in one guide — simply rotate the position before reattaching



**TO USE THE GUIDE COMB:  
SIMPLY SLIDE THE GUIDE INTO THE  
NOTCHES ON THE TRIMMER**

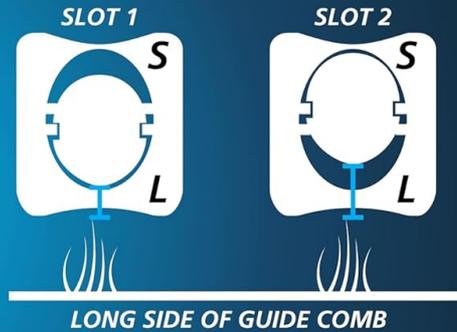

**LONG SIDE OF GUIDE COMB**

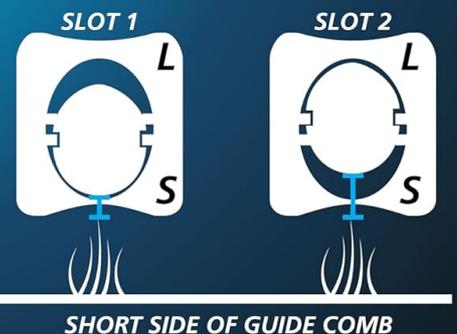

**SHORT SIDE OF GUIDE COMB**

Figure 7: The cordless rechargeable trimmer connected to its charging adapter.

### Attaching and Detaching Trimming Heads

To switch between different trimming heads:

1. Ensure the trimmer is turned off.
2. Gently twist and pull the current trimming head upwards to detach it from the trimmer body.
3. Align the desired trimming head with the trimmer body and push down, then twist slightly until it clicks securely into place.

## 5. OPERATING INSTRUCTIONS

### Nose and Ear Trimming

Use the rotary trimming head for nose and ear hair removal:

1. Attach the rotary trimming head.
2. Turn on the trimmer.
3. Gently insert the trimmer tip into the nostril or ear canal.

4. Move the trimmer in a circular motion to trim unwanted hair. Avoid inserting too deeply.



Figure 8: The nose/ear head is designed for hygienic and safe trimming of unwanted hair.

### **Eyebrow and Detail Trimming**

For eyebrows, beard, and mustache detailing, use the DualTech or precision detail heads:

1. Attach the DualTech or precision detail trimming head.
2. For eyebrows, attach the multi-length guide comb to achieve desired length (up to 4 settings).
3. For fine detailing around the beard or mustache, attach the small detail guide to the precision detail head.
4. Turn on the trimmer and gently glide it over the area to be trimmed, moving against the direction of hair growth.

## CORDLESS RECHARGEABLE TRIMMER

powerful cordless trimmer  
for convenient use anywhere



The Brand Used  
By Professionals®

Figure 9: The detail head is used for precise trimming in small areas such as around the beard, eyebrows, and mouth.

### Wet/Dry Use

This trimmer is designed for both wet and dry use, offering flexibility for your grooming routine. Ensure the device is properly sealed if using in wet conditions.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene:

1. Turn off and unplug the trimmer before cleaning.
2. Detach the trimming head from the trimmer body.
3. Rinse the detachable stainless steel heads under running water.
4. Allow the heads to air dry completely before reattaching or storing.
5. For the nose hair trimmer head, attach the included protective cap during storage to ensure longevity.

The Brand Used  
By Professionals®



## EASY TO CLEAN STAINLESS BLADES

wet/dry for easy cleanup

Figure 10: The stainless steel blades are designed for easy cleaning, suitable for both wet and dry use.

## 7. TROUBLESHOOTING

If you encounter any issues with your Wahl Pro Series Trimmer, please refer to the following general troubleshooting tips:

- **Trimmer not turning on:** Ensure the device is fully charged. Check the power switch for proper engagement.
- **Reduced trimming performance:** Clean the trimming heads thoroughly to remove any accumulated hair or debris. Ensure blades are properly attached.
- **Irritation during use:** Ensure the trimming heads are clean and free from damage. Use the trimmer gently and avoid pressing too hard against the skin.

For more detailed troubleshooting or persistent issues, please visit the official Wahl website or contact customer support.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	3025656
Brand	Wahl
Power Source	Battery Powered (Rechargeable)
Run Time	Up to 2 hours on a full charge
Item Weight	0.33 Kilograms (11.64 ounces)
Color	Black
Recommended Uses	Face (Eyebrow, Ear, Nose, Detail Trimming)
GTIN / UPC	043917017013

## 9. WARRANTY AND SUPPORT

### Warranty Information

For specific warranty details regarding your Wahl Pro Series Trimmer, please refer to the product packaging or the official Wahl website. Keep your proof of purchase for any warranty claims.

### Customer Support

If you require assistance, have questions about your product, or need to report an issue, please contact Wahl customer support. Contact information can typically be found on the product packaging or the official Wahl website.