



Manuals.plus /

› PINDOWS /

› PINDOWS Men's Analog Quartz Chronograph Watch User Manual

PINDOWS PDS-647

PINDOWS Men's Analog Quartz Chronograph Watch User Manual

Model: PDS-647

INTRODUCTION

Thank you for choosing the PINDOWS Men's Analog Quartz Chronograph Watch. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new timepiece. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.

PACKAGE CONTENTS

Your PINDOWS watch package should contain the following items:

- 1 x PINDOWS Men's Analog Quartz Chronograph Watch
- 1 x Product Manual (this document)
- 1 x Gift Box



Image: The black gift box included with your PINDOWS watch, featuring the PINDOWS logo in gold.

PRODUCT OVERVIEW



Image: Front view of the PINDOWS Analog Quartz Chronograph Watch with a white dial, brown leather strap, and three sub-dials.



Image: Side view of the PINDOWS watch case, highlighting the main crown and the two chronograph pushers. The PINDOWS Analog Quartz Chronograph Watch features a classic design with modern functionality. It includes a main time display, a stopwatch (chronograph) function, and a durable leather strap. The watch is designed for daily wear and is water-resistant.

SETUP

1. Setting the Time

1. Pull the crown (the knob on the side of the watch) out to the first click position.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its normal position to start the watch movement.

2. Adjusting the Strap

The genuine leather strap features a pin buckle clasp. To adjust the fit:

- Thread the strap through the buckle and insert the pin into the desired hole for a comfortable fit on your wrist.
- Ensure the watch is snug but not too tight, allowing for proper circulation.



Image: The PINDOWS watch worn on a male wrist, demonstrating its size and fit.

OPERATING INSTRUCTIONS

1. Chronograph (Stopwatch) Function

Your PINDOWS watch is equipped with a chronograph function for measuring elapsed time.

1. **Start:** Press the top pusher (button) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop/Pause:** Press the top pusher again to stop or pause the chronograph. The hands will hold their position, indicating the elapsed time.
3. **Reset:** While the chronograph is stopped, press the bottom pusher to reset all chronograph hands back to their zero positions.

2. Water Resistance

This watch is rated for 30 meters (3 ATM) of water resistance. This means it is suitable for daily use, such as:

- Accidental splashes
- Rain
- Hand washing

Important Water Resistance Guidelines:

- *Do not press any buttons or pull the crown while the watch is submerged in water.*
- *Not suitable for swimming, diving, snorkeling, or hot water activities (e.g., hot showers, saunas) as steam can penetrate the seals.*
- *Avoid exposing the watch to sudden temperature changes.*

3. Luminous Display

The watch features HD lighting technology on its hands and markers, which absorbs light energy during the day and emits a glow in low-light conditions for improved readability. The duration and intensity of the glow depend on the amount of light exposure.

MAINTENANCE

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt. For the leather strap, avoid excessive moisture and harsh chemicals.
- **Avoid Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, as these can damage the case, strap, or seals.
- **Temperature Extremes:** Avoid exposing the watch to extreme hot or cold temperatures, or sudden temperature changes, as this can affect accuracy and water resistance.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones) as they can affect the quartz movement's accuracy.
- **Battery Replacement:** When the watch stops or the second hand begins to jump erratically (indicating low battery), it is time for a battery replacement. This should be performed by a qualified watch technician to ensure proper sealing and function.
- **Storage:** When not in use for extended periods, store the watch in its original box or a soft pouch to protect it from dust and scratches.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Battery depleted	Replace battery (professional service recommended).
Time is inaccurate	Exposure to strong magnetic fields; Crown not fully pushed in	Move watch away from magnetic sources; Push crown fully in; If problem persists, seek professional service.
Condensation inside crystal	Exposure to extreme temperature changes or water ingress	Immediately seek professional service to prevent damage.
Chronograph hands not resetting to zero	Requires calibration	Refer to a watch technician for calibration if standard reset (bottom pusher) does not work.

SPECIFICATIONS

- **Brand:** PINDOWS
- **Model:** PDS-647
- **Movement:** Quartz
- **Dial Window Material:** PMMA
- **Case Material:** Alloy Steel
- **Strap Material:** Genuine Leather
- **Clasp Type:** Pin Buckle
- **Dial Diameter:** 1.81 inches (approx. 46 mm)
- **Case Thickness:** 0.55 inches (approx. 14 mm)
- **Strap Length:** 8.4 inches (approx. 21.3 cm)
- **Water Resistance:** 30M (3 ATM) - Splash/Rain Resistant
- **Features:** Chronograph (Stopwatch), Luminous Hands/Markers

- **Package Dimensions:** 3.66 x 3.58 x 3.03 inches
- **Item Weight:** 5.29 ounces



Image: Rear view of the PINDOWS watch, displaying the stainless steel case back with engravings for water resistance and model number (PL-647, likely PDS-647).

WARRANTY AND CUSTOMER SUPPORT

PINDOWS is committed to providing a satisfactory shopping experience. For any issues or dissatisfaction with your watch, please refer to your purchase documentation for specific warranty terms and conditions. For customer service inquiries, support, or to report any problems with your watch, please contact PINDOWS customer service through the retailer where the product was purchased or visit the official PINDOWS brand store online. Please have your model number (PDS-647) and purchase details ready when contacting support.

Note: Warranty terms may vary by region and retailer. Always retain your proof of purchase.