

Edifier A6

Edifier A6 Open-Ear Headphones User Manual

MODEL: A6

Brand: Edifier

1. INTRODUCTION

Thank you for choosing the Edifier A6 Open-Ear Headphones. These wireless earbuds are designed to provide a comfortable listening experience with high-fidelity audio, clear calls, and robust connectivity. This manual will guide you through the setup, operation, and maintenance of your new headphones.

2. PACKAGE CONTENTS

- Edifier A6 Open-Ear Earbuds (Left and Right)
- Charging Case
- Type-C Charging Cable
- User Manual (this document)



Image: Edifier A6 Open-Ear Headphones and their charging case, showcasing the product's primary components.

3. PRODUCT FEATURES

- **Premium Sound Quality:** Equipped with 14.2mm customized dynamic drivers, supporting LDAC Hi-Res Audio Wireless, AAC, and SBC codecs for rich, detailed sound.
- **AI Call Noise Cancellation:** Each earphone features 2 built-in microphones and advanced AI noise-cancellation technology for clear hands-free calls.
- **Long Battery Life:** Up to 10 hours of playtime on a single charge, extended to 40 hours with the charging case, and supports fast charging.
- **Multipoint Connection & Bluetooth 5.4:** Seamlessly switch between two connected devices simultaneously with the latest Bluetooth V5.4 for stable and fast transmission.
- **Comfortable Open-Ear Design:** Secure and comfortable fit for extended listening, featuring rotatable ear hooks for customized adjustment (up to 40 degrees rotation).
- **IP55 Dust and Water Resistant:** Durable design ensures reliable performance in various environments.
- **EDIFIER ConneX App:** Personalize control settings, customize EQ, find your earbuds, and access more

functions via the dedicated mobile application.

Secure Fit, Boundless Sound



Image: An exploded view diagram highlighting the 14.2mm dynamic drivers and indicating support for Hi-Res Audio Wireless and LDAC codecs, emphasizing sound quality.

Enhanced Clarity for Every Call



Image: A person wearing the Edifier A6 headphones, with an overlay diagram illustrating the 2+2 microphone setup for enhanced call noise reduction.

Long-Lasting Power

15 [⚡]mins = **3** [🔋]hrs

10 ^{Playtime}hrs

40 ^{With case}hrs



Image: The Edifier A6 charging case connected to a USB-C cable, with text indicating 15 minutes of charge provides 3 hours of playtime, 10 hours playtime for earbuds, and 40 hours total with the case.

IP55

Dust and Water Resistant



Image: A woman wearing the Edifier A6 headphones, with an icon indicating IP55 dust and water resistance, suggesting suitability for active use.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the Edifier A6 headphones and their charging case. Connect the provided Type-C charging cable to the charging port on the case and a USB power source. The indicator light on the case will show charging status.

4.2 Bluetooth Pairing

1. Ensure the earbuds are in the charging case and the case lid is open.
2. On your device (smartphone, laptop, etc.), enable Bluetooth.
3. Search for "EDIFIER A6" in the list of available Bluetooth devices and select it to connect.
4. Once connected, you will hear an audible confirmation.

Multipoint Connection: The Edifier A6 supports connecting to two devices simultaneously. After connecting to the first device, disable Bluetooth on that device. Then, connect the headphones to the second device. Re-enable Bluetooth on the first device, and the headphones will automatically connect to both. You can then effortlessly switch audio sources between the two paired devices.

Your browser does not support the video tag.

Video: An official product video demonstrating the setup, pairing, and key features of the Edifier A6 Open-Ear Headphones, including stable Bluetooth 5.4 connectivity and multipoint pairing.



Image: The Edifier A6 headphones and charging case positioned between a smartphone and a laptop, illustrating the multipoint pairing capability for seamless switching between devices.

4.3 EDIFIER ConneX App Installation

For enhanced functionality and customization, download the "EDIFIER ConneX" app from your device's app store (Google Play Store for Android, Apple App Store for iOS). Once installed, open the app and follow the on-screen instructions to connect your Edifier A6 headphones.

EDIFIER ConneX App



EDIFIER ConneX

Find your device
Shutdown timer
Control settings
User manual
Rename your device
Preset EQs options

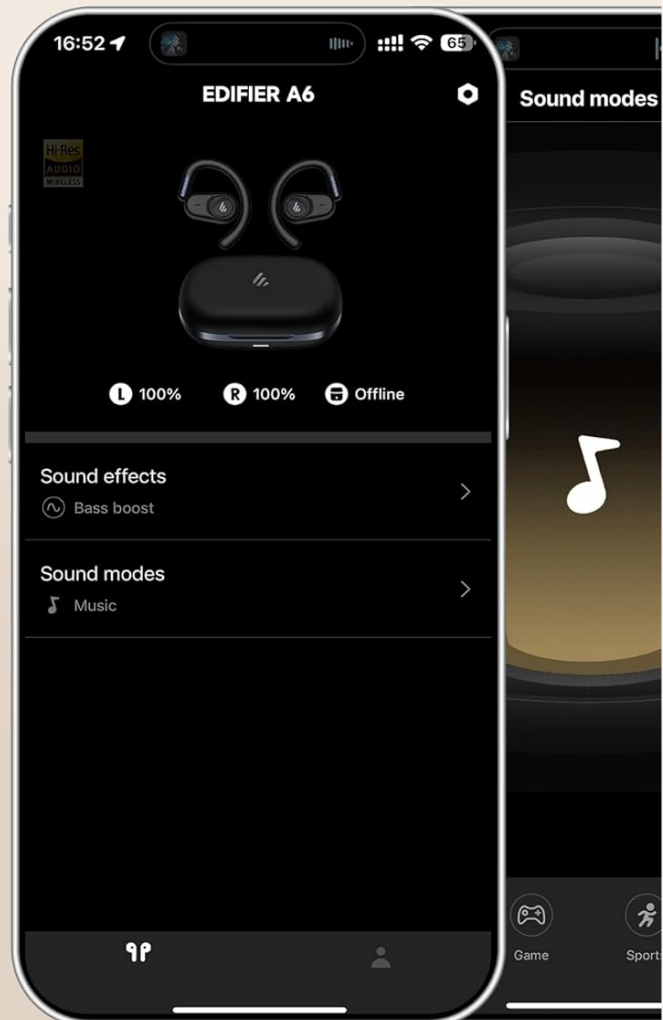 


Image: A smartphone displaying the EDIFIER ConneX App interface, showing options for sound effects, sound modes, and device status, with the Edifier A6 earbuds and case in the foreground.

5. OPERATING INSTRUCTIONS

5.1 Wearing the Earbuds

Gently place the ear hook over your ear, ensuring the earbud speaker is positioned comfortably near your ear canal. The ear hooks are rotatable up to 40 degrees to provide a customized and secure fit for different ear shapes and sizes.

Adjustable Fit, Open-ear Comfort



Image: A visual guide demonstrating the left and right Edifier A6 earbuds and their adjustable ear hooks, highlighting the 40-degree rotation feature for a comfortable and secure open-ear fit.

5.2 Touch Controls

The Edifier A6 headphones feature intuitive touch controls on each earbud. Refer to the table below for common operations:

Function	Action
Answer/End a Call	Double tap either earbud
Reject a Call	Triple tap either earbud
Pause/Play Music	Double tap either earbud
Next Track	Triple tap right earbud
Previous Track	Triple tap left earbud

Function	Action
Volume Up	Press and hold right earbud
Volume Down	Press and hold left earbud

5.3 Sound Modes (via EDIFIER ConneX App)

The EDIFIER ConneX App allows you to customize your listening experience with various sound modes and EQ settings. Explore options such as:

- **Music Mode:** Optimized for general music listening.
- **Game Mode:** Reduces audio latency for a more synchronized gaming experience.
- **Sports Mode:** Enhances certain frequencies for outdoor activities.
- **Spatial Sound:** Provides an immersive, three-dimensional audio experience.

6. MAINTENANCE

6.1 Cleaning

Regularly clean your Edifier A6 headphones and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or chemical solvents. Keep the charging contacts on both the earbuds and the case free from dust and debris.

6.2 Storage

When not in use, store the earbuds in their charging case to protect them and ensure they remain charged. For long-term storage, charge the earbuds and case fully at least once every three months to preserve battery health.

6.3 Water and Dust Resistance (IP55)

The Edifier A6 headphones are rated IP55 for dust and water resistance. This means they are protected against limited dust ingress and low-pressure water jets from any direction. While they can withstand sweat and light rain, they are not designed for submersion in water. Ensure the earbuds are dry before placing them back into the charging case to prevent damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from earbuds	Earbuds not paired; low battery; volume too low.	Ensure earbuds are paired correctly. Charge earbuds and case. Increase device volume.
Cannot pair with device	Bluetooth off; earbuds not in pairing mode; interference.	Ensure Bluetooth is on. Place earbuds in case, open lid to enter pairing mode. Move away from other wireless devices.
One earbud has no sound	Earbuds not properly connected to each other.	Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid again. This should re-sync them.
Charging case not charging	Cable issue; power source issue.	Try a different USB-C cable or power adapter. Ensure connections are secure.
App not connecting to earbuds	Bluetooth not enabled; app permissions.	Ensure Bluetooth is enabled and earbuds are connected to your phone. Check app permissions in your phone settings.

8. SPECIFICATIONS

Feature	Detail
Model Name	A6
Connectivity Technology	Wireless (Bluetooth 5.4)
Audio Driver Type	Dynamic Driver
Audio Driver Size	14.2 Millimeters
Frequency Response	20 Hz - 40,000 Hz
Battery Life (Earbuds)	Up to 10 hours
Total Battery Life (with Case)	Up to 40 hours
Water Resistance Level	IP55 (Dust and Water Resistant)
Ear Placement	Open Ear
Earpiece Shape	Hook
Control Type	App Control / Touch Control
Compatible Devices	Smartphones, Laptops, Tablets, Smart TVs, Cars
Item Weight	5.6 ounces
Manufacturer	Edifier

9. WARRANTY AND SUPPORT

For detailed warranty information, product registration, and technical support, please visit the official Edifier website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims. Official Edifier Website: www.edifier.com



Comfo Q
H006 (EOP20006)
Open-ear True Wireless Earbuds

Manual



EN 1. Power ON/OFF



Open or close the case to power on/off

2. First pairing



1. Once powered on, the earbuds will automatically enter Bluetooth pairing mode.
2. Select "EDIFIER Comfo Q" from your device list to connect.

3. Pairing for new device



1. Place the earbuds in the case and keep it open.
2. Press and hold the button on the case for 3s until white and orange LED flash.
Note: For subsequent use, the earbuds will automatically connect to the device used last time.

4. Multipoint connection



1. Pair device A with the earbuds manually and keep the earbuds in the case.
2. Pair with Bluetooth pairing and select "EDIFIER Comfo Q" in device B settings to connect.
3. Select "EDIFIER Comfo Q" again in device A settings to complete the multipoint connection.
Note: For subsequent use, the earbuds will automatically reconnect to the use device used last time.

5. Reset/left & right connection



1. Place the earbuds in the case and keep it open.
2. Press the button on the case 3 times, white LED will blink until the light is complete.
Note: This operation will clear pairing records, reconnect left & right earbuds and restore factory settings.

6. Charging



Input: 5V --- 200mA (Earbuds) 5V --- 1A (Charging case)
Note: Make sure the USB port is completely dry before charging.

7. Controls



Note:
1. "X" enables tap, "X" triple tap;
2. Download EDIFIER Control App to customize more control settings.

[Edifier Comfo Q True Wireless Earbuds User Manual | Pairing, Controls, Reset](#)

Comprehensive user manual for the Edifier Comfo Q open-ear true wireless earbuds. Learn how to pair, connect to multiple devices, reset, charge, and customize controls.



W80

Wireless Noise Cancelling Over-Ear Headphones
Model: E27280204

Manual (BC)

EN 1. Power ON/OFF



Press and hold the power button to power on/off.

2. First pairing



1. Once powered on, the headphones will automatically enter Bluetooth pairing mode.
2. Select "EDIFIER W80" from your device list to connect.

3. Pairing for new device



1. In ON state, press and hold the "H" button for about 3 seconds to enter Bluetooth pairing mode.
2. Select "EDIFIER W80" from your device list to connect.

4. Controls

Call



Music



Mode



1. Press the "H" button once to enter pairing mode.
2. Press and hold the "H" button for 3 seconds to enter Bluetooth pairing mode.
3. Press and hold the "H" button for 5 seconds to enter Bluetooth pairing mode.
4. Press and hold the "H" button for 10 seconds to enter Bluetooth pairing mode.

5. Multipoint connection



1. Pair device A with the headphones successfully.
2. Press and hold the "H" button for 3 seconds to enter Bluetooth pairing mode, and then select "EDIFIER W80" in device A settings to connect.
3. Select "EDIFIER W80" again in device A settings to complete the multipoint connection.

6. Wired Listening



 
Connect the 3.5mm audio cable to the headphones.
The wired connection will automatically disable Bluetooth mode.

7. Reset



1. In ON state, press the "H" and "H" buttons for 5 seconds. LED will flash white and the reset is complete.
2. Then the headphones will automatically enter Bluetooth pairing mode.

8. Charging

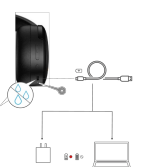

Input: 5V=1A
Connect the headphones to a power source via the USB-C cable for charging.
Note: Please use the USB-C port to connect the headphones for charging.

Edifier W80 Wireless Noise Cancelling Over-Ear Headphones User Manual

User manual for the Edifier W80 wireless noise-cancelling over-ear headphones, covering power on/off, Bluetooth pairing, call and music controls, volume adjustment, mode selection, multipoint connection, wired listening, resetting the device, and charging instructions.



WH950NB

Wireless Noise Cancelling Over-ear Headphones
Model: EDP200214

Manual (BC)

EN 1. Power ON/OFF



Press and hold the power button to power on/off.

2. First pairing



1. Once powered on, the headphones will automatically enter Bluetooth pairing mode.
2. Select "EDIFIER WH950NB" from your device list to connect.

3. Pairing for new device



1. In ON state, press and hold the "M" button for about 3 seconds to enter Bluetooth pairing mode.
 2. Select "EDIFIER WH950NB" from your device list to connect.
- Note: For subsequent use, the headphones will automatically connect to the device used last time.

4. Controls

• Call



• Music



• Mode



Note:
1. When you hold the "M" button for 3 seconds, the headphones will enter Bluetooth pairing mode.
2. Press and hold the "M" button for 3 seconds to enter Bluetooth pairing mode.
3. Press and hold the "M" button for 3 seconds to enter Bluetooth pairing mode.

5. Multipoint connection



1. Pair device A with the headphones successfully.
 2. Press and hold the "M" button for 3 seconds to enter Bluetooth pairing mode, and then select "EDIFIER WH950NB" in device B settings to connect.
 3. Select "EDIFIER WH950NB" again in device A settings to complete the multipoint connection.
- Note: The headphones will automatically reconnect to the last device used last time.

6. Wired listening

Connect to the headphones via AUX audio cable.
Wired listening will automatically disable Bluetooth mode.

7. Reset

8. Charging



1. In ON state, press and hold the "M" button for 5 seconds. The LED will blink red and the headphones will enter pairing mode.
2. Then the headphones will automatically enter pairing mode.

9. Product description and accessories



Connect the headphones to a power source via the USB-C Cable for charging.

Connect the headphones to a power source via the USB-C Cable for charging.

Connect the headphones to a power source via the USB-C Cable for charging.

Connect the headphones to a power source via the USB-C Cable for charging.

Connect the headphones to a power source via the USB-C Cable for charging.

Connect the headphones to a power source via the USB-C Cable for charging.

Connect the headphones to a power source via the USB-C Cable for charging.

Connect the headphones to a power source via the USB-C Cable for charging.

Connect the headphones to a power source via the USB-C Cable for charging.

Connect the headphones to a power source via the USB-C Cable for charging.

- **Allumer:**
Maintenez le bouton d'alimentation appuyé pendant environ 3 secondes.
Le voyant bleu s'allume.
- **Éteindre:**
Maintenez le bouton d'alimentation appuyé pendant environ 3 secondes.
Le voyant rouge s'allume puis s'éteint.



3. Aufladen



- Ausbauen des Headsets
- Ziehen Sie das Headset vom Lade- und Transportkoffer aus.
- Ziehen Sie das Headset vom Lade- und Transportkoffer aus.
- Ziehen Sie das Headset vom Lade- und Transportkoffer aus.

Eintrag 10 von 15



Achtung: Die Ladung des Headsets ist nur für den Notfall zu verwenden. Bitte verwenden Sie das Headset nur im Notfall. Bitte verwenden Sie das Headset nur im Notfall.

4. Bedienungsanleitung

• Bluetooth-Kopplung



- Ziehen Sie bei der ersten Anwendung des Headsets etwa 3 Sekunden lang gedrückt, um das Headset einzuschalten. Das Headset und das Headset werden automatisch und automatisch automatisch.
- Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.
- Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.

- Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.
- Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.
- Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.



• Anrufe tätigen



• Moduswechsel/Bluetooth-Kopplung



5. FAQs

Achtung: Die Ladung des Headsets ist nur für den Notfall zu verwenden. Bitte verwenden Sie das Headset nur im Notfall. Bitte verwenden Sie das Headset nur im Notfall.

Kurz-Taste
- Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.

Die Ladung des Headsets ist nur für den Notfall zu verwenden. Bitte verwenden Sie das Headset nur im Notfall. Bitte verwenden Sie das Headset nur im Notfall.

Während der Ladung des Headsets ist nur für den Notfall zu verwenden. Bitte verwenden Sie das Headset nur im Notfall. Bitte verwenden Sie das Headset nur im Notfall.

Während der Ladung des Headsets ist nur für den Notfall zu verwenden. Bitte verwenden Sie das Headset nur im Notfall. Bitte verwenden Sie das Headset nur im Notfall.

6. Wartung

- Wenn Sie das Produkt längere Zeit nicht verwenden, laden Sie das Produkt mit dem Ladegerät auf. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.

- Wenn Sie das Produkt längere Zeit nicht verwenden, laden Sie das Produkt mit dem Ladegerät auf. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.

- Wenn Sie das Produkt längere Zeit nicht verwenden, laden Sie das Produkt mit dem Ladegerät auf. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.

- Wenn Sie das Produkt längere Zeit nicht verwenden, laden Sie das Produkt mit dem Ladegerät auf. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.

- Wenn Sie das Produkt längere Zeit nicht verwenden, laden Sie das Produkt mit dem Ladegerät auf. Ziehen Sie das Headset aus dem Koffer aus. Ziehen Sie das Headset aus dem Koffer aus.

Model: ED300005

Edifier International Limited
P.O. Box 4354
General Post Office
Hong Kong

www.edifier.com
©2021 Edifier International Limited. Alle Rechte vorbehalten.
Gebäude in China

HINWEIS:
Aufgrund notwendiger technischer Verbesserungen und
Systemaktualisierungen können die herein enthaltenen
Informationen jederzeit und ohne vorherige Ankündigung geändert
werden.

Produkte von Edifier werden für verschiedene Anwendungen
entsprechend angepasst. Die in dieser Bedienungsanleitung
enthaltenen Bilder und Abbildungen können sich von denen des
tatsächlichen Produkts geringfügig unterscheiden. Der vorhandene
Unterschied ist das tatsächliche Produkt maßgebend.

IT 1. Descrizione del prodotto e accessori



Accessori: Auricolare x1, Cavo di ricarica x1, Custodia per l'auricolare x1

Note:

- Il prodotto deve essere utilizzato e caricato solo con il cavo di ricarica fornito.

- Per ricaricare il prodotto, collegare il cavo di ricarica al cavo di alimentazione e al cavo di ricarica.

2. Accensione/accensione

• Accensione:
- Premere il tasto di accensione (il pulsante di accensione per circa 3 secondi, si
- Accensione).

• Accensione:
- Premere il tasto di accensione (il pulsante di accensione per circa 3 secondi, si
- Accensione).

 


3. Carica



Avvertenza: Le batterie ricaricabili che alimentano questo prodotto devono essere smaltite in modo appropriato per un corretto riciclaggio. Non smaltire le batterie nel fuoco al fine di prevenire esplosioni.

• **Conexiones Bluetooth.**



- Quando le cuffie sono accese, premere e tenere premuti pulsanti "+" e "-" contemporaneamente per circa 5 secondi fino a quando la luce blu lampeggia rapidamente per sei volte per cancellare i registri di accoppiamento.

- Aumentare volume: premere una sola volta
- Brano successivo: premere e tenere premuta
- Pausa/riproduzione: premere una sola volta
- Assistente vocale: doppia pressione
- Diminuzione volume: premere una sola volta
- Brano precedente: premere e tenere premuta

- Accettare/terminare una chiamata: premere una sola volta
- Rifiutare una chiamata: doppio pressione

- Interruttore modalità: premere una sola volta
- Modalità del suono ambientale
- Modalità di cancellazione del rumore
- Modalità standard
- Modalità gioco: doppia pressione
- Accoppiamento Bluetooth: tenere premuto per 3 secondi

La luce rossa lampeggia anziché quella blu.
• Gli auricolari hanno un livello di carica bassa della batteria, ricaricare gli cuffie.

Nessuna emissione audio

- Verificare se gli cuffie sono funzionanti.
- Verificare se il volume degli cuffie è a un livello udibile.
- Verificare che gli cuffie siano collegati correttamente al telefono cellulare.
- Verificare se gli cuffie sono posizionati entro un raggio d'azione standard.

L'effetto chiamata degli cuffie non funziona.

- Verificare se il telefono cellulare si trova in un'area coperta da una portata di segnale sufficiente.
- Accertarsi che gli cuffie siano a distanza utile (10 m) e che non vi siano ostacoli tra gli cuffie e il telefono cellulare.

Quando si riproduce un brano musicale, non è possibile gestire le modalità pausa, riproduzione, traccia precedente/ successiva tramite il controller degli asincroni.

- Assicurarsi che il dispositivo accetti supporti il profilo HiFi/HiFi+ via Remote Control Profile (profilo telecomando audio video).

- I prodotti che contengono batteri al vivo devono essere coltivati una volta ogni 3 mesi se il prodotto non viene utilizzato per lungo tempo.
- Conservare il prodotto al riparo da umidità, umidità per evitare di danneggiarlo.

- Il prodotto che causa guasti ripetitivi di lunga durata deve essere sostituito (una volta ogni 3 mesi) se il prodotto non viene utilizzato per lungo tempo.
- Conservare il prodotto al riparo da umidità umida per evitare di danneggiare la circuitria interna.
- Non usare il prodotto in luoghi esposti a inquinamento interno diretto (ad esempio, in presenza di aerosol di vernice). La contaminazione elevata riduce la durata dei componenti elettronici, danneggia la batteria e deforma i cavi e i componenti in plastica.
- Non lasciare il prodotto in ambienti freddi al fine di evitare di danneggiare la scheda della circuitria interna.
- Non usare il prodotto in ambienti dove il prodotto subisce danni gravi o moltiplicati da persone non specializzate.
- Non far cadere, scioccare energicamente, colpire il prodotto con oggetti duri al fine di evitare di danneggiare la circuitria interna.
- Non usare il prodotto in presenza di agenti inquinanti che aggraveranno il problema.
- Non utilizzare oggetti appuntiti per graffiare la superficie del prodotto al fine di evitare di danneggiare il rivestimento e compromettere l'aspetto estetico.

Edifier International Limited
P.O. Box 6264
General Post Office
Hong Kong

www.edifier.com
©2021 Edifier International Limited. Tutti i diritti riservati.
Stampato in Cina

COMUNICAZIONE

Per necessità di miglioramenti tecnici e aggiornamenti del sistema le informazioni qui contenute possono essere soggette a modifiche periodiche senza preavviso.
I prodotti IDFER verranno personalizzati per applicazioni diverse.
Le immagini mostrate in questo manuale possono differire leggermente dal prodotto reale. In caso di eventuali differenze, prevale il prodotto reale.

_____ Botão multifunções

_____ Porta de carregamento

Acessórios: Fone de ouvido x1, Cabo de carregamento x1, Manual do usuário x1

Nota:

 
- As imagens são apenas ilustrativas e podem diferir do produto real.
- Para desligar o Hi-Fi Res Audio, conecte este fone de ouvido a dispositivos de saída de áudio com um cabo de áudio Tipo-C.

« Ligar:
Pressione e segure o botão de energia por cerca de 3 segundos, e a luz azul acenderá.





4. Guia de funcionamento



e Reprodução de Música



5. FAQs

A luz vermelha pisca em vez de luz azul.
- Indica que a bateria do fone de ouvido está baixa, recarregue-o.

Não é emitido nenhum som ao fone de ouvido.
- Verifique se o fone de ouvido está funcionando.
- Verifique se o volume do fone de ouvido está num nível adequado.
- Verifique se o fone de ouvido está corretamente conectado ao smartphone.
- Verifique se o fone de ouvido está dentro do intervalo de alcance normal.

A qualidade de chamada do fone de ouvido é ruim.
- Certifique-se de que o seu smartphone está dentro de uma zona com sinal forte.
- Certifique-se de que o fone de ouvido está dentro da distância efetiva (10m) e que não existem obstáculos entre o fone de ouvido e o smartphone.

As reproduções musicais não é possível controlar a pausa/reprodução/stop/avançar/retornar às seguintes através do fone de ouvido.
- Certifique-se de que o dispositivo empacotado suporta o perfil A2DP (suporte a reprodução de áudio sem fio).

6. Manutenção

- Se não for usado por longo período, carregue o produto com bateria de lítio a cada três meses.
- Mantenha o produto longe de locais húmidos para evitar que afete o circuito interno.
- Não carregue o produto em locais expostos ao sol ou com alta temperatura para evitar danos devido a variações de temperatura.
- Não carregue o produto com um carregador de corrente elétrica não especificado, como carregadores eletrônicos, *SmartCharg* à bateria e deflatores de componentes de plástico.
- Não carregue o produto em locais frios para evitar danos na placa de circuito interno.
- Não desmonte o produto. Se uma pessoa não profissional operar, não produzirá nenhum benefício.
- Não deixe car o produto, não o use fortemente e não baixe na produção com objetos duros para evitar danos no circuito interno.
- Não use produtos químicos e de limpeza drásticos para limpar o fone de ouvido.
- Não use acessórios para fones não reais a superfície do produto e evitar danos no revestimento exterior e afetar o som.

Model: EDF200046
Edifier International Limited
P.O. Box 6264
General Post Office
Hong Kong

www.edifier.com
©2021 Edifier International Limited. Todos os direitos reservados.
Impresso na China

AVISO:
Para a necessidade de melhoramento técnico e atualização do sistema, as informações contidas neste documento poderão ser sujeitas a alteração, periodicamente, sem aviso prévio.
Os produtos da EDIFOR serão personalizados para aplicações diferentes. As imagens e ilustrações apresentadas neste manual poderão ser ligeiramente diferentes do produto real. Se for encontrada qualquer diferença, prevalece o produto real.

JP 1. 製品の説明とアクセサリ



注記:

- 画像は参照用です。
- Hi-Res Audioを楽しむには、C型アークケーブルでこのヘッドセットをオーディオ出力デバイスに接続します。

2. オン/オフ

- オン:
電源ボタンを約3秒間長押しすると、青色ライトが点灯します。
- オフ:
電源ボタンを約3秒間長押しすると、青色ライトが点灯して、すぐに消えます。



警告: 本製品に電源を供給する充電式バッテリーは、正しくリサイクルして廃棄する必要があります。燃焼を防ぐために、バッテリーは火葬に投じないでください。

