

MUUEGM CDLY-LYZJ41-TS02-W-1106

MUUEGM 70-inch Fluted Sideboard TV Stand Instruction Manual

Model: CDLY-LYZJ41-TS02-W-1106

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your MUUEGM 70-inch Fluted Sideboard TV Stand. Please read these instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

Always assemble and mount the TV stand according to the provided instructions. Ensure your TV is properly secured and does not exceed the stand's weight limit. Be cautious of pinch points during assembly and use appropriate safety gear. Keep the area around the TV stand clear of flammable materials and ensure proper ventilation.

PRODUCT OVERVIEW

The MUUEGM 70-inch Fluted Sideboard TV Stand is designed to accommodate televisions up to 80 inches. It features a sturdy wood construction with a decorative laminate top, fluted door panels, and metal handles and legs. The unit includes spacious storage with adjustable shelves.

Dimensions

- Overall Dimensions: 15.75"D x 70"W x 25"H
- Weight: Approximately 95 Pounds

PRODUCT SIZE

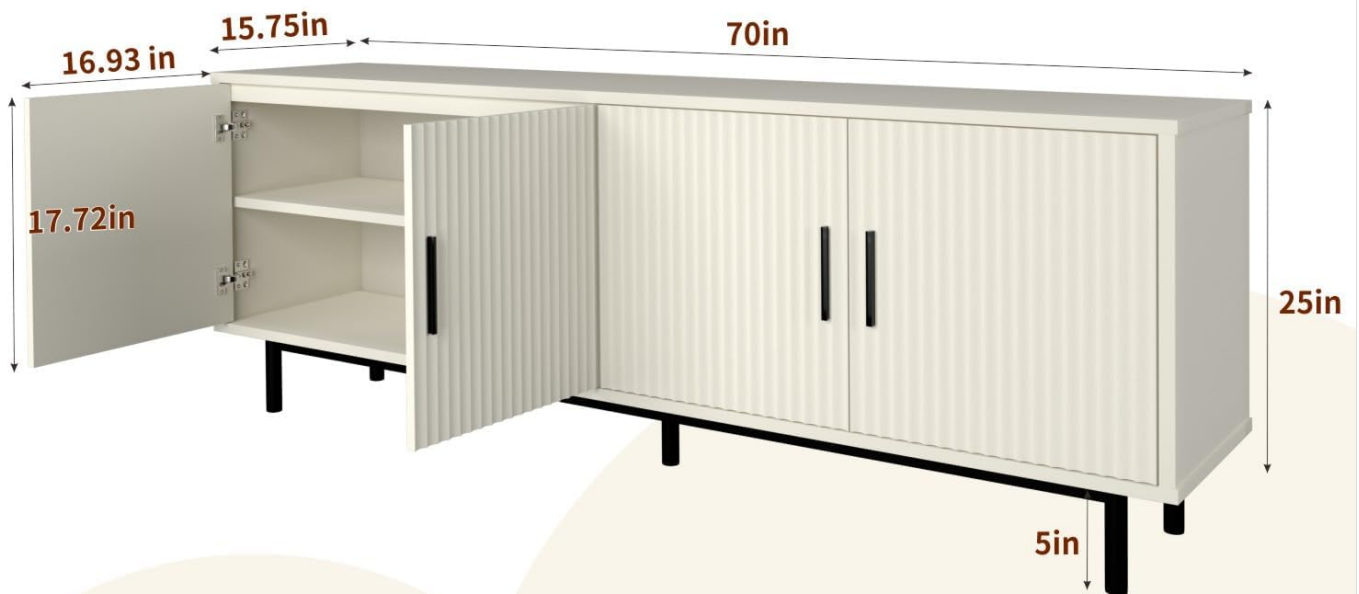


Image: Product dimensions diagram. This image illustrates the overall depth (15.75 inches), width (70 inches), and height (25 inches) of the TV stand, along with internal cabinet dimensions.

SETUP AND ASSEMBLY

Assembly of the MUUEGM TV Stand is required. The package includes all necessary parts and accessories, with each component clearly labeled. Follow the step-by-step instructions provided in the separate assembly guide for a straightforward setup. Ensure all connections are secure before placing items on the stand.

OPERATING INSTRUCTIONS

Adjusting Shelves

The TV stand features adjustable middle shelves within the storage cabinets. To adjust a shelf, carefully remove it from its current position. Reinsert the shelf into the desired height by aligning the shelf pins with the pre-drilled holes. Ensure the shelf is level and securely seated before placing items on it.

ADJUSTABLE SHELF

Freely to store items for different height.



Image: Adjustable shelf diagram. This image demonstrates the three possible height settings for the adjustable shelves within the cabinet, indicated by numbered positions and arrows.

MAINTENANCE

To maintain the appearance and longevity of your TV stand, regularly wipe surfaces with a soft, dry cloth. For spills, use a slightly damp cloth and dry immediately. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish. Keep the stand away from direct sunlight and excessive moisture.

The 5-inch clearance beneath the stand allows for easy cleaning, including access for robotic vacuums.

TROUBLESHOOTING


Adjusting Cabinet Doors/Hinges

If a cabinet door appears skewed or misaligned, adjustments can be made to the hinges. Refer to the diagram and video below for guidance.

1. Before adjusting the hinge, check if the cabinet itself is skewed.
2. If the skew cannot be repaired by hinge adjustment alone, remove the anti-tipping device (if installed) and then adjust the cabinet to a vertical position.

- 3. Adjust the hinge with the door open.
- 4. This operation requires more than one person: one person holds the door while the other adjusts the screws.

The Way to Adjust the Door

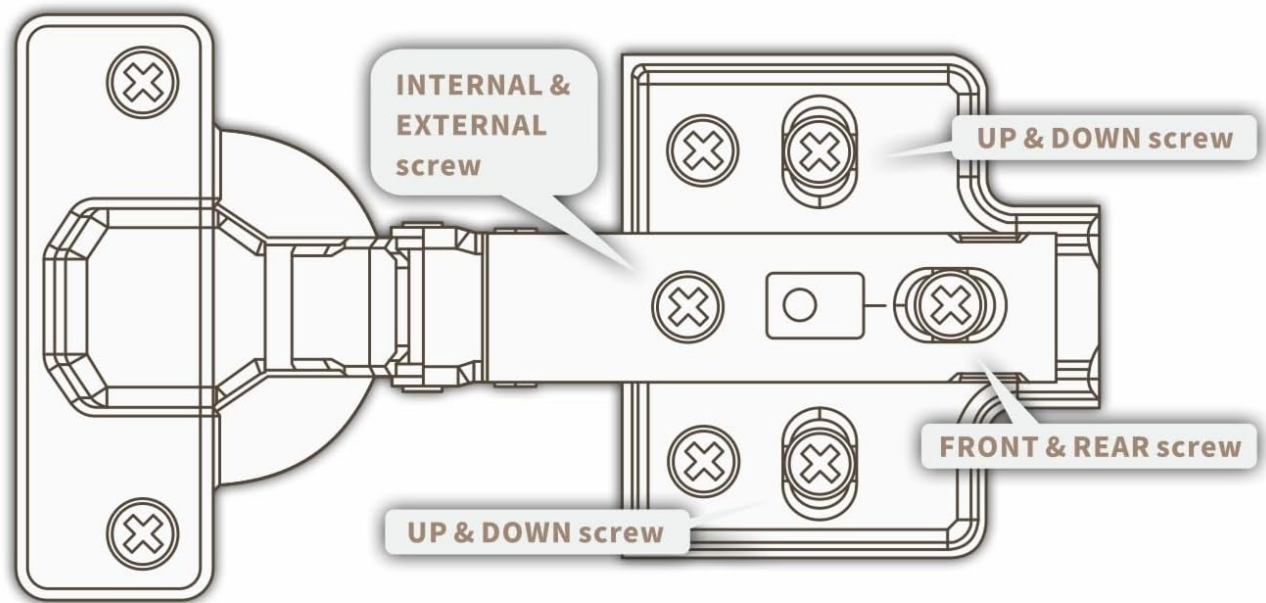

- ① Before adjusting the hinge, please check whether the cabinet is skewed.
- ② If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- ③ Please adjust the hinge with the door open.
- ④ Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.

Image: Hinge adjustment diagram. This diagram shows the location of the internal & external screw, up & down screw, and front & rear screw on a cabinet hinge for precise door alignment.

Your browser does not support the video tag.

Video: How to Adjust the Hinges. This video demonstrates the process of adjusting the hinges on the cabinet doors to correct alignment issues.

SPECIFICATIONS

Brand	MUUEGM
Model Number	CDLY-LYZJ41-TS02-W-1106

Color	White
Material	Wood
Top Material Type	Laminate
Product Dimensions (D x W x H)	15.75" x 70" x 25"
Item Weight	95 Pounds
Number of Shelves	3 (adjustable)
Mounting Type	Floor Mount
Assembly Required	Yes

WARRANTY

Please refer to your purchase documentation or contact the retailer for specific warranty information regarding this product. General warranties typically cover manufacturing defects for a limited period from the date of purchase.

CUSTOMER SUPPORT

For any questions, missing parts, or assistance with assembly or operation, please contact the seller or manufacturer directly. Refer to your purchase receipt or product packaging for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question