

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Saillong](#) /

› [Saillong Walking Pad Q1 Treadmill Remote Control Replacement Instruction Manual](#)

Saillong Walking Pad Q1 Remote Control Replacement

Saillong Walking Pad Q1 Treadmill Remote Control Replacement

Instruction Manual

1. PRODUCT OVERVIEW

This document provides instructions for the Saillong Treadmill Remote Control Replacement, designed exclusively for the Walking Pad Q1 treadmill. This remote allows for convenient control of your Walking Pad Q1, including starting, stopping, and adjusting speed.

Important: This remote control is ONLY compatible with the Walking Pad Q1 treadmill. It will NOT function with other treadmill brands or models.

Only Compatible with **Q1** Walking Pad



Image: Saillong remote control positioned next to a Walking Pad Q1 treadmill, emphasizing its specific compatibility.

2. WHAT'S IN THE BOX

- 1x Saillong Treadmill Remote Control Replacement
- 2x AAA Batteries

3. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the cover downwards to open the compartment.
3. Insert the two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2 AAA Battery Included



Image: The Saillong remote control with its battery cover removed, illustrating the correct placement for two AAA batteries.

Video: Battery Installation and Button Overview

Video Description: This video demonstrates how to install the AAA batteries into the Saillong remote control and shows the function of each button, including power, mode, and speed adjustments.

4. OPERATING INSTRUCTIONS

The remote control provides simple and direct control over your Walking Pad Q1 treadmill. No pairing or downloads are required; simply turn on your treadmill to use the remote.

Button Functions:

- **ON/OFF Button:** Press to power the treadmill on or off.
- **'+' Button:** Increases the treadmill's speed. Also used to increase time, calories, or distance in certain modes.
- **'-' Button:** Decreases the treadmill's speed. Also used to decrease time, calories, or distance in certain modes.
- **'M' (Mode) Button:** Cycles through different display modes or settings on the treadmill.
- **Blue Indicator Light:** Illuminates when the remote is actively transmitting a signal.

Easy Operation

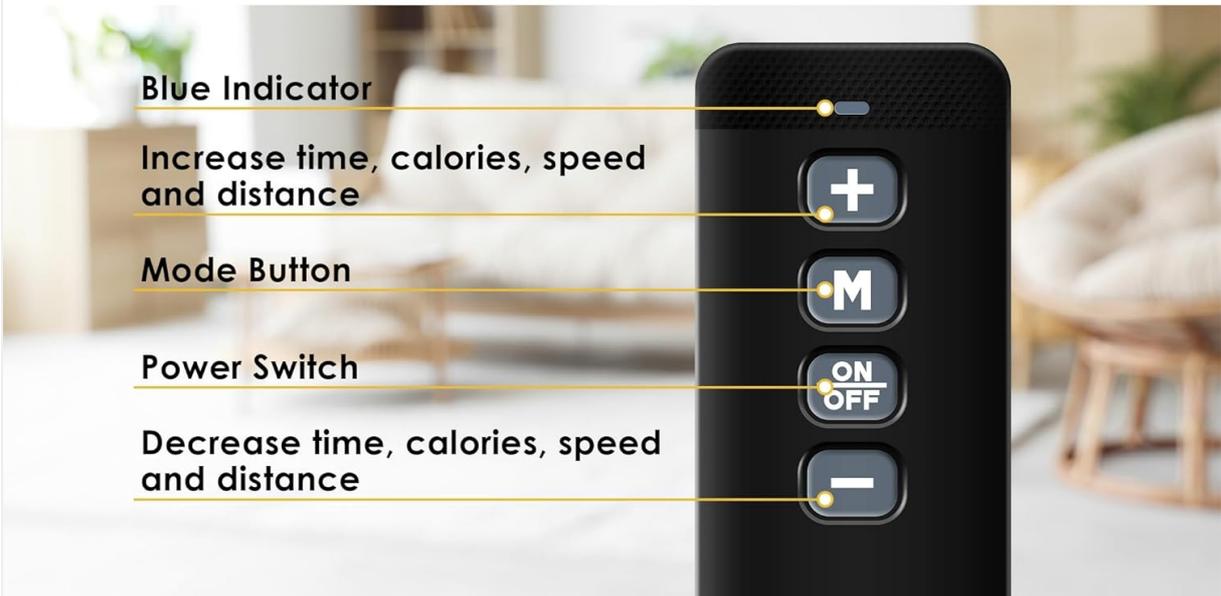


Image: A hand holding the Saillong remote control, with clear labels indicating the function of each button.



Image: A close-up of the Saillong remote control, highlighting the blue indicator light when active.

Control Range:

The remote offers precise control from a distance of up to 33 feet (approximately 10 meters) with 360-degree infrared sensing, allowing for flexible operation.

360-degree, 33FT Long Distance Control Response time of 0.2 seconds



Image: Graphic illustrating the Saillong remote control's 360-degree, 33-foot control range and rapid 0.2-second response time.

Video: Remote Control in Action

Video Description: This video illustrates the Saillong remote control in use with a Walking Pad Q1 treadmill, demonstrating how to power on the treadmill, adjust speed, and power off using the remote.

5. PRODUCT FEATURES

- **Material:** Constructed from durable ABS material.
- **Lightweight Design:** Weighs approximately 0.12 pounds (0.06 kg) for comfortable handling.
- **Long-Lasting Buttons:** Buttons are designed to withstand over 100,000 presses.



Image: The Saillong remote control accompanied by icons highlighting its ABS material, lightweight nature, and durable buttons.

6. SPECIFICATIONS

Item Package Dimensions (L x W x H)	5 x 3.94 x 0.63 inches
Package Weight	0.06 Kilograms
Item Dimensions (L x W x H)	4.72 x 0.78 x 1.57 inches
Item Weight	0.12 Pounds
Brand Name	Saillong
Model Name	Treadmill Remote Control Replacement
Color	Black
Material	ABS
Number of Items	1

7. TROUBLESHOOTING

- **Remote Not Responding:**

- Ensure the batteries are correctly installed with the proper polarity (+/-).
- Replace old batteries with new AAA batteries.
- Verify that the remote is pointed towards the treadmill's receiver and there are no obstructions.
- Check the battery contacts inside the remote. If they appear loose or corroded, gently adjust them to ensure proper connection with the batteries.

- **Treadmill Not Responding to Remote:**

- Confirm that your treadmill is a Walking Pad Q1 model. This remote is not compatible with other models.
- Ensure the treadmill is powered on and in a ready state.

8. WARRANTY AND SUPPORT

Information regarding product warranty and specific support contacts is not provided in the available product data. Please refer to the retailer or manufacturer's website for details on warranty coverage and customer support options.