

VersLife S6 PRO

VersLife S6 PRO Cordless Vacuum Cleaner User Manual

Model: S6 PRO

1. INTRODUCTION

Thank you for choosing the VersLife S6 PRO Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

The VersLife S6 PRO is a powerful and lightweight cordless stick vacuum designed for efficient cleaning of various surfaces, particularly hard floors. It features a 30Kpa suction power, a 35-minute runtime, and a multi-layer filtration system.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow it to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).

- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

3. PACKAGE CONTENTS

Please check the package contents upon opening to ensure all components are present:

- Main Motor Unit (Handheld Vacuum)
- Extension Wand (Tube)
- Floor Brush Head
- Mattress Brush
- 2-in-1 Crevice Tool
- Wall Mount Bracket
- Power Adapter/Charger
- Spare HEPA Filter
- User Manual



Image: Overview of the VersLife S6 PRO Cordless Vacuum Cleaner and its included accessories, such as the main unit,

extension wand, floor brush, and various attachments.

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your VersLife S6 PRO vacuum cleaner.



MULTI-FUNCTIONAL TOOLS - ENDLESS CLEANING POSSIBILITIES!

Equipped with a mattress brush and 2-in-1 crevice tool, along with two tubes. Effortlessly handle diverse cleaning tasks, reaching every corner with ease.

Image: The VersLife S6 PRO handheld unit shown with various attachments: an extension tube for high and low areas, a mattress brush for upholstery, and a 2-in-1 crevice tool for tight spaces.

- **Main Motor Unit:** Contains the motor, dust cup, and control buttons.
- **Extension Wand:** Connects the main unit to the floor brush or other attachments for extended reach.
- **Floor Brush Head:** Designed for cleaning hard floors and low-pile carpets. Features a flexible joint for maneuverability.
- **Mattress Brush:** Ideal for cleaning fabric surfaces like sofas and mattresses.
- **2-in-1 Crevice Tool:** Combines a narrow nozzle for tight corners and a brush for dusting.

5. SETUP AND ASSEMBLY

5.1 Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the power adapter to the charging port on the main motor unit and plug it into a wall outlet. The charging indicator lights will show the charging status. A full charge

takes approximately 4-5 hours.

5.2 Assembly

1. Insert the extension wand into the main motor unit until it clicks securely.
2. Attach the desired cleaning head (e.g., floor brush head) to the other end of the extension wand until it clicks.
3. For handheld use, attach accessories like the mattress brush or 2-in-1 crevice tool directly to the main motor unit.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Suction Modes

Press the power button on the main unit to turn the vacuum cleaner on. Press it again to turn off. The vacuum typically starts in a standard suction mode. Some models may have a button to switch between different suction power levels.



30000PA SUCTION POWER - THE ULTIMATE CLEANING FORCE!


Driven by a state-of-the-art **130,000 RPM** premium upgraded motor.

Image: Illustration of the VersLife S6 PRO's powerful 30,000PA suction, driven by a 130,000 RPM motor, effectively lifting debris from a hard floor surface.

6.2 Using Attachments

- **Floor Brush Head:** Use for general floor cleaning. The flexible brush head allows for easy navigation

 around furniture and into tight spaces. It can rotate 180 degrees horizontally and 90 degrees vertically.

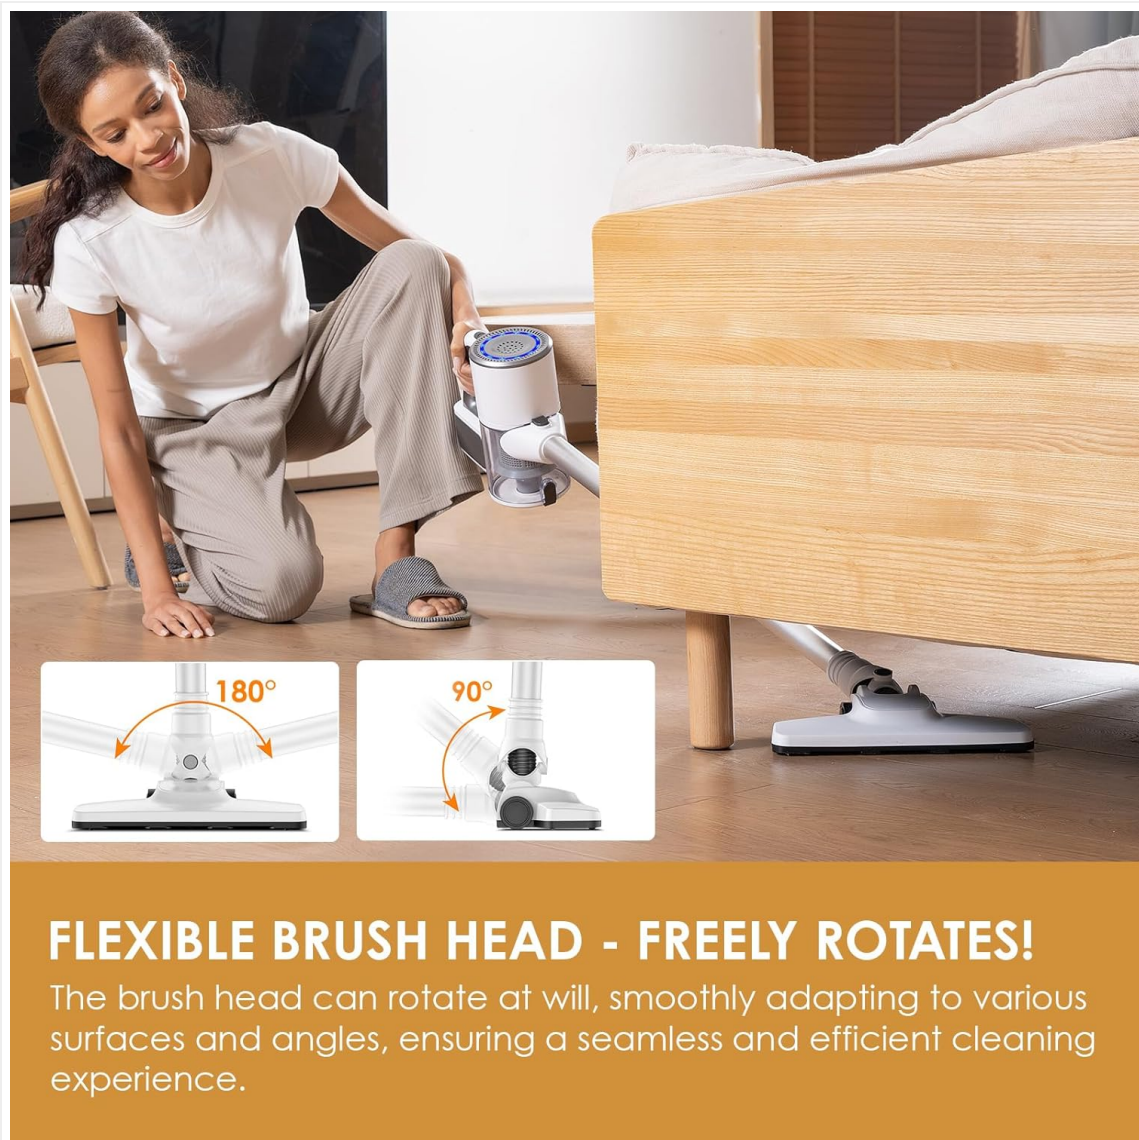

FLEXIBLE BRUSH HEAD - FREELY ROTATES!


The brush head can rotate at will, smoothly adapting to various surfaces and angles, ensuring a seamless and efficient cleaning experience.

Image: The flexible brush head of the VersLife S6 PRO, demonstrating its ability to rotate 180 degrees for wide coverage and 90 degrees for reaching under furniture, ensuring efficient cleaning.

- **Mattress Brush:** Attach directly to the main unit for cleaning upholstery, pet beds, and mattresses.
- **2-in-1 Crevice Tool:** Use the narrow end for cleaning corners, edges, and tight gaps. Extend the brush for dusting delicate surfaces or vents.

6.3 Lightweight Operation

 The S6 PRO is designed to be lightweight (approximately 3 pounds), making it easy to maneuver and use for extended periods without fatigue, even for cleaning high areas.

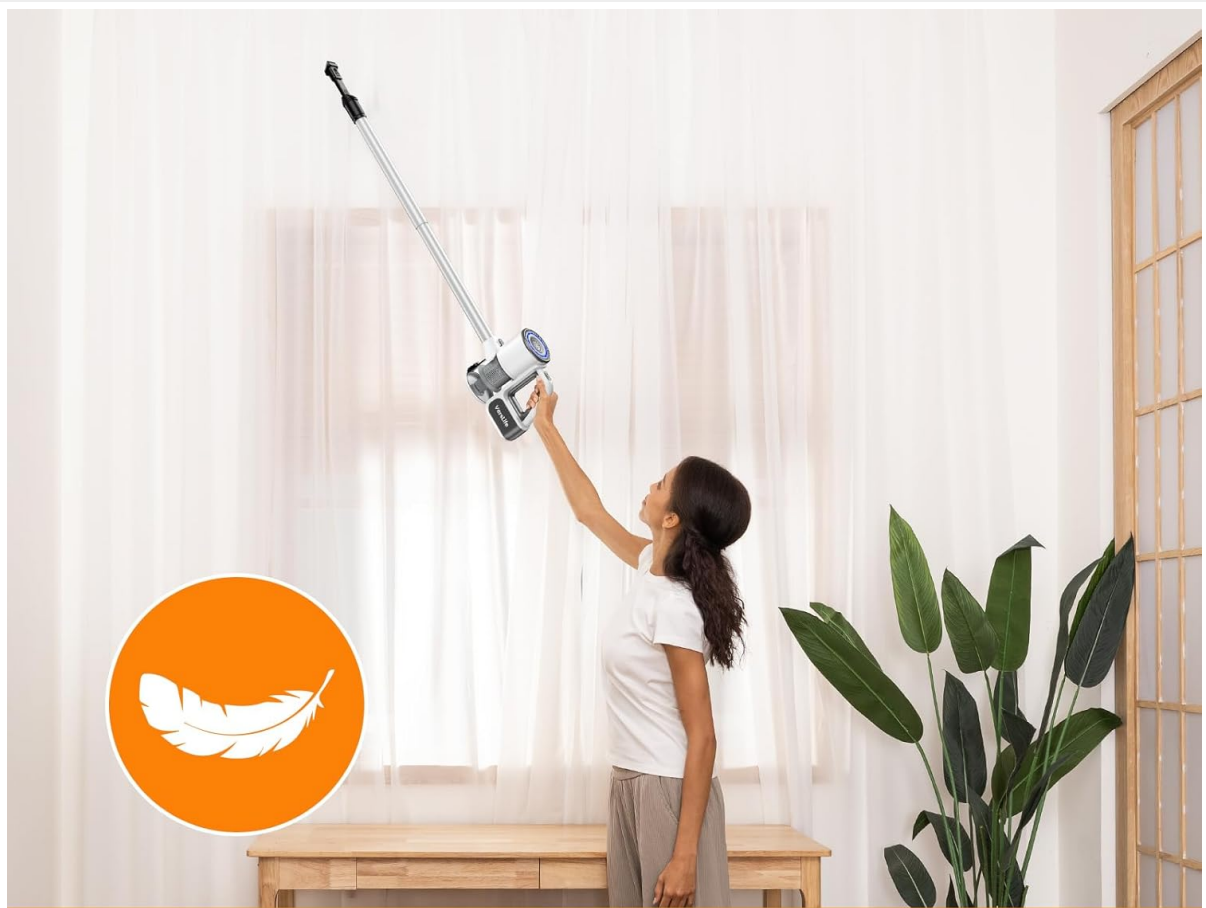

ULTRA-LIGHTWEIGHT - EASY ONE-HANDED OPERATION!

So effortless to handle, allowing you to clean with just one hand, reaching every nook and cranny with ease.

Image: A person effortlessly cleaning a high area with the lightweight VersLife S6 PRO, demonstrating its ease of one-handed operation and maneuverability.

6.4 Tangle-Free Design

The vacuum features a tangle-free design, which helps prevent hair and fur from wrapping around the brush roller, simplifying maintenance.

NOT SUITABLE FOR THICK CARPETS



TANGLE FREE DESIGN - HAIR & FUR FREE!

Without brush roller, it completely avoids the annoyance of hair and fur tangling, making cleaning a breeze.

Image: The VersLife S6 PRO's floor brush head cleaning a hard floor, illustrating its tangle-free design that effectively picks up debris, hair, and fur without clogging the roller.

7. MAINTENANCE

7.1 Emptying the Dust Cup

The vacuum cleaner is equipped with a spacious 900ml dust cup. Empty the dust cup regularly to maintain optimal suction power. To empty, press the release button on the dust cup and dispose of the contents into a trash bin. The single-touch emptying design ensures a hands-free process.




SINGLE-TOUCH DUST EMPTYING - HANDS-FREE CONVENIENCE!

With a simple press, debris is ejected without any mess. The washable dustbin and HEPA filter make maintenance a breeze, ensuring long-term, hygienic performance.

Image: Demonstrates the VersLife S6 PRO's single-touch dust emptying mechanism, showing debris being ejected into a bin, alongside a washable HEPA filter being rinsed under water.

7.2 Cleaning the Filters

 The VersLife S6 PRO features a multi-layer filtration system, including cyclone, metal mesh, and HEPA filtration, which captures 99% of dust and allergens. Regular cleaning of the filters is crucial for maintaining performance.

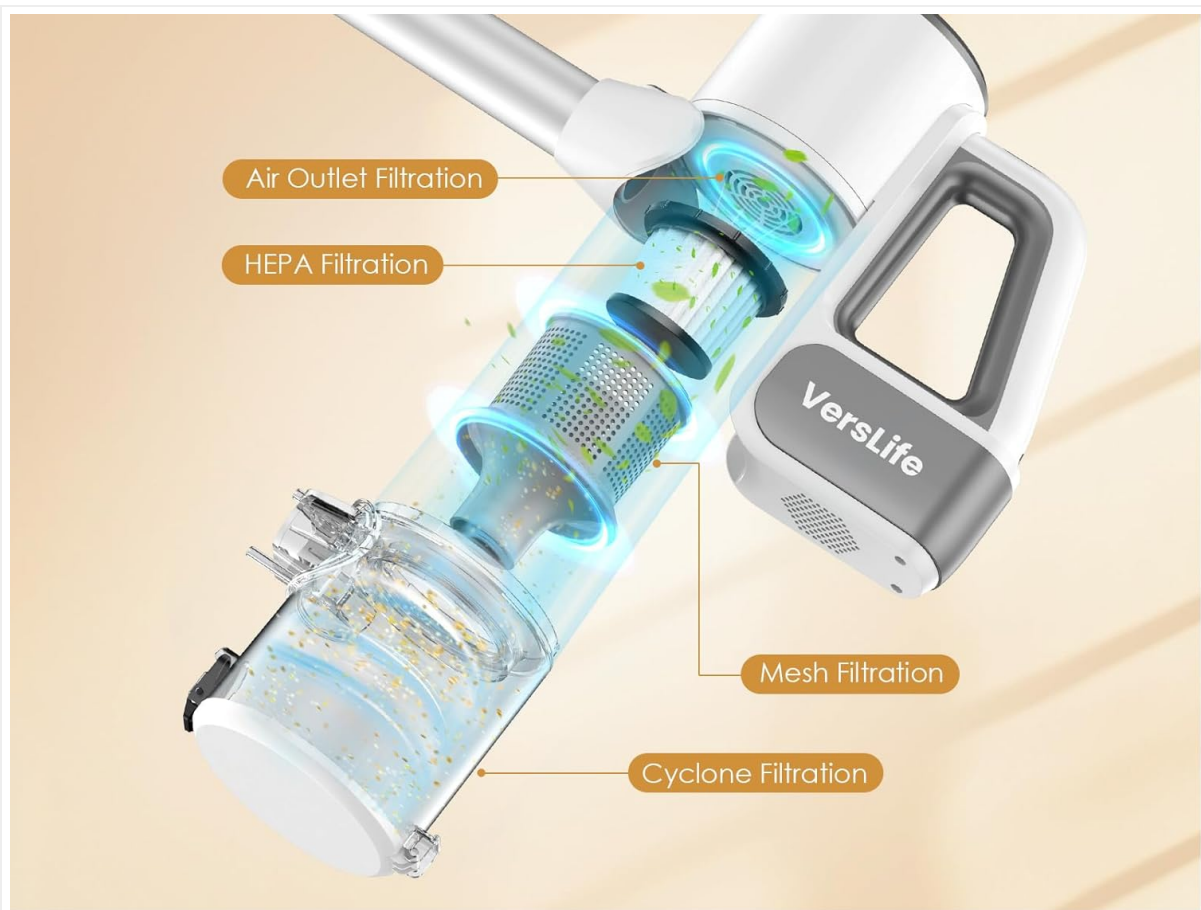

MULTI-LAYER HEPA FILTRATION - PURIFYING EVERY BREATH!

Trapping microscopic dust and allergens, it releases only clean air, safeguarding your family's health.

Image: A cutaway diagram illustrating the VersLife S6 PRO's multi-layer filtration system, highlighting the cyclone, mesh, HEPA, and air outlet filtration stages for purifying air.

1. Remove the dust cup from the main unit.
2. Carefully remove the metal mesh filter and the HEPA filter.
3. Tap the filters gently to remove loose dust.
4. Rinse the metal mesh filter and HEPA filter under running water until clean. Do not use hot water or detergents.
5. Allow all filter components to air dry completely for at least 24 hours before reassembling. Ensure they are completely dry to prevent damage to the motor.
6. Reassemble the filters and dust cup in reverse order.

A spare HEPA filter is included for convenience. Replace the HEPA filter every 3-6 months, depending on usage, to ensure optimal filtration and suction.

7.3 Cleaning the Brush Head

Periodically check the floor brush head for tangled hair or debris. Use scissors to cut away any tangled hair and remove it. Ensure the brush roller spins freely.

8. TROUBLESHOOTING

If you encounter any issues with your VersLife S6 PRO, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dust cup is full Filters are clogged Nozzle/hose is blocked Battery is low	Empty the dust cup Clean or replace filters Check for and remove blockages Charge the battery
Brush head not rotating	Hair or debris tangled in brush Brush head attachment not secure	Clean the brush roller Ensure brush head is securely attached
Short runtime	Battery not fully charged Using high suction mode continuously Battery degradation	Ensure battery is fully charged Use standard mode for longer cleaning Contact customer support if battery life significantly decreases

9. SPECIFICATIONS

- **Brand:** VersLife
- **Model:** S6 PRO
- **Power Source:** Battery Powered
- **Motor Power:** 500W
- **Maximum Suction:** 30 Kpa (30 Centimeters)
- **Battery:** 6*2000mAh Rechargeable Battery
- **Runtime:** Up to 35 minutes
- **Dust Cup Capacity:** 900ml
- **Filtration System:** Multi-layer (Cyclone, Metal Mesh, HEPA)
- **Item Weight:** Approximately 2.35 kg (3 pounds)
- **Product Dimensions:** 32 x 20 x 41 cm (approximate, assembled)
- **Form Factor:** Stick, Handheld

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact VersLife customer service through the retailer where the product was purchased. Keep your proof of purchase for warranty claims.