

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZZB](#) /

› [ZZB Bluetooth Speaker TWS Small Speakers User Manual](#)

ZZB WP-03C

ZZB Bluetooth Speaker TWS Small Speakers User Manual

Model: WP-03C

INTRODUCTION

Thank you for choosing the ZZB Bluetooth Speaker. This portable speaker is designed to deliver powerful, clear stereo sound with vibrant lighting effects, making it ideal for various settings from home parties to outdoor adventures. Its IPX5 waterproof rating ensures durability against splashes and spills. This manual will guide you through the setup, operation, and maintenance of your new speaker.



The ZZB Bluetooth Speaker, featuring its compact and durable design with IPX5 water resistance.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from water sources when charging. Ensure the charging port cover is securely closed when not in use, especially in wet environments.
- Do not attempt to disassemble, repair, or modify the speaker yourself. This will void the warranty and may cause damage or injury.
- Use only the provided power cable for charging.
- Clean the speaker with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.

WHAT'S IN THE BOX

Please check the contents of your package:

- ZZB Bluetooth Speaker (Model: WP-03C)
- Power Cable

PRODUCT OVERVIEW

Familiarize yourself with the speaker's controls and ports:



Top view of the speaker with control buttons.



Detailed view of the speaker's control panel and features.

Speaker Controls and Ports

Button/Port	Function
Power Button	Press and hold to Power ON/OFF
Volume + / Next Track	Short press for Volume Increase, Long press for Next Track

Button/Port	Function
Play / Pause	Press to Play/Pause music
Volume - / Previous Track	Short press for Volume Decrease, Long press for Previous Track
Light Mode Button	Cycles through lighting effects
AUX In Jack	Connects to non-Bluetooth devices via 3.5mm cable
TF-SD Card Slot	For direct music playback from TF/SD card
Type-C Charging Port	For charging the speaker

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided power cable to the Type-C charging port on the speaker and the other end to a USB power adapter (not included). The charging indicator light will illuminate during charging and turn off when fully charged.

Power On/Off

- To Power ON: Press and hold the Power Button for approximately 3 seconds until you hear an audible prompt.
- To Power OFF: Press and hold the Power Button for approximately 3 seconds until you hear an audible prompt.

Bluetooth Pairing

The speaker will automatically enter Bluetooth pairing mode when powered on for the first time or if no device is connected. The Bluetooth indicator light will flash.

1. Ensure the speaker is powered on and in pairing mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "ZZB Speaker" from the list.
4. Once paired, the Bluetooth indicator light will become solid, and you will hear a confirmation sound.



Easy Bluetooth pairing with your mobile device.

True Wireless Stereo (TWS) Pairing

For an immersive stereo experience, you can pair two ZZB Bluetooth Speakers together.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power Button. It will search for another speaker.
3. The two speakers will automatically connect to each other. You will hear a confirmation sound.
4. Once TWS paired, connect your mobile device to the primary speaker via Bluetooth as described above.

PORTABLE BLUETOOTH SPEAKER

Lightweight, portable, and enjoyable to travel with



Two speakers can be paired for a True Wireless Stereo experience.

AUX Connection

To connect to non-Bluetooth devices, use a 3.5mm audio cable (not included).

- Insert one end of the 3.5mm audio cable into the AUX In Jack on the speaker.
- Connect the other end to the audio output of your device.
- The speaker will automatically switch to AUX mode.

TF-SD Card Playback

Insert a TF-SD card (not included) with your favorite music files into the TF-SD Card Slot. The speaker will automatically detect the card and begin playback.

OPERATING INSTRUCTIONS

Music Playback

- Play/Pause: Press the Play/Pause button.

- Volume Increase: Short press the Volume + button.
- Volume Decrease: Short press the Volume - button.
- Next Track: Long press the Volume + button.
- Previous Track: Long press the Volume - button.

Call Handling (Built-in Microphone)

- Answer Call: Press the Play/Pause button once.
- End Call: Press the Play/Pause button once during a call.
- Reject Call: Press and hold the Play/Pause button for 2 seconds.

Lighting Effects

The speaker features dynamic lighting effects that synchronize with the music.

- To change light modes: Press the Light Mode Button to cycle through available lighting patterns.
- To turn off lights: Continue pressing the Light Mode Button until the lights turn off.



Waterproof IPX5
The daily life waterproof level can reach IPX5.

The speaker's lights enhance the listening experience.

FM Radio

The speaker includes an FM radio function.

- To enter FM mode: Press the Mode button (if available, or cycle through modes using a dedicated button if present, otherwise it might be integrated with Play/Pause long press).
- Auto-scan for stations: In FM mode, long press the Play/Pause button to automatically scan and save available FM stations.
- Change stations: Use the Volume + and Volume - buttons to navigate between saved stations.

MAINTENANCE

- Cleaning: Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Storage: Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care: To prolong battery life, charge the speaker fully at least once every three months if not used regularly. Avoid fully discharging the battery frequently.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Speaker does not turn on.	Ensure the speaker is charged. Connect to power and try again.
Cannot pair with Bluetooth device.	Ensure speaker is in pairing mode (flashing light). Turn off and on Bluetooth on your device. Forget previous pairings and try again. Move closer to the speaker.
No sound.	Check volume levels on both speaker and connected device. Ensure correct input mode (Bluetooth, AUX, TF-SD).
Sound distortion.	Reduce volume. Ensure speaker is not too far from the Bluetooth device or facing interference.
TWS pairing fails.	Ensure both speakers are not connected to any other device. Place them close to each other and try TWS pairing again.
Lights not working.	Press the Light Mode Button to cycle through modes or turn them on.

SPECIFICATIONS

Product Specifications

Feature	Detail
Model Name	WP-03C
Speaker Type	Portable Speaker
Color	Red
Product Dimensions	4.92"D x 3.34"W x 1.77"H
Waterproof Rating	IPX5
Maximum Range	40 Feet (Bluetooth)
Wireless Communication Technology	Bluetooth
Speaker Size	4.92 Inches
Number of Batteries	1 Lithium Ion (included)
Number of Microphones	1
Includes MP3 player?	Yes
Item Weight	12 ounces
Speaker Maximum Output Power	20 Watts
Input Voltage	5 Volts
Mounting Type	Tabletop Mount
Battery Life	Up to 12 hours (depending on usage)

WARRANTY AND SUPPORT

Your ZZB Bluetooth Speaker is covered by a standard manufacturer's warranty. For detailed warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or the official ZZB website.

Please retain your proof of purchase for warranty claims.

© 2025 ZZB. All rights reserved.

Related Documents - WP-03C

 <p>USER MANUAL WIRELESS SPEAKER</p> <p>Power On / Off Volume Increase Play / Pause Volume Decrease AUX Connector TF Card Connector Type C Connector</p>	<p>User Manual: WP-03C Wireless Speaker</p> <p>This user manual provides detailed instructions for operating the WP-03C wireless speaker, including connection methods, TWS setup, operational controls, specifications, and FCC compliance information.</p>
 <p>artseund</p>	<p>ArtSound The Guide: Comprehensive Audio Solutions Catalog</p> <p>Explore ArtSound's extensive range of high-quality audio products, including multiroom systems, inwall and onwall speakers, portable Bluetooth speakers, amplifiers, radios, and professional audio solutions. Discover innovative sound technology for home and commercial applications.</p>
 <p>waterpik waterflosser QUICK START GUIDE WP-660-676 SERIES</p> <p>1. Unit Prep 2. Water Floss</p>	<p>Waterpik Waterflosser WP-660 Series Quick Start Guide</p> <p>A quick start guide for the Waterpik Waterflosser WP-660, WP-662, WP-663, WP-670, WP-672, WP-673, WP-674, WP-675, and WP-676 models. Learn how to prepare the unit and use it for water flossing.</p>
 <p>waterpik waterflosser QUICK START GUIDE WP-660-676 SERIES</p> <p>1. Unit Prep 2. Water Floss</p>	<p>Waterpik Waterflosser WP-660 Series Quick Start Guide</p> <p>Concise quick start guide for the Waterpik Waterflosser WP-660 series, covering unit preparation and water flossing instructions. Includes model numbers WP-660, WP-662, WP-663, WP-670, WP-672, WP-673, WP-674, WP-675, WP-676.</p>
 <p>waterpik waterflosser QUICK START GUIDE WP-440-466 SERIES</p> <p>1. Unit Prep 2. Water Floss</p>	<p>Waterpik Waterflosser WP-440 Series Quick Start Guide</p> <p>A quick start guide for the Waterpik Waterflosser WP-440 series, covering unit preparation and water flossing instructions. Includes model numbers WP-440, 450, 455, 460, 462, 463, 464, 465, and 466.</p>
 <p>waterpik waterflosser QUICK START GUIDE WP-660-676 SERIES</p> <p>1. Unit Prep 2. Water Floss</p>	<p>Waterpik Waterflosser Quick Start Guide WP-660-676</p> <p>Concise guide to setting up and using your Waterpik Waterflosser, covering unit preparation and water flossing techniques for models WP-660 through WP-676.</p>