

[manuals.plus](#) /

> [GLAKER](#) /

> [GLAKER C51 Professional Cordless Hair Clippers and Trimmer Kit User Manual](#)

GLAKER C51

GLAKER C51 Professional Cordless Hair Clippers and Trimmer Kit User Manual

Model: C51

1. INTRODUCTION

Thank you for choosing the GLAKER C51 Professional Cordless Hair Clippers and Trimmer Kit. This comprehensive grooming solution is designed for precise hair cutting, beard trimming, and body grooming. This manual provides essential information for safe and effective use, including product features, setup, operation, maintenance, and troubleshooting.

2. PRODUCT OVERVIEW

The GLAKER C51 kit includes a powerful hair clipper and a versatile 6-in-1 multi-trimmer, along with various attachments and guide combs to meet diverse grooming needs.



An overview of the GLAKER C51 Hair Clippers and Trimmer Kit, displaying the main hair clipper, the detail trimmer, and various interchangeable heads including a T-blade, foil shaver, nose/ear trimmer, and body groomer, along with multiple guide combs.

Key Features:

- **All-in-One Grooming:** Includes hair clipper, beard trimmer, T-blade, foil shaver, nose/ear trimmer, and body groomer.
- **Powerful Motor & Sharp Blades:** Equipped with a high-speed motor (up to 7200 RPM) and ultra-sharp stainless steel blades for efficient cutting without snags or irritation.
- **Precision Trimming:** Features an adjustable fade lever (0.5–1.5mm) and multiple guide combs (1/16"–3/8", 3/6/9/12mm) for customizable lengths.
- **Long Battery Life:** Provides up to 150–240 minutes of cordless use on a single charge.
- **USB-C Charging:** Ensures fast and convenient charging.
- **Quiet Operation:** Low-noise design (<68dB) for comfortable use.
- **Easy to Clean:** Detachable blades and IPX6 waterproof rating for easy cleaning (main clipper body is not washable).

Long Endurance

 Li-Ion Power

240 Mins

C51 Runtime

150 Mins

700UU Runtime

* The runtime data is based on continuous usage on a single full charge.



An illustrative diagram detailing the components of the GLAKER 700UU Hair Trimmer (Beard Trimmer, Hair Trimmer, Precision Trimmer, Foil Shaver, Nose/Ear Trimmer, Body Trimmer with respective guide combs) and the GLAKER C51 Hair Clippers (with 3/6/9/12mm guard combs).

3. SAFETY INFORMATION

Please read all safety instructions before using the product to prevent injury or damage.

- Avoid using near eyes.
- Do not ingest or inhale small parts.
- Clean regularly as instructed in the maintenance section.
- Not suitable for children under 3 years without adult supervision.
- Keep the device dry when charging.

- Do not immerse the main clipper body in water. Only detachable blades are washable.

4. SETUP

Initial Charging:

Before first use, fully charge both the hair clipper and the trimmer. Connect the USB-C charging cable to the device and a compatible 5V, 1A to 3A USB power adapter (not included). The display will indicate charging status.




The image illustrates the convenient USB-C charging port on the GLAKER clipper, compatible with 5V, 1A to 3A adapters (adapter not included).

Attaching and Removing Blades/Guards:

Ensure the device is turned off before attaching or removing any blades or guide combs.

- **To Attach a Blade Head:** Align the desired blade head with the trimmer body and press firmly until it clicks into place.
- **To Remove a Blade Head:** Gently push the blade head away from the trimmer body until it detaches.
- **To Attach a Guide Comb:** Snap the desired guide comb onto the clipper or trimmer blade. Ensure it is securely fastened.
- **To Remove a Guide Comb:** Gently lift the comb from the blade.

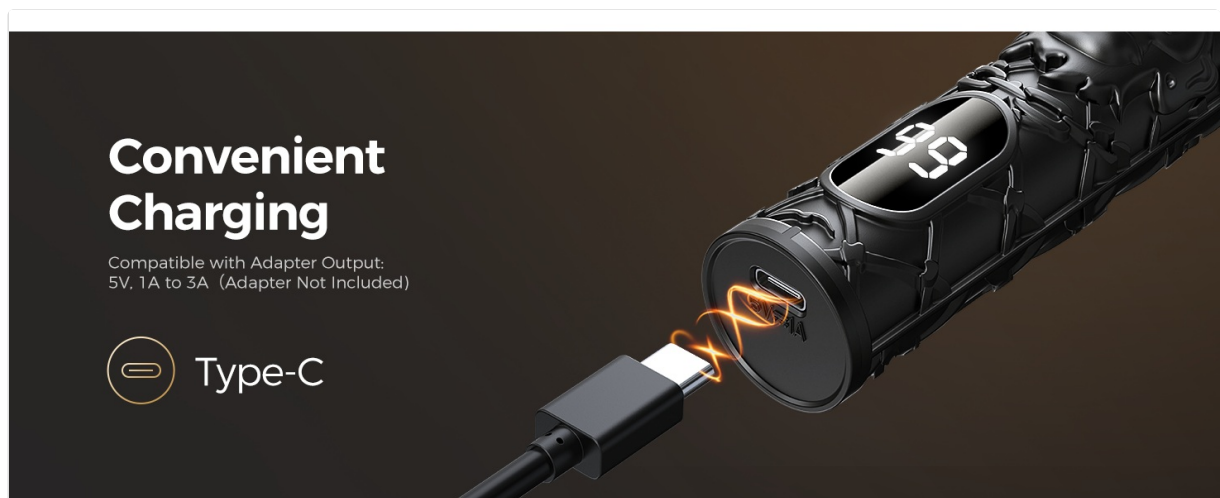

A visual guide demonstrating how to easily attach and remove the interchangeable trimmer heads for cleaning or switching between grooming functions.

5. OPERATING INSTRUCTIONS

Always ensure your hair and skin are clean and dry before grooming for best results.

Hair Clipping:

1. Select the appropriate guide comb for your desired hair length.
2. For the main hair clipper, use the adjustable taper lever (0.5mm to 1.5mm) to fine-tune cutting length for blending and fading.
3. Turn on the clipper and move it against the direction of hair growth, using smooth, even strokes.
4. Start with a longer comb length and gradually reduce if a shorter cut is desired.



Smooth Cutting

Without hair tugging or pulling

An individual using the GLAKER hair clipper, illustrating the smooth cutting action without hair tugging or pulling, ensuring comfort during use.

Beard Trimming and Styling:

1. Attach the beard trimmer head to the multi-trimmer.
2. Use the included guide combs (1.5/3/6/9mm) to achieve desired beard length.
3. For precise lines and edging, use the precision trimmer head without a comb.
4. For a close shave or stubble, attach the foil shaver head.

Nose, Ear, and Body Grooming:


- **Nose/Ear Trimmer:** Gently insert the nose/ear trimmer head into the nostril or ear canal and move it in a circular motion to trim unwanted hair.
- **Body Groomer:** Attach the body groomer head and use with or without guide combs (3/6/9mm) for sensitive areas or general body hair trimming.

Hair Clippers & Styling Kit

700UU Hair Trimmer



C51 Hair Clippers

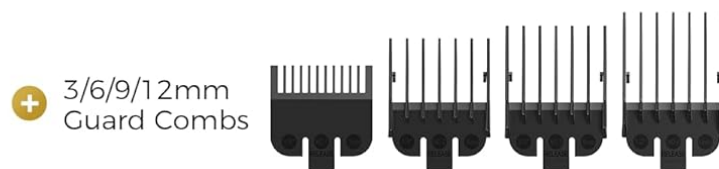

A composite image demonstrating the versatility of the GLAKER grooming kit for styling from head to toe, including hair cutting, defining beard lines, trimming nose and ear hair, and body grooming.

6. MAINTENANCE

Cleaning:

Regular cleaning ensures optimal performance and hygiene.

1. Turn off and unplug the device before cleaning.
2. Remove the blade head.
3. Brush away any loose hair from the blades and inside the trimmer body using the cleaning brush.
4. Rinse the detachable blade heads under running water. The main clipper body is not washable.


5. Allow all parts to air dry completely before reattaching or storing.



An image demonstrating the quick cleaning process for the detachable clipper blades under running water. Note that the main hair clipper body is not washable.

Oiling Blades:

Apply a few drops of lubricating oil (included) to the blades before each use to maintain sharpness and smooth operation.

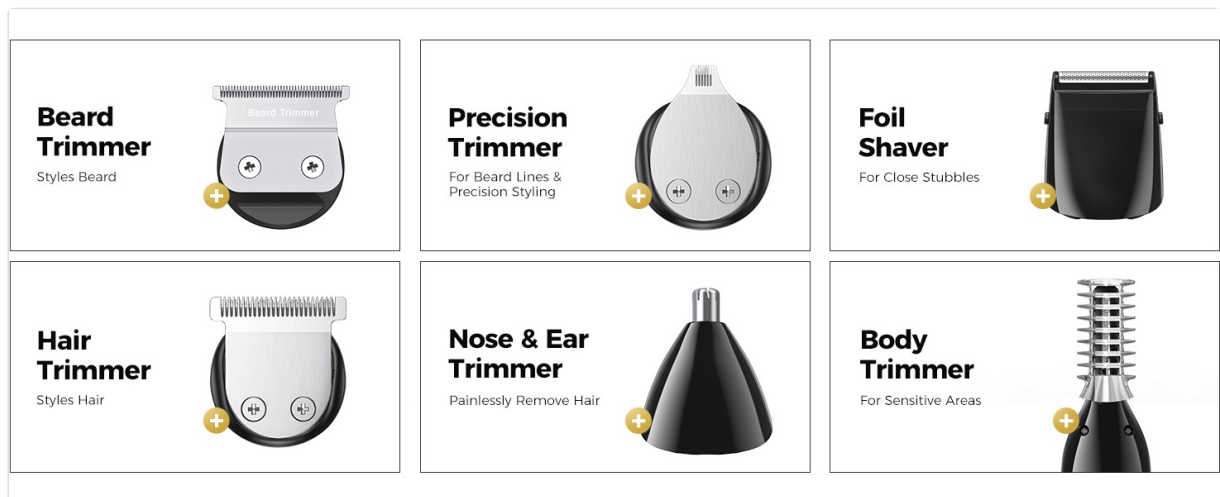

An image showing the process of applying oil to the clipper blades, a necessary step before each use to ensure smooth operation and blade longevity.

Storage:

Store the device and all accessories in a cool, dry place, away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

If you encounter issues with your GLAKER C51 kit, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Connect it to the charger and check the battery indicator.
- **Poor cutting performance:** Clean the blades thoroughly to remove any hair buildup. Apply lubricating oil to the blades. Ensure the blade head is correctly attached.
- **Excessive noise or vibration:** This may indicate a need for cleaning and oiling the blades. Ensure all attachments are securely fastened.

- **Battery not holding charge:** Ensure you are using a compatible USB-C charger (5V, 1A to 3A). If the issue persists, contact customer support.

8. SPECIFICATIONS

| | |
|----------------------------|---|
| Model Number | C51 |
| Brand | GLAKER |
| Product Dimensions | 6.57 x 1.96 x 1.65 inches |
| Weight | 2.18 Pounds (approx. 176g for trimmer) |
| Motor Speed | Up to 7200 RPM |
| Battery Type | Lithium-Ion |
| Charging Time | 240 minutes |
| Runtime | Clipper: 240 minutes; Trimmer: 150 minutes |
| Charging Port | USB-C |
| Waterproof Rating | IPX6 (for detachable blades) |
| Included Components | Hair Clipper, Guide Combs, USB Cable, various trimmer heads |

9. WARRANTY AND SUPPORT

GLAKER products come with a **1-Year Warranty** from the date of purchase, covering manufacturing defects. For warranty claims, technical support, or any questions regarding your GLAKER C51 kit, please contact GLAKER customer service through the retailer where the product was purchased or visit the official GLAKER website for support information.