

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Proscenic](#) /

› [Proscenic P13 Cordless Vacuum Cleaner User Manual](#)

Proscenic P13

Proscenic P13 Cordless Vacuum Cleaner Instruction Manual

Model: P13

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Proscenic P13 Cordless Vacuum Cleaner. Please read all instructions carefully before use and retain this manual for future reference.

PACKAGE CONTENTS

Verify that all components are present in the package:

- Main Motor (includes Dust Cup)
- 1 x Telescopic Tube
- 1 x Battery
- 1 x Electric Floor Brush
- 1 x Long Crevice Nozzle
- 1 x 2-in-1 Dusting Brush
- 3 x HEPA Filters
- 1 x Power Adapter
- 1 x Wall Mount with Screws
- 1 x Cleaning Gadget
- 1 x User Manual



Image: All included components of the Proscenic P13 Cordless Vacuum Cleaner, including the main motor, telescopic tube, various brushes, filters, and charging accessories.

SETUP

1. Assembly

1. Insert the telescopic tube into the main motor unit until it clicks securely.
2. Attach the electric floor brush to the other end of the telescopic tube, ensuring it clicks into place.
3. Slide the battery pack into the designated slot on the main motor handle until it locks.



Image: The fully assembled Proscenic P13 cordless vacuum cleaner, showcasing its main body, telescopic tube, and electric floor brush, alongside various attachments.

2. Charging

Connect the power adapter to the battery pack or the wall mount. A full charge typically takes several hours. The LED display will indicate the battery level.

3. Wall Mount Installation

Use the provided screws to securely attach the wall mount to a suitable wall surface. Ensure the mount is placed

near a power outlet for convenient charging. The vacuum can be stored on the mount when not in use.



Image: The wall mount accessory, designed to hold and charge the vacuum cleaner when not in use.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the power button on the main motor handle to turn the vacuum on or off.

2. Adjusting Suction Modes

The smart LED touch display allows you to effortlessly adjust the vacuum's power. Cycle through Eco, Normal, and Turbo modes by touching the mode switch button on the display. The display also shows battery level, suction performance, and alerts.



Image: A detailed view of the LED touch display, indicating battery percentage, current suction mode, and potential alerts like brush stuck or suction blockage.

3. Using Attachments

The vacuum comes with various attachments for different cleaning needs:

- **Electric Floor Brush:** Ideal for carpets, area rugs, and hard floors. Features green LED headlights to illuminate dust.
- **Long Crevice Nozzle:** For narrow spaces, corners, and edges.
- **2-in-1 Dusting Brush:** For upholstery, curtains, and delicate surfaces.
- **Telescopic Tube:** Extends reach for high areas or can be removed for handheld use.



Up to 50 Minutes of Runtime

Detachable battery offers flexible charging
and extended runtime

Image: The Proscenic P13 vacuum cleaner configured for handheld use with the crevice tool, effectively cleaning between sofa cushions.

4. Flexible Cleaning

The flexible floor brush offers 180° swivel and 90° up and down movement, allowing easy cleaning under furniture and in tight spaces without excessive bending.



Image: The flexible floor brush of the Proscenic P13, illustrating its wide range of motion for reaching under low-lying furniture.

5. Green LED Headlights

The electric floor brush is equipped with green LED headlights that effectively detect small, invisible dust particles, making cleaning more thorough, especially in dimly lit areas.

Green LED Headlights

Effectively detect invisible dust



Image: The Proscenic P13's green LED headlights highlighting dust and debris on a dark floor, making it visible for cleaning.


MAINTENANCE

1. Emptying the Dustbin

The 1.2L dustbin features a one-button emptying mechanism. Simply press the release button to open the bottom flap and dispose of collected debris directly into a trash can.

Multifunction Handheld Vacuum

Remove dust from various surfaces and hard-to-reach spaces

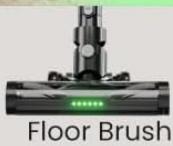

Floor Brush



2 in 1 Brush



Crevice Brush



Telescopic Tube

Image: A user emptying the 1.2L dustbin of the Proscenic P13 vacuum cleaner into a waste receptacle with a single button press.

2. Cleaning/Replacing Filters

The vacuum uses HEPA filters. It is recommended to clean the filters regularly (every 2-4 weeks) and replace them as needed to maintain optimal suction performance. Washable filters should be thoroughly dried before reinstallation.



Image: A hand rinsing a HEPA filter under running water, demonstrating the cleaning process for the washable filter.

3. Cleaning the Brush Roller

The V-shaped brush roller is designed to lift and detangle hair. Periodically check the brush roller for tangled hair or debris and remove it using the provided cleaning gadget or scissors to ensure efficient operation.

High-Performance Updated Battery

P13 vacuum is equipped with 2,500 mAh updated batteries that can run for up to 50 minutes on a single charge!

The battery is certified to meet European, British, American, and Japanese battery standards.

Image: A comparison showing the Proscenic P13's V-shaped anti-tangle brush roller effectively managing hair, contrasted with a competitor's brush that is tangled with hair.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely clicked into place.
Reduced Suction	Dustbin is full, filter is clogged, or brush roller is tangled.	Empty dustbin, clean/replace filters, or clear brush roller of debris.
Brush Roller Not Spinning	Hair or debris is tangled in the brush roller.	Turn off the vacuum and carefully remove any tangled hair or obstructions from the brush roller.

SPECIFICATIONS

- **Brand:** Proscenic
- **Model Name:** P13
- **Special Features:** Cordless, HEPA, Headlight, High Power, Lightweight
- **Filter Type:** HEPA Filter
- **Is Cordless?:** Yes
- **Capacity:** 1200 Milliliters
- **Wattage:** 550 watts
- **Form Factor:** Stick
- **Product Dimensions:** 14" L x 5" W x 9.1" H
- **Item Weight:** 6.8 pounds
- **Power Source:** Battery Powered
- **Surface Recommendation:** All floors

WARRANTY & SUPPORT

 
The Proscenic P13 Cordless Vacuum Cleaner comes with an up to 24-month warranty. For warranty claims, technical support, or any product-related inquiries, please contact Proscenic customer service. You can find more information and support on the [Proscenic Store](#).



Image: Icons representing Proscenic's service policy, including 24/7 rapid response, 30-day money-back service, up to 24-month warranty, and fast shipping.

Related Documents - P13

 The image shows the cover of the Proscenic P10 PRO User Manual. It is a black and white document with the Proscenic logo at the top, followed by the text "P10 PRO" and "Proscenic Technology Co., Ltd. www.proscenic.com".	<p>Proscenic P10 Pro Cordless Cleaner User Manual</p> <p>User manual for the Proscenic P10 Pro Cordless Cleaner, a 4-in-1 stick vacuum featuring 26Kpa suction, adjustable modes, LED touch screen, removable battery, and anti-tangle technology. Includes safety instructions regarding chargers and batteries.</p>
---	---

	<p><u>Proscenic Robot Vacuum APP User Guide</u></p> <p>A comprehensive guide to connecting and using the Proscenic APP for your robot vacuum, including integration with Amazon Alexa and Google Assistant, troubleshooting tips, and customer service contact information.</p>
 	<p><u>Proscenic P9 Cordless Vacuum Cleaner Operating Manual</u></p> <p>Comprehensive operating manual for the Proscenic P9 cordless vacuum cleaner, including safety instructions, usage guides, maintenance, troubleshooting, and warranty information.</p>
 	<p><u>Proscenic P13 Cordless Vacuum Cleaner User Manual</u></p> <p>This user manual provides essential information for the Proscenic P13 Cordless Vacuum Cleaner, covering safety instructions, product overview, assembly, operation, maintenance, and troubleshooting. Learn how to use and care for your Proscenic P13 for optimal performance.</p>
 	<p><u>Proscenic F10 Pro Cordless Wet Dry Vacuum Cleaner User Manual</u></p> <p>Comprehensive user manual for the Proscenic F10 Pro Cordless Wet Dry Vacuum Cleaner. Learn about safety instructions, product usage, maintenance, troubleshooting, and specifications for efficient cleaning.</p>
 	<p><u>Proscenic P8 Cordless Stick Vacuum Cleaner - Operating Manual</u></p> <p>This operating manual provides comprehensive instructions for the Proscenic P8 cordless stick vacuum cleaner. It includes essential safety guidelines, usage instructions, maintenance procedures, charging and storage information, and troubleshooting tips, presented in multiple languages with English as the primary language.</p>