

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [COSYLAND](#) /

› [COSYLAND Kids Bookshelf Floor Standing – 7-Tier Wooden Book Display Rack with Deep Fabric Pockets for Toddler Reading Corner, Nursery & Playroom Organizer \(White\)](#)

## COSYLAND CS000136-4-US

# COSYLAND Kids Bookshelf Instruction Manual

Model: CS000136-4-US

## INTRODUCTION

This instruction manual provides comprehensive information for the assembly, operation, maintenance, and troubleshooting of your COSYLAND Kids Bookshelf. Please read this manual carefully before assembly and retain it for future reference. This bookshelf is designed to encourage early reading habits and provide organized storage for children's books in a safe and accessible manner.



Image: The COSYLAND Kids Bookshelf, showcasing its 7-tier design and front-facing book display, ideal for a child's reading space.

## PRODUCT FEATURES

The COSYLAND Kids Bookshelf is engineered with several features to enhance functionality and safety for young users:

- **7-Tier Front-Facing Design:** This unique design allows children to easily see and select their favorite books, promoting independence and engagement with reading. The forward-facing display helps keep books organized and accessible.

# 6-Layer Design Saves Space



Image: Illustration of the bookshelf's 6-layer design, demonstrating how different types of children's books can be organized for easy access.

- **Stylish & Durable Construction:** Featuring a sleek wooden frame and matching fabric pockets, the bookshelf blends seamlessly into various room decors. Its lightweight nature allows for convenient repositioning.

# Stabilized Support Structure



Sturdy Construction



Strong Load-bearing



No Harsh Odor

Image: Visual representation of the bookshelf's stabilized support structure, emphasizing its sturdy construction and strong load-bearing capabilities, along with the absence of harsh odors.

- **Sturdy Pine Wood Frame:** Constructed from solid pine wood, this bookshelf is built for longevity. Smooth, rounded edges and meticulous craftsmanship ensure a safe environment for children aged 1 and up.

## Rounded Corners In All Areas

Smooth arc-shaped design giving your baby a natural sense of security



Image: Detail shot illustrating the rounded corners and smooth arc-shaped design of the bookshelf, contributing to child safety.

- **Durable & Easy-Clean Fabric Pockets:** The fabric pockets are designed for easy maintenance and durability. The polished wooden frame and ladder-shaped design contribute to stability, preventing tipping.

# Excellent Breathable Cotton Linen



Breathable



Soft



Easy to Clean



Comfortable



Removable and washable  
for extra peace of mind

Image: Detailed view of the bookshelf's fabric pockets, highlighting their breathable cotton linen material, softness, ease of cleaning, and washability.

## SPECIFICATIONS

Attribute	Detail
Item Weight	5.46 pounds
Product Dimensions	24.8 x 11.8 x 30 inches (63 x 30 x 76 cm)
Item Model Number	CS000136-4-US
Recommended Age	15 months and up
Material	Solid Pine Wood, Cotton Linen Fabric
Tiers	7 (6 fabric pockets + bottom storage)

# Size & Storage



About 18 books



Recommended For  
ages >15 months



29.5" / 75cm

Image: Detailed dimensions and recommended age for the bookshelf, illustrating its compact size and suitability for toddlers.

## SETUP AND ASSEMBLY

The COSYLAND Kids Bookshelf is designed for easy assembly. All necessary hardware and instructions are included. Please follow these general steps:

- 1. Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Verify all components are present against the parts list provided in the packaging.
- 2. Assemble Side Panels:** Attach the horizontal support rods between the two wooden side panels. Ensure the pre-drilled holes align correctly.
- 3. Install Fabric Pockets:** Slide the fabric pockets onto the support rods. Ensure they are oriented correctly to form the book display tiers.
- 4. Secure Connections:** Tighten all screws and fasteners using the provided tool. Do not overtighten to avoid damaging the wood.

5. **Final Placement:** Once assembled, place the bookshelf on a flat, stable surface. For added stability, consider placing it against a wall.

*Note: Refer to the specific assembly diagram and parts list included in your product packaging for detailed, step-by-step instructions.*

## OPERATION AND USAGE

The COSYLAND Kids Bookshelf is designed for simple and intuitive use:

- **Book Placement:** Place books with their covers facing forward in the fabric pockets. This allows children to easily identify and select books.
- **Capacity:** The bookshelf can hold approximately 18 standard children's books, depending on their size and thickness. Distribute the weight evenly across the tiers.
- **Recommended Age:** This bookshelf is suitable for children aged 15 months and older, providing easy access to books at their height.



# The Gift Choice for Kids ✨

Image: A child interacting with the bookshelf, highlighting its user-friendly design for young readers.

## MAINTENANCE

Regular maintenance will help preserve the appearance and longevity of your bookshelf:

- **Cleaning the Wood Frame:** Wipe the wooden parts with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as they may damage the finish. Dry immediately with a clean cloth.
- **Cleaning the Fabric Pockets:** The fabric pockets are removable and washable. For light cleaning, spot clean with a mild detergent and water. For deeper cleaning, remove the pockets and hand wash or machine wash on a gentle cycle with cold water. Air dry completely before reattaching.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain stability.

## TROUBLESHOOTING

If you encounter any issues with your COSYLAND Kids Bookshelf, refer to the following common solutions:

Problem	Possible Cause	Solution
Bookshelf wobbles	Loose fasteners; uneven floor surface.	Ensure all screws are securely tightened. Move the bookshelf to a level surface or use shims if necessary.
Fabric pockets sag or appear loose	Overloaded pockets; incorrect installation.	Reduce the number or weight of books in the pocket. Ensure the fabric is correctly threaded onto the support rods as per assembly instructions.
Missing parts during assembly	Packaging error.	Contact COSYLAND customer support with your purchase details and the specific missing parts.

## SAFETY INFORMATION

Your child's safety is paramount. Please adhere to the following safety guidelines:

- Always place the bookshelf on a flat, stable surface.
- Do not allow children to climb on the bookshelf.
- Ensure all fasteners are tightened regularly to prevent loosening.
- Keep small parts and assembly hardware away from young children during and after assembly.
- The bookshelf features rounded corners and smooth surfaces to minimize injury risk.
- Do not exceed the recommended capacity of the pockets.

## WARRANTY AND SUPPORT

COSYLAND stands behind the quality of its products. For any questions regarding warranty coverage, product defects, or assistance with assembly and troubleshooting not covered in this manual, please contact COSYLAND customer support directly. Please have your model number (CS000136-4-US) and purchase information ready when contacting support. You can typically find contact information on the COSYLAND official website or through your original retailer.

