

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bosch](#) /

› [Bosch SMS4ECI27E Freestanding Dishwasher User Manual](#)

## Bosch SMS4ECI27E

# Bosch SMS4ECI27E Freestanding Dishwasher User Manual

## INTRODUCTION

Welcome to your new Bosch SMS4ECI27E freestanding dishwasher. This manual provides essential information for safe installation, efficient operation, proper maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

## SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Keep this manual for future reference.

- This appliance is intended for domestic use only.
- Do not allow children to play with the appliance.
- Ensure the appliance is properly earthed.
- Do not open the door during operation, especially during the hot wash cycle.
- Use only detergents and rinse aids specifically designed for dishwashers.
- In case of malfunction, disconnect the appliance from the power supply and contact authorized service personnel.
- The AquaStop system provides protection against water damage. Do not tamper with it.

## PRODUCT OVERVIEW



*This image displays the front of the Bosch SMS4ECI27E dishwasher, featuring a stainless steel finish and the control panel located at the top edge of the door.*

## **Control Panel**



*A detailed view of the control panel, showing the power button, program selection buttons (Eco, Auto, Intensive, Favorite, etc.), a digital display for time remaining, and option buttons (Extra Dry, VarioSpeed Plus, Remote Start). The "Start" button is located on the right.*

The control panel features intuitive button controls for program selection and additional functions. The digital display shows the remaining program time.

## **SETUP AND INSTALLATION**

The Bosch SMS4ECI27E is a freestanding dishwasher designed for easy integration into your kitchen. It

features a removable top for flexible installation options.

## Dimensions

- Height (H): 845 mm
- Width (W): 600 mm
- Depth (D): 600 mm
- Depth with door open at 90 degrees: 1155 mm
- Removable top height: 30 mm

## Electrical Connection

Ensure the appliance is connected to a 240 Volt (AC) power supply. A properly earthed socket is required.

## Water Connection

Connect the water inlet hose to a cold water supply. The integrated AquaStop system provides protection against water leaks.

## Initial Use

Before first use, ensure the salt and rinse aid dispensers are filled according to the instructions in the separate quick start guide.

## Home Connect Setup

This appliance is equipped with Home Connect for Wi-Fi connectivity.

1. Download the Home Connect app on your smartphone or tablet.
2. Follow the in-app instructions to connect your dishwasher to your home Wi-Fi network.
3. This enables remote monitoring and control of your appliance.
4. For details on disabling the WiFi module, refer to the product's user manual.

## OPERATING INSTRUCTIONS

Your dishwasher offers a range of programs and options to suit various washing needs.

### Program Selection

Use the program buttons on the control panel to select your desired wash cycle.

- **Auto 45-65°C:** Automatically adjusts temperature and water usage based on soil level.
- **Favorite:** Customizable program.
- **Eco:** Energy and water-efficient program for normal soiled dishes.
- **Intensive:** For heavily soiled pots, pans, and dishes.
- **Short 60°:** A quicker wash cycle at 60°C.
- **Silent 50°:** Optimized for quiet operation at 50°C.

### Additional Options

Enhance your wash cycle with these selectable functions:

- **Remote Start:** Start or pause the dishwasher remotely via the Home Connect app.
- **Extra Dry:** Provides an intensified drying phase for better results on difficult-to-dry items.
- **Half Load:** Optimizes water and energy consumption for smaller loads.
- **VarioSpeed Plus:** Reduces program duration by up to 66% with consistently high cleaning results.
- **Maintenance Program:** For cleaning the dishwasher itself.

## Smart Features

- **EcoSilence Drive:** Ensures quiet and efficient operation.
- **AquaSensor:** Detects the level of soiling and adjusts water consumption accordingly.
- **Detergent Recognition:** Optimizes the wash cycle based on the type of detergent used.

## LOADING THE DISHWASHER

Proper loading ensures optimal cleaning and drying results. The dishwasher has a maximum capacity of 14 place settings.

### Basket System

- **Comfort Plus Baskets:** Designed for flexible loading of various dishware.
- **Third Basket:** Provides additional space for cutlery or small items.
- **Adjustable Upper Basket:** Allows for height adjustment to accommodate taller items in either the upper or lower basket.

### Extra Clean Zone

The Extra Clean Zone, located in the upper basket, features three rotating jets for intensive cleaning of heavily soiled items. Activate this function via the control panel.

## MAINTENANCE AND CARE

Regular maintenance helps keep your dishwasher performing efficiently.

- **Cleaning Filters:** Regularly check and clean the filter system at the bottom of the wash tub.
- **Cleaning Spray Arms:** Ensure the spray arm nozzles are not blocked.
- **Maintenance Program:** Use the dedicated maintenance program periodically to clean the interior of the dishwasher.
- **Exterior Cleaning:** Wipe the stainless steel exterior with a soft, damp cloth. Avoid abrasive cleaners.

## TROUBLESHOOTING

Refer to this section for solutions to common issues.

- **Dishwasher not starting:** Check power connection, ensure door is fully closed, and press the Start button.
- **Poor cleaning results:** Check loading, ensure spray arms are not blocked, verify detergent and rinse aid levels, select appropriate program.
- **Water leaks:** The AquaStop system provides flood protection. If a leak occurs, disconnect power and water supply and contact service.
- **Unusual noise:** Check for items obstructing spray arms or loose items in the baskets. The EcoSilence Drive ensures quiet operation (42 dB(A)).
- **Control panel locked:** Deactivate the child safety lock as per the quick start guide or full manual.
- **Home Connect issues:** Ensure Wi-Fi connection is stable. Refer to the Home Connect app for troubleshooting.

## TECHNICAL SPECIFICATIONS

Feature	Specification
---------	---------------

Model	SMS4ECI27E
Brand	Bosch
Type	Freestanding Dishwasher
Place Settings	14
Energy Efficiency Class	A
Noise Level	42 dB(A)
Eco Program Energy Consumption	0.543 kWh/cycle (54 kWh/100 cycles)
Eco Program Water Consumption	9.0 L/cycle
Eco Program Duration	4:30 h
Dimensions (HxWxD)	845 x 600 x 600 mm
Net Weight	50.7 kg
Voltage	240 V (AC)
Drying System	Heat Exchanger and EfficientDry
Tub Material	Stainless Steel
Special Features	Extra Clean Zone, AquaStop, Home Connect, EcoSilence Drive, AquaSensor, Detergent Recognition

## WARRANTY AND SUPPORT

Your Bosch SMS4ECI27E dishwasher comes with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your appliance or visit the official Bosch website.

**Returns Policy:** If you wish to return a product within 30 days of receipt because you have changed your mind, please consult the retailer's return policy. For defective or damaged products, refer to the retailer's specific help pages.

For technical assistance or service requests, please contact Bosch customer support.