

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hisense](#) /
- › [Hisense BI350XPZ Electric Built-in Oven Instruction Manual](#)

Hisense BI350XPZ

Hisense BI350XPZ Electric Built-in Oven Instruction Manual

Model: BI350XPZ

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Hisense BI350XPZ Electric Built-in Oven. Please read these instructions carefully before using the appliance and keep them for future reference.



Figure 1: Front view of the Hisense BI350XPZ Electric Built-in Oven, featuring a pizza cooking inside.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, burns, or injury. Keep children away from the appliance during operation. Do not touch hot surfaces. Ensure proper ventilation. Disconnect the appliance from the power supply before cleaning or maintenance.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials and accessories. Inspect the oven for any damage. Do not install a damaged appliance.

What's in the Box

- Non-stick pizza tray

- Foldable pizza peel
- Grill rack
- Drip pan
- Telescopic guides



Figure 2: Included accessories for the Hisense BI350XPZ oven, showing the pizza tray, grill rack, and drip pan.

Installation Dimensions

Ensure the cabinet opening meets the required dimensions for proper installation and ventilation. Refer to the diagram for precise measurements.

CARATTERISTICHE PRINCIPALI



**Pulizia
Pirolitica**



**Funzione
Cibo Surgelato**



**Total
View**



**Programmi
Automatici**



**Guide
Telescopiche**



**Even Bake
Technology**

Figure 4: Control panel of the Hisense BI350XPZ oven, showing the digital display and central selector knob.

Cooking Functions

- **Pizza Mode Pro:** Achieves 350°C for perfect pizza in approximately 3 minutes and 30 seconds. Includes a dedicated non-stick tray and foldable peel.
- **23 Automatic Programs:** Pre-set programs for various dishes, simplifying cooking.
- **Frozen Food Function:** Optimized settings for cooking pre-packaged and frozen items like croissants, chicken nuggets, and fries.
- **Add Steam:** Introduces steam during cooking for improved results, particularly for bread, roasts, and pastries, creating a crispy exterior and moist interior.
- **Even Bake Technology:** Ensures uniform heat distribution for consistent cooking results across all levels.
- **Multiphase Cooking:** Allows automatic and sequential transitions between different cooking modes and heating elements.
- **Rapid Heating:** Quickly preheats the oven to 200°C in approximately 5 minutes.
- **Multilevel Cooking:** Designed to cook multiple dishes simultaneously on different levels with uniform heat distribution.

- **Double Gratin:** Utilizes both upper and lower grill functions for even browning.

Special Features


- **Total View:** Enhanced internal lighting and door design allow clear visibility of food without opening the oven, preserving heat.
- **Cooling System:** An advanced cooling system keeps the exterior surfaces cool to the touch, enhancing safety. The fan may continue to operate after the oven is turned off until the internal temperature drops below 60°C.
- **Soft Closing Door:** The oven door features a soft-closing mechanism for quiet and gentle operation.
- **Cool Door:** The multi-layered glass door remains cool to the touch during operation, providing safety, especially for households with children.
- **Telescopic Guides:** Facilitate easy and safe insertion and removal of trays and racks.



Figure 5: Using the Add Steam function, with water being poured into a tray.

Programmi Automatici

Pronto prima che tu voglia

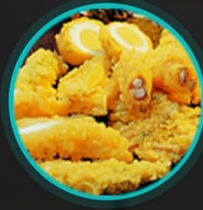

23

Programmi Automatici

Figure 6: Overview of automatic cooking programs, showing various food icons.

Pizza Mode Pro

La crosta perfetta



Figure 7: Pizza Mode Pro in action, highlighting the 3'30" cooking time at 350°C.

MAINTENANCE AND CLEANING

Pyrolytic Cleaning

The pyrolytic cleaning function is a highly effective method for cleaning the oven interior. It heats the oven to approximately 500°C, incinerating food residues and grease into ash. The oven door remains locked during the process. After the cycle, allow the oven to cool, then wipe away the remaining ash with a damp cloth. Three different pyrolytic cycles are available depending on the level of soiling.

CARATTERISTICHE PRINCIPALI



**Pulizia
Pirolytica**



**Funzione
Cibo Surgelato**



**Total
View**



**Programmi
Automatici**



**Guide
Telescopiche**



**Even Bake
Technology**

Figure 8: Pyrolytic cleaning function, indicated by a hand icon and a fan symbol.

General Cleaning

For routine cleaning, use mild detergents and a soft cloth. Avoid abrasive cleaners or scouring pads that could damage surfaces. Ensure the oven is cool before cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven not heating	Power supply issue, incorrect program selection, oven not turned on.	Check power connection. Ensure the oven is switched on and a cooking program is selected. Verify circuit breaker.

Problem	Possible Cause	Solution
Exterior door becomes very hot	Normal operation for some cooking modes, especially at high temperatures.	Exercise caution. The oven features a Cool Door design to minimize heat transfer, but surfaces can still be hot. Keep children away.
Controls seem complex or confusing	Unfamiliarity with the digital interface and numerous functions.	Refer to the "Operating Instructions" section. Practice using the selector knob and understanding the icons. The power button must be pressed to start cooking after setting parameters.
Timer function is unclear	Icons for minute minder and automatic shut-off timer may be similar.	Consult the detailed instructions for setting the timer. Ensure the correct timer mode (minute minder or cooking duration) is selected and activated.

SPECIFICATIONS

Feature	Detail
Model Number	BI350XPZ
Brand	Hisense
Type	Electric Built-in Oven
Capacity	77 Liters (XXL Cavity)
Energy Class	A+
Number of Functions	23 (plus autocooking)
Heating Method	Convection
Fuel Type	Electric
Color	Inox
Dimensions (H x W x D)	595mm x 595mm x 564mm (approximate, refer to installation diagram)

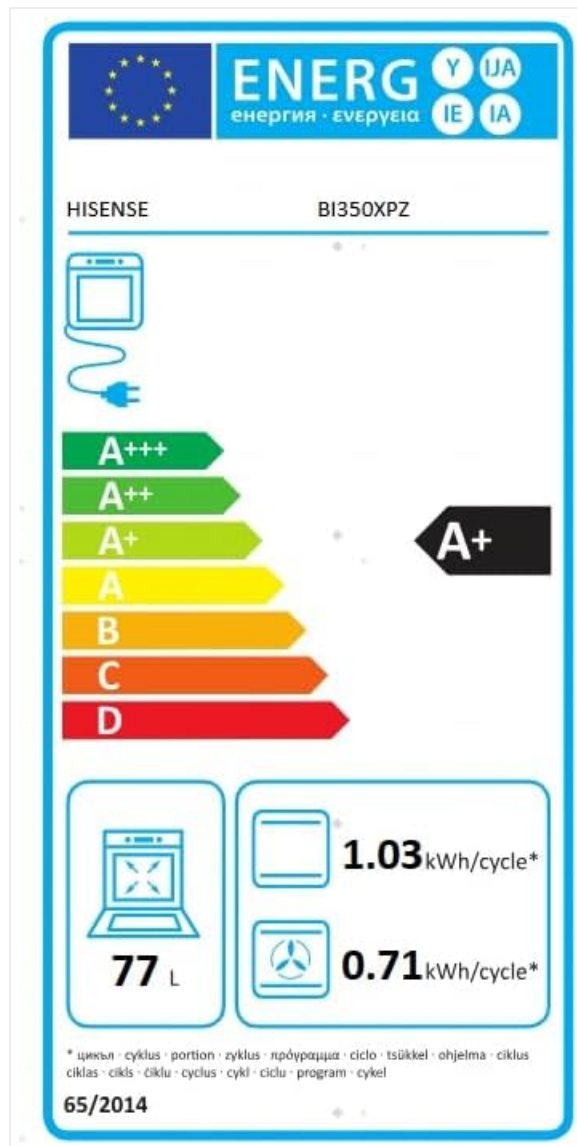


Figure 9: Energy Label for Hisense BI350XPZ, indicating A+ energy class and 77L capacity.

Scheda prodotto

Regolamento delegato (UE) n. 65/2014

Nome o marchio del fornitore	HISENSE
Identificativo del modello	BI350XPZ
Numero di compartimenti	1
Compartimento 1	
Indice di efficienza energetica	81,6
Classe di efficienza energetica	A+
Consumo di energia per ciclo (modo convenzionale)	1,03 kWh
Consumo di energia per ciclo (modo ventilato)	0,71 kWh
Fonte di calore	A energia elettrica
Volume	77 Litri

Modello immesso sul mercato dell'Unione da 16/08/2024



Numero di registrazione EPREL: 2124285

<https://eprel.ec.europa.eu/qr/2124285>

Fornitore: GORENJE GOSPODINJSKI APARATI D.O.O. (Fabbricante)

Sito web: www.gorenje.com

Servizio di assistenza alla clientela:

Nome: Gorenje gospodinjski aparati, d.o.o.

Sito web:

E-mail: eprel.notifications@gorenje.com

Telefono: +38638992222

Indirizzo:
Partizanska cesta 12
3320 Velenje
Slovenia

Figure 10: Product Data Sheet. For more details, visit the [EPREL database](https://eprel.ec.europa.eu).

WARRANTY AND SUPPORT

Warranty Information

For specific warranty terms and conditions, please refer to the documentation provided with your purchase or

contact the manufacturer directly. General return policies for purchases made through Amazon.it can be found on their help pages regarding returns and refunds.

Customer Support

For technical assistance, spare parts, or service inquiries, please contact the manufacturer's customer support:

- **Manufacturer:** GORENJE GOSPODINJSKI APARATI D.O.O.
- **Website:** www.gorenje.com
- **Email:** eprel.notifications@gorenje.com
- **Phone:** +3863899222
- **Address:** Partizanska cesta 12, 3320 Velenje, Slovenia