

RCA Wave-54 Black

RCA Wave-54 Wireless Over-Ear Bluetooth Headphones User Manual

Model: Wave-54 Black | Brand: RCA

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your RCA Wave-54 Wireless Over-Ear Bluetooth Headphones. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

SETUP

Charging the Headphones

Before first use, fully charge your RCA Wave-54 headphones. A full charge provides up to 12 hours of playtime.

- Connect the charging cable to the USB-C port on the headphone and to a compatible USB power source.
- The LED indicator will show charging status. It will typically turn off or change color when fully charged.

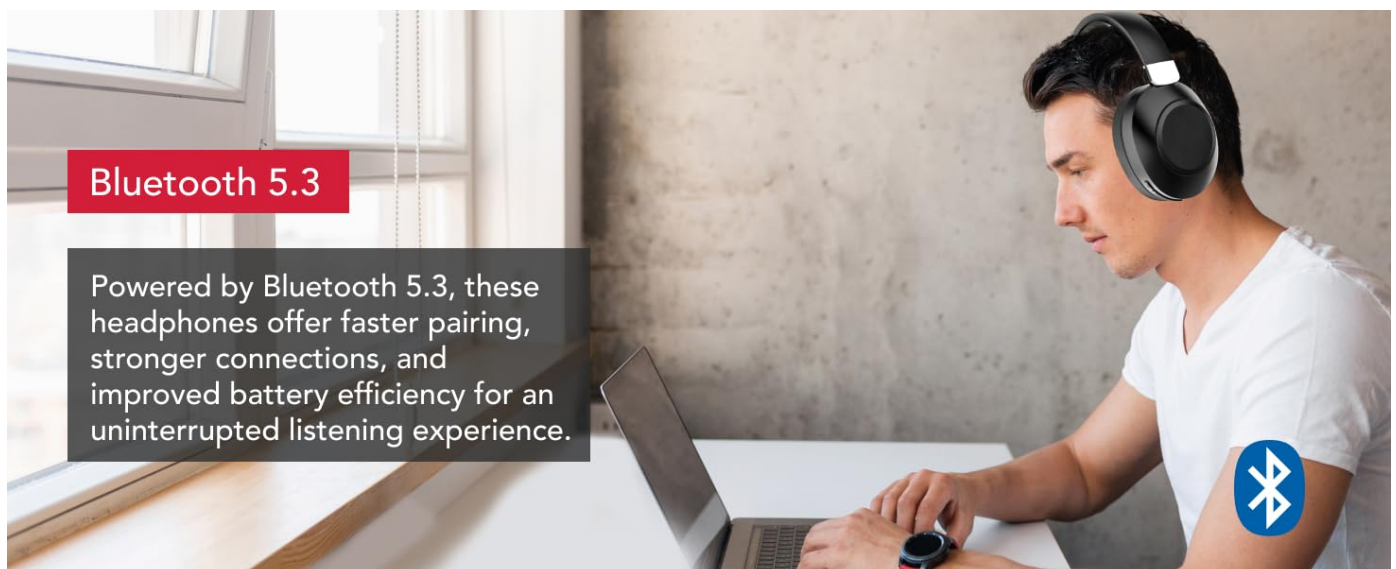 


Image: The RCA Wave-54 headphones are shown with a graphic indicating 12 hours of playtime, highlighting their extended battery life.

Bluetooth Pairing

Follow these steps to pair your headphones with a Bluetooth-enabled device:

1. Ensure the headphones are charged and powered off.
2. Press and hold the power button until the LED indicator flashes, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "RCA Wave-54" from the list of found devices.
5. Once connected, the LED indicator will stop flashing or show a steady light.

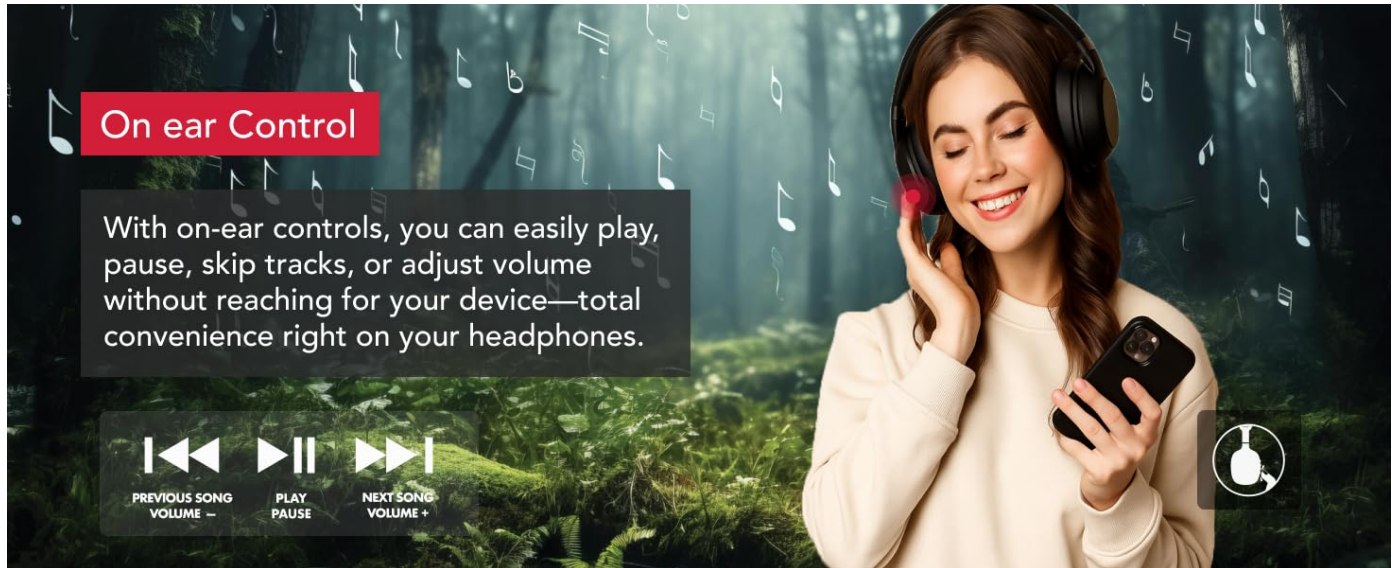 


Image: A pair of RCA Wave-54 headphones are shown next to a smartphone, illustrating the simple process of Bluetooth pairing.

OPERATING THE HEADPHONES

On-Ear Controls

The RCA Wave-54 headphones feature intuitive on-ear controls for easy management of your audio and calls:

- **Play/Pause:** Press the center button once.
- **Volume Up/Next Track:** Press the '+' button for volume up, hold for next track.
- **Volume Down/Previous Track:** Press the '-' button for volume down, hold for previous track.
- **Power On/Off:** Press and hold the power button.

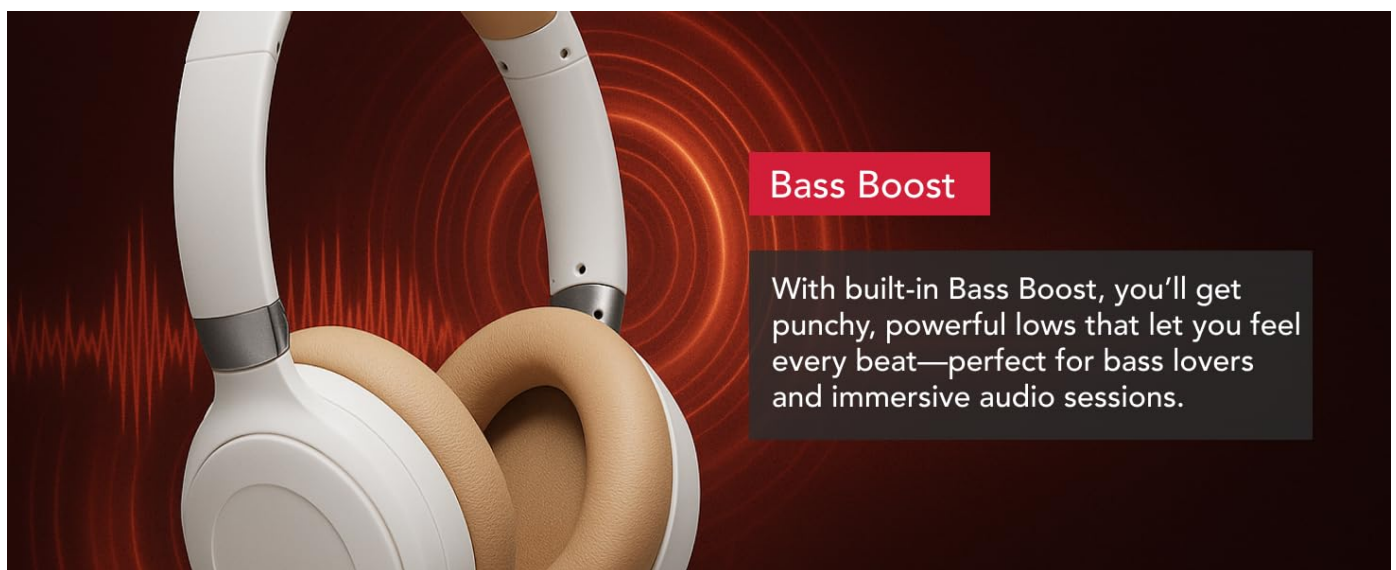 


Image: A diagram of the RCA Wave-54 headphones highlights the on-ear control buttons for previous song/volume down, play/pause, and next song/volume up.

Transparency Mode

Transparency Mode allows you to hear your surroundings while still enjoying your audio. This feature is ideal for situations where situational awareness is important, such as walking in a city or listening for announcements.

- Refer to the quick start guide or product packaging for specific button press to activate/deactivate Transparency Mode.

Call Handling

The headphones support hands-free calling when connected to a smartphone:

- **Answer/End Call:** Press the Play/Pause button once.
- **Reject Call:** Press and hold the Play/Pause button.

Audio Features

Experience superior sound with the RCA Wave-54 headphones:

- **Hi-Res Audio:** Delivers crystal-clear vocals and rich soundscapes.
- **Powerful Bass and Sound:** Engineered for an impactful listening experience with robust bass response.
- **Noise Isolating:** Designed to block out distractions, allowing for clear, uninterrupted sound.

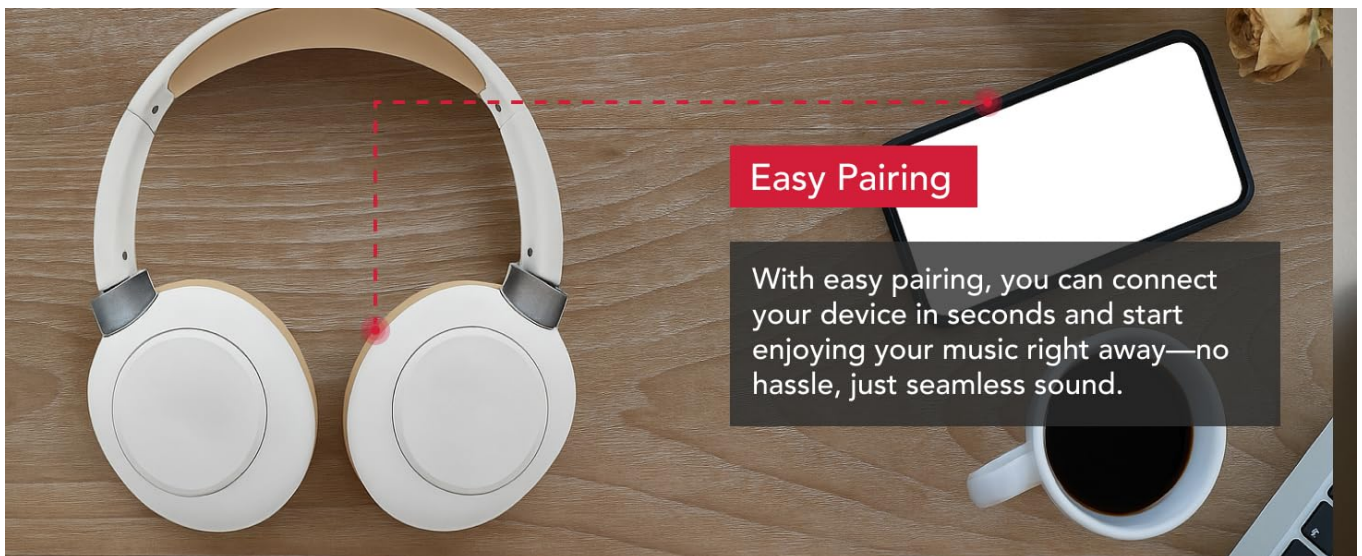 


Image: A close-up of the RCA Wave-54 headphones with a graphic illustrating the powerful bass boost feature.

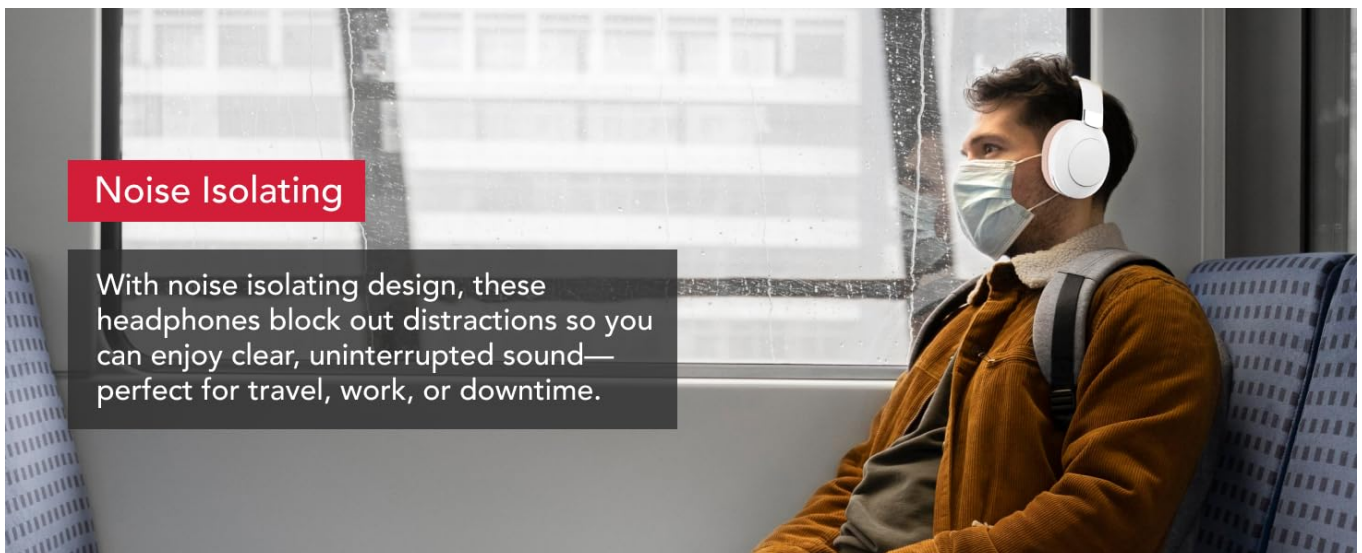 


Image: A graphic featuring the Hi-Res Audio logo, indicating the high-fidelity sound quality of the RCA Wave-54 headphones.

Hi-def Sound

Engineered for hi-def sound, these headphones deliver rich, detailed audio that lets you experience music just as it was meant to be heard.



Image: A man wearing RCA Wave-54 headphones on a train, demonstrating the noise-isolating design for uninterrupted listening.

MAINTENANCE

Cleaning

To maintain the condition and hygiene of your headphones:

- Wipe the ear cushions and headband with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- Ensure all ports are dry before charging or connecting cables.

Storage

The RCA Wave-54 headphones feature a foldable design for convenient storage and portability:

- Fold the earcups inward to minimize their footprint.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.



Image: The RCA Wave-54 headphones are shown in their folded configuration, highlighting their compact and portable design.

TROUBLESHOOTING

If you encounter issues with your headphones, try the following solutions:

- **No Power:** Ensure the headphones are fully charged.

- **Cannot Pair:** Make sure Bluetooth is enabled on your device and the headphones are in pairing mode. Try turning both devices off and on again.
- **No Sound:** Check the volume levels on both the headphones and your connected device. Ensure the headphones are properly paired.
- **Poor Sound Quality:** Move closer to your connected device to reduce interference. Ensure there are no obstructions between the headphones and the device.

SPECIFICATIONS

Feature	Description
Model Name	Wave
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Battery Life	12 Hours
Frequency Range	20 Hz - 20,000 Hz
Ear Placement	Over Ear
Noise Control	Sound Isolation
Product Dimensions	7.32 x 2.17 x 7.68 inches
Manufacturer	RCA
Color	Black
UPC	850068964291

WARRANTY INFORMATION

RCA products typically come with a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official RCA website for detailed warranty terms and conditions specific to your Wave-54 headphones.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact RCA customer support through their official website or the contact information provided in your product documentation. Keep your purchase receipt and product model number handy when contacting support.

You can visit the [RCA Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question