

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MANBASNAKE](#) /
- › [MANBASNAKE M68 Tri-Mode Wireless Keyboard User Manual](#)

MANBASNAKE M68

MANBASNAKE M68 Tri-Mode Wireless Keyboard User Manual

Model: M68 | Brand: MANBASNAKE

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your MANBASNAKE M68 Tri-Mode Wireless Keyboard. This keyboard offers versatile connectivity options including Bluetooth 5.0, 2.4GHz wireless, and USB-C wired modes, designed for compatibility with various operating systems and devices.

Please read this manual thoroughly before using the product to ensure proper function and to maximize your user experience.

PACKAGE CONTENTS

Verify that all items are present in your package:

- MANBASNAKE M68 Tri-Mode Wireless Keyboard
- USB-C to USB-A Cable (for charging and wired connection)
- 2.4GHz USB Receiver (stored within the keyboard)
- User Manual

M68

THREE MODES GAMING KEYBOARD



67-key



3-mode
design



Rainbow
backlight



PBT
keycaps



Three-color
design



2000 mAh
battery

Image: The MANBASNAKE M68 keyboard shown with its USB-C cable and 2.4GHz receiver.

PRODUCT OVERVIEW

The MANBASNAKE M68 keyboard features a compact 67-key layout with PBT spherical keycaps. It includes a mode switch, USB-C port, and indicator lights for connectivity and battery status.



Image: Top-down view of the MANBASNAKE M68 keyboard, highlighting its compact 67-key layout.

Key Components:

- **USB-C Port:** Located on the side for wired connection and charging.
- **Mode Switch:** Allows selection between Bluetooth (BT), 2.4GHz wireless, and Wired modes.
- **Indicator Lights:** Display connection status, charging status, and battery level.
- **Adjustable Feet:** Two-level adjustable stand on the underside for ergonomic typing angles.
- **2.4GHz Receiver Storage:** The 2.4GHz USB receiver is stored in a dedicated slot on the side of the keyboard.

QUICK SWITCH WITH ONE CLICK



Image: A close-up side view of the keyboard, illustrating the USB-C charging port, the mode switch (BT/2.4G/Wired), and the storage compartment for the 2.4GHz wireless receiver.

SETUP

1. Wired Connection

1. Connect the provided USB-C cable to the keyboard's USB-C port.
2. Connect the other end of the USB-C cable to an available USB port on your computer.
3. Slide the mode switch on the keyboard to the "Wired" position.
4. The keyboard will be automatically recognized by your system and ready for use.

2. 2.4GHz Wireless Connection

1. Locate the 2.4GHz USB receiver stored in the keyboard's side compartment.
2. Plug the 2.4GHz USB receiver into an available USB port on your computer.
3. Slide the mode switch on the keyboard to the "2.4G" position.

4. The keyboard will automatically connect to the receiver. No additional drivers are typically required.

3. Bluetooth Connection

The keyboard supports pairing with up to three Bluetooth devices.

1. Slide the mode switch on the keyboard to the "BT" position.
2. To enter pairing mode for a specific channel (BT1, BT2, BT3), press and hold the **Fn + E** (for BT1), **Fn + R** (for BT2), or **Fn + T** (for BT3) keys for approximately 3-5 seconds until the corresponding indicator light flashes rapidly.
3. On your device (PC, Mac, iPad, Android), enable Bluetooth and search for new devices.
4. Select "MANBASNAKE M68" (or similar name) from the list of available devices to pair.
5. Once paired, the indicator light will stop flashing and remain solid for a few seconds, then turn off.
6. To switch between paired Bluetooth devices, simply press **Fn + E**, **Fn + R**, or **Fn + T** briefly.



Image: The keyboard displaying its three connectivity modes: Wired, 2.4GHz, and Bluetooth 5.0.

Function Key Combinations (Fn)

The keyboard features multi-function keys accessible via the **Fn** key:

- **Fn + ESC:** Toggles between F1-F12 function keys and number/symbol keys.
- **Fn + (Light Icon Key):** Toggles backlight on/off and cycles through lighting modes (e.g., breathing effect).
- **Fn + Spacebar:** Restores factory settings. Use with caution as this will erase all custom settings.
- **Fn + Win:** Locks/unlocks the Windows key to prevent accidental presses during gaming.
- **Fn + E/R/T:** Switches between Bluetooth devices 1, 2, and 3 respectively. (Hold for 3-5 seconds to initiate pairing mode).



Image: The keyboard highlighting various FN key combinations for multimedia and system controls.

Backlight Control

The keyboard features RGB backlighting. Use the **Fn + (Light Icon Key)** to turn the backlight on or off and to cycle through available lighting effects, such as a breathing mode.

Power Management and Charging

The keyboard is equipped with a built-in 2000mAh rechargeable battery. When the battery is low, the indicator light will flash. Connect the USB-C cable to the keyboard and a power source (e.g., computer USB port, USB wall adapter) to charge. A 5V/1A power adapter is recommended for optimal battery health. The indicator light will show charging status and turn off when fully charged. The keyboard features intelligent power-saving technology to extend battery life.



Image: An illustration emphasizing the 2000mAh battery capacity of the keyboard, indicating long-lasting power.

Adjustable Typing Angles

The keyboard includes a two-level adjustable stand on its underside, allowing you to set the typing angle to either 5° or 8° for improved ergonomic comfort and reduced wrist strain.

EXPERIENCE SUPERIOR HIGH-QUALITY PBT KEYCAPS



Image: The keyboard shown from the side, demonstrating the two adjustable height settings (5° and 8°) provided by its foldable feet.

MAINTENANCE

Cleaning the Keyboard

- Disconnect the keyboard from all power sources and devices before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the keycaps and surface.
- Avoid using harsh chemicals, abrasive cleaners, or solvents.
- For dust and debris between keys, use compressed air.

Battery Care

- Avoid fully discharging the battery frequently.
- Charge the keyboard regularly, even if not in constant use, to maintain battery health.
- Store the keyboard in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Keyboard Not Responding

- **Check Connection:** Ensure the keyboard is properly connected in Wired, 2.4GHz, or Bluetooth mode. Verify the mode switch is in the correct position.
- **Battery Level:** Charge the keyboard if the battery is low.
- **2.4GHz Receiver:** For 2.4GHz mode, ensure the USB receiver is securely plugged into your device. Try a different USB port.
- **Bluetooth Pairing:** For Bluetooth mode, re-pair the keyboard if the connection is lost. Ensure Bluetooth is enabled on your device.
- **Restart:** Restart your computer or device.

Keys Not Working or Input Lag

- **Clean Keys:** Check for debris under the affected keycaps.
- **Interference:** For wireless modes, move closer to the receiver/device or away from potential sources of interference (e.g., other wireless devices, large metal objects).
- **Firmware:** Check the manufacturer's website for any available firmware updates.

Backlight Not Working

- **Toggle Backlight:** Press **Fn + (Light Icon Key)** to ensure the backlight is not turned off.
- **Battery Level:** Low battery can disable backlighting. Charge the keyboard.

Bluetooth Connection Issues

- **Device Compatibility:** Ensure your device's Bluetooth version is compatible (Bluetooth 4.0 or higher is generally recommended).
- **Forget Device:** On your device, remove the keyboard from the list of paired Bluetooth devices and attempt to re-pair.
- **Reset Keyboard:** Perform a factory reset using **Fn + Spacebar**.

SPECIFICATIONS

Model Number	M68
Connectivity	Bluetooth 5.0, 2.4GHz Wireless, USB-C Wired
Keycaps	PBT Spherical Keycaps
Keyboard Type	Membrane Silent Keyboard
Battery Capacity	2000mAh
Charging Port	USB-C (5V/1A recommended)
Backlighting	RGB
Compatible Devices	Laptop, PC, Smartphone, Tablet
Operating Systems	Windows, macOS, Linux, iOS, Android
Item Weight	1.34 pounds (approx. 608g)

Package Dimensions	14.53 x 5.16 x 1.85 inches
---------------------------	----------------------------

WARRANTY AND SUPPORT

Warranty Information

Please refer to the warranty card included with your product or visit the official MANBASNAKE website for detailed warranty terms and conditions. The warranty typically covers manufacturing defects for a specified period from the date of purchase.

Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact MANBASNAKE customer support through their official website or the contact information provided in your product packaging. Please have your model number (M68) and purchase details ready when contacting support.

PRODUCT VIDEOS

Video: A demonstration of the MANBASNAKE M68 keyboard's features and functionality.

Video: An overview of the MANBASNAKE M68 keyboard's design and connectivity options.