

[manuals.plus](#) /› [TIMESS](#) /› [TIMESS 11-inch Silent Analog Wall Clock \(Model: TIMESS-P35-Wood Yellow\) - User Manual](#)

## TIMESS TIMESS-P35-Wood Yellow

# TIMESS 11-inch Silent Analog Wall Clock (Model: TIMESS-P35-Wood Yellow) - User Manual

Your guide to setup, operation, and maintenance.

## 1. INTRODUCTION

This manual provides comprehensive instructions for the TIMESS 11-inch Silent Analog Wall Clock, Model TIMESS-P35-Wood Yellow. This clock features a classic wood-look finish, a silent quartz movement, and is battery-operated, making it suitable for various indoor environments such as homes, offices, and classrooms. Please read this manual thoroughly before use to ensure proper setup and operation.

## 2. SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries properly according to local regulations.
- Avoid exposing the clock to extreme temperatures, high humidity, or direct sunlight.
- Do not attempt to disassemble or repair the clock yourself. Contact qualified personnel for service.
- Ensure the clock is securely mounted to prevent falling.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x TIMESS 11-inch Silent Analog Wall Clock (Model: TIMESS-P35-Wood Yellow)
- 1 x User Manual (This document)

*Note: 1 AA carbon battery is required for operation and is **not included** in the package.*

## 4. PRODUCT OVERVIEW

The TIMESS wall clock is designed for clear readability and quiet operation. Its classic aesthetic

complements various interior designs.

## Key Features:

- **Silent Sweep Movement:** Ensures a quiet environment without ticking sounds.
- **High-Quality Quartz Mechanism:** Provides accurate timekeeping.
- **Easy-to-Read Dial:** Features large, clear black numerals on a white background with distinct 15-minute marks.
- **Durable Construction:** Refined wood-look grain frame and an HD glass panel for protection and clarity.
- **Low Maintenance:** Fade-resistant dial and easy-to-clean surfaces.

## Components:

1. Clock Face with Numerals
2. Hour Hand
3. Minute Hand
4. Second Hand (Silent Sweep)
5. Battery Compartment (on the back)
6. Time Setting Knob (on the back)
7. Hanging Hole (on the back)



**Figure 4.1:** Front view of the TIMESS 11-inch wall clock. This image displays the clock's face with large, clear black numbers against a white background, enclosed in a classic wood-look frame. The hour, minute, and silent sweep second hands are visible.



**Figure 4.2:** Angled view of the TIMESS wall clock. This perspective emphasizes the clear glass cover protecting the dial and the texture of the wood-look frame.

## 5. SETUP

---

### 5.1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA carbon battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover.



**Figure 5.1:** Detail of the clock's rear, showing the quartz movement and the battery compartment where a single AA battery is inserted.

## 5.2. Setting the Time

1. Locate the time setting knob on the back of the clock, usually a small wheel or dial near the battery compartment.
2. Gently turn the knob in either direction until the hour and minute hands display the correct time.
3. Avoid moving the hands directly from the front of the clock, as this may damage the movement.

## 5.3. Mounting the Clock

1. Choose a suitable location on a wall that is sturdy and can support the clock's weight.
2. Install a nail or hook securely into the wall at the desired height.
3. Align the hanging hole on the back of the clock with the installed nail or hook.
4. Carefully hang the clock, ensuring it is level and stable.



**Figure 5.2:** Rear view of the clock, illustrating the integrated hanging hole for easy wall mounting and the battery compartment.



**Figure 5.3:** Detailed diagram of the universal hanging hole, showing its dimensions (0.22" / 0.55cm opening, 0.73" / 1.85cm width) for compatibility with various hooks and nails.

## 6. OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, the TIMESS wall clock will begin operating automatically. The silent sweep second hand will move continuously, indicating the passage of time without any audible ticking sound.



**Figure 6.1:** This graphic demonstrates the low noise level (15dB) of the TIMESS wall clock's silent movement, significantly quieter than a conversation voice (40-60dB) or a vacuum cleaner (60-80dB).

## 7. MAINTENANCE

### 7.1. Cleaning

- To clean the clock, gently wipe the surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or the glass.

### 7.2. Battery Replacement

- When the clock starts losing time or stops, it is an indication that the battery needs to be replaced.
- Follow the battery installation steps (Section 5.1) to replace the old battery with a new AA carbon battery.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not working or stops intermittently.	Battery is dead or incorrectly installed.	Check battery polarity. Replace with a new AA carbon battery.
Clock is losing or gaining time.	Weak battery or environmental factors.	Replace the battery. Ensure the clock is not exposed to extreme temperatures.
Clock makes a ticking sound.	This model features a silent sweep movement. If ticking occurs, the movement may be faulty.	Contact customer support for assistance.
Hands are stuck or not moving smoothly.	Obstruction or internal mechanism issue.	Ensure nothing is obstructing the hands. If the issue persists, contact customer support.

## 9. SPECIFICATIONS

Brand	TIMESS
Model Number	TIMESS-P35-Wood Yellow

<b>Color</b>	Yellow Chestnut
<b>Product Dimensions</b>	27.94 x 3.81 x 27.94 cm (11 inches diameter)
<b>Product Weight</b>	721 g
<b>Material</b>	Acrylonitrile Butadiene Styrene (ABS)
<b>Special Features</b>	Large display, Silent sweep movement
<b>Display Type</b>	Analog
<b>Power Source</b>	1 x AA Carbon Battery (not included)



**Figure 9.1:** This diagram illustrates the 11-inch (approximately 27.94 cm) diameter of the TIMESS wall clock, providing a clear visual of its size.

## 10. WARRANTY AND SUPPORT

Specific warranty details may vary by region and retailer. Please refer to the purchase documentation or contact your point of sale for information regarding warranty coverage.

For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts, please contact the TIMESS customer service department or your authorized retailer. Contact information can typically be found on the product packaging or the retailer's website.