

weelikeit CXUS-C28-BLUE

weelikeit Kids Tablet Instruction Manual

MODEL: CXUS-C28-BLUE

1. INTRODUCTION

The weelikeit Kids Tablet is specifically designed to provide a safe, engaging, and educational experience for children aged 3 to 14. It features a unique dual-system approach, offering both a standard Android environment for general use and a dedicated Kids' System with robust parental controls. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your tablet to ensure optimal performance and a positive user experience.



Image: Front and back view of the weelikeit Kids Tablet in blue, showcasing its protective case and vibrant display.

2. WHAT'S IN THE BOX

Upon unboxing your weelikeit Kids Tablet, please verify that all the following items are included:

- Kids Tablet x 1
- USB cable x 1
- Protective film x 1
- User manual x 1

3. SETUP GUIDE

3.1 Initial Charging

Before first use, fully charge the tablet using the provided USB cable and a compatible power adapter (not included). The charging indicator will typically show progress and turn off or change color when fully charged.

3.2 Powering On/Off

- **To Power On:** Press and hold the power button located on the side of the tablet until the screen lights up.
- **To Power Off:** Press and hold the power button until a power-off menu appears on the screen. Select 'Power Off' and confirm.

3.3 Connecting to Wi-Fi

After powering on, navigate to the tablet's settings. Select 'Network & Internet' or 'Wi-Fi', then choose your desired Wi-Fi network from the list. Enter the password if prompted and connect. A stable Wi-Fi connection is essential for downloading apps and accessing online content.

3.4 Initial Android System Setup

Follow the on-screen prompts to complete the initial setup of the Android system. This may include selecting language, time zone, and setting up a Google account. A Google account is required to access the Google Play Store and download additional applications.

4. OPERATING INSTRUCTIONS

4.1 Parental Control Mode

The tablet features an easy-to-use parental control mode, allowing you to manage your child's tablet experience. This mode provides tools to:

- **Customize Screen Time Limits:** Set daily limits for tablet usage.
- **Set Educational Goals:** Encourage learning by allocating time for educational apps.
- **Filter Age-Appropriate Content:** Ensure your child only accesses suitable content.
- **Expand Access to Kid-Friendly Web Content:** Curate safe websites for browsing.
- **Download New Apps:** Approve and manage app installations.

Advanced Parental Controls



Monitor Activity



APP Access Control



Set Screen Time



Content Filter

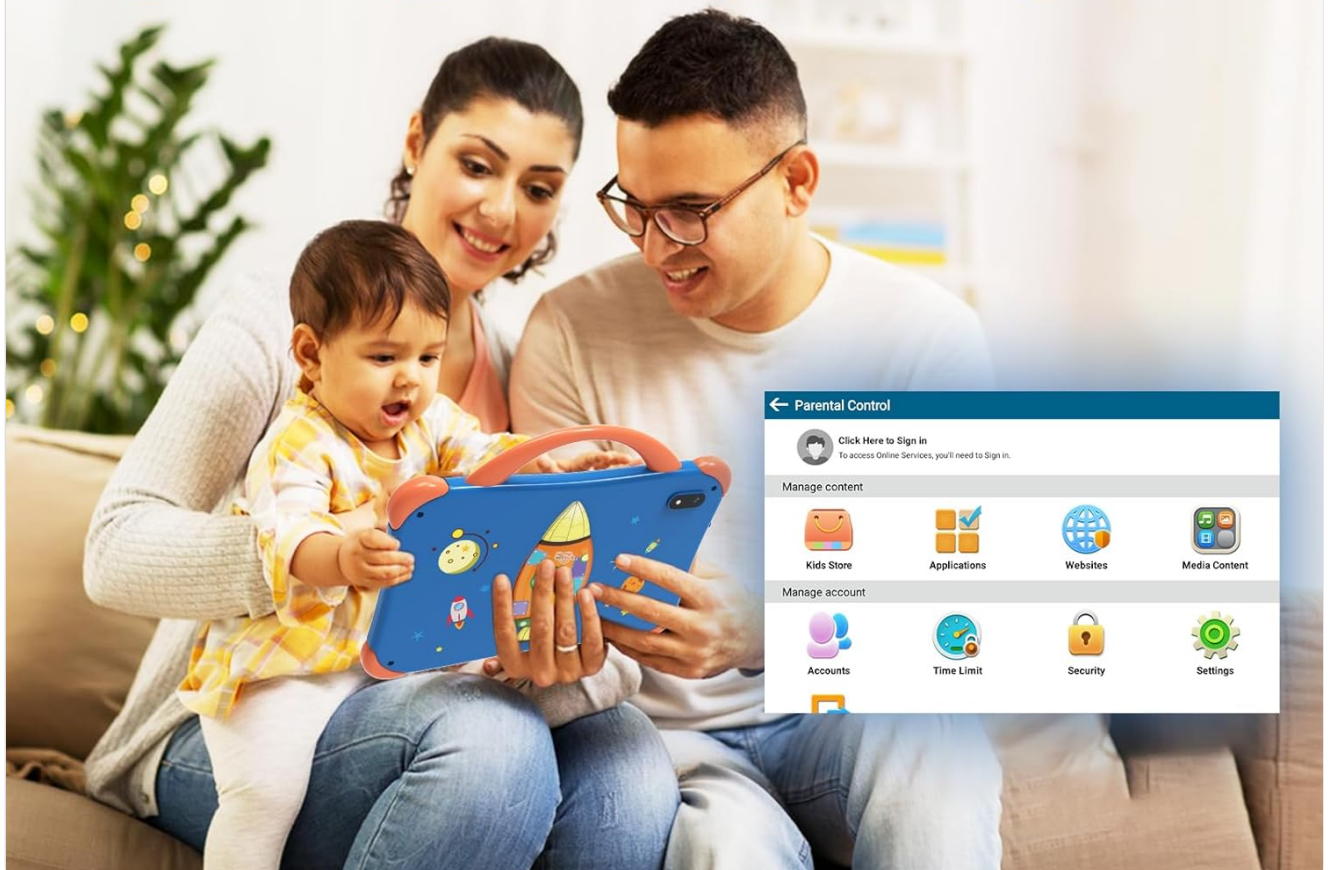


Image: Illustration of the tablet's advanced parental control features, showing a family interacting with the device.



Image: A visual representation of the comprehensive parental control options available on the tablet.

4.2 Kids' System and Educational Content

The dedicated Kids' System comes pre-installed with various educational applications designed to help children develop skills and spark their imagination. This dual system allows for a seamless transition between a standard Android environment and a child-friendly interface.



Image: The tablet screen showing the Android 14 interface with a selection of pre-installed educational apps for children.



Image: Displaying Google GMS Certification, ensuring access to a wide range of apps from the Google Play Store for learning and entertainment.



Image: Various scenarios depicting children learning and playing with the tablet, highlighting its versatility.

4.3 Performance and Storage

The tablet is equipped with a GMS-certified powerful quad-core processor, 8GB (4+4) RAM, and 64GB ROM, expandable up to 512GB. This configuration allows for smooth multitasking and provides ample space for games, music, and videos.



Image: Visual representation of the tablet's enhanced speed and storage capabilities.

5. DISPLAY AND EYE PROTECTION

The weelikeit 7-inch kids' tablet features a high-quality 1024 x 600 IPS HD screen, offering wide viewing angles and vibrant colors for an enjoyable visual experience. To promote eye health, it is recommended to remind children to maintain a proper viewing distance and take regular breaks during use.



Image: The tablet's 7-inch HD screen and dual camera setup are highlighted.

6. PROTECTIVE CASE AND DESIGN

The tablet comes with a specially designed silicone case that provides protection against dust, bumps, and drops. The case features precise cut-outs for all ports and cameras, ensuring full accessibility. Its colorful handle and adjustable stand allow for hands-free viewing and portability, enhancing the user experience for children.



Image: Features of the tablet's protective case, including its soft silicone material, anti-drop design, and portable handle.



Image: The tablet's design, emphasizing its ease of use and durability for children.

7. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid extreme temperatures and do not allow the battery to fully drain frequently.
- **Software Updates:** Periodically check for system updates in the tablet's settings to ensure optimal performance and security.
- **Storage Management:** Regularly clear unnecessary files and apps to maintain sufficient storage space and prevent slowdowns.

8. TROUBLESHOOTING

8.1 Tablet is Slow or Unresponsive

- Close unused applications running in the background.
- Clear cache and temporary files.
- Restart the tablet.
- Ensure sufficient storage space is available.

8.2 Wi-Fi Connectivity Issues

- Ensure Wi-Fi is enabled on the tablet.
- Restart your Wi-Fi router.
- Forget the network and reconnect.
- Check if other devices can connect to the same Wi-Fi network.

8.3 Short Battery Life

- Reduce screen brightness.
- Disable Wi-Fi, Bluetooth, and GPS when not in use.
- Close background apps.
- Limit streaming video and gaming.

8.4 Apps Crashing or Not Loading

- Clear the app's cache and data in settings.
- Update the app to the latest version.
- Reinstall the app.
- Ensure the tablet's operating system is up to date.

9. SPECIFICATIONS

Feature	Specification
Brand	weelikeit
Model Name	C28

Item Model Number	CXUS-C28-BLUE
Operating System	Android 14
Screen Size	7 Inches
Screen Resolution	1024x600 IPS HD
Processor	Quad-core (MediaTek)
RAM	8GB (4+4)
Internal Storage (ROM)	64GB
Expandable Storage	Up to 512GB (via microSD card)
Wireless Type	802.11ac (Wi-Fi), Bluetooth
Cameras	2MP Front, 5MP Rear
Item Weight	1.32 pounds
Product Dimensions	7.72 x 5 x 1.77 inches
Color	Blue
Batteries	1 A batteries required (included)

10. WARRANTY AND SUPPORT

weelikeit has been a leading brand in manufacturing and selling toddler tablets since 2011, dedicated to providing high-quality products and reliable service to every customer. For any inquiries or support needs, please refer to the contact information provided with your purchase or visit the official weelikeit website.