

Select Sound DW2008

Select Sound DW Savage 8-inch Bluetooth Speaker User Manual

Model: DW2008 | Brand: Select Sound

1. INTRODUCTION

Thank you for purchasing the Select Sound DW Savage 8-inch Bluetooth Speaker. This portable and versatile audio solution is designed to provide clear, immersive sound with the convenience of wireless connectivity. Featuring a powerful 8-inch speaker, built-in microphone, and dynamic RGB lights, it is perfect for various occasions. This manual provides essential information for the safe and efficient operation of your new speaker.

2. SAFETY INFORMATION

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid placing the speaker near heat sources or in direct sunlight.
- Do not disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Use only the charging cable provided or recommended by the manufacturer.
- Keep the speaker away from children and pets.
- Do not block the ventilation openings.
- Ensure proper ventilation when operating the speaker.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Select Sound DW Savage 8-inch Bluetooth Speaker
- Microphone
- Charging Cable (USB Type-C)
- User Manual (this document)



Figure 3.1: The Select Sound DW Savage speaker as packaged, illustrating the speaker and its accompanying microphone.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your DW Savage speaker.



Figure 4.1: Front view of the DW Savage speaker, showcasing its illuminated RGB light panel.



Figure 4.2: An angled perspective of the speaker, emphasizing its portable form factor and integrated carrying handle.



Figure 4.3: Close-up of the speaker's top control panel, detailing buttons for mode, volume, track control, RGB lights, power, and input ports (MIC, AUX, USB, Type-C 5V).

Control Panel Functions:

- **MODE:** Press to switch between input modes (Bluetooth, AUX, USB).
- **M.VOL- / Previous Track:** Press to decrease microphone volume; hold to go to the previous track.
- **M.VOL+ / Next Track:** Press to increase microphone volume; hold to go to the next track.
- **Play/Pause:** Press to play or pause audio.
- **Volume -:** Press to decrease main speaker volume.
- **Volume +:** Press to increase main speaker volume.
- **DSB (Deep Sound Bass):** Press to activate or deactivate bass boost.
- **Pairing Button:** Press to initiate Bluetooth pairing.
- **Light Button:** Press to cycle through RGB light modes or turn lights off.
- **Power Button:** Press and hold to turn the speaker On/Off.

Input Ports:

- **MIC:** 6.35mm input for the included microphone.
- **AUX:** 3.5mm auxiliary input for wired audio devices.
- **USB:** USB-A port for playing audio from USB drives.
- **TYPE-C 5V:** USB Type-C port for charging the speaker.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the speaker. Connect the provided USB Type-C charging cable to the 'TYPE-C 5V' port on the speaker and the other end to a compatible USB power adapter (not included) or a computer USB port. The charging indicator will show the charging status and turn off when fully charged. A full charge may take several hours.

5.2 Connecting the Microphone

Insert the microphone cable into the 'MIC' input port on the top panel of the speaker. Ensure it is securely connected. The microphone is ready for use once plugged in.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

To turn the speaker **ON**, press and hold the **Power Button** on the top panel until you hear an audible prompt. To turn the speaker **OFF**, press and hold the **Power Button** again.

6.2 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing light or audible prompt.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "DW Savage" from the list of found devices.
4. Once connected, you will hear a confirmation sound. The Bluetooth indicator light will become solid.
5. If prompted for a password, enter "0000".

The speaker will automatically attempt to reconnect to the last paired device when powered on.

6.3 Using AUX Input

Connect an audio device (e.g., MP3 player, computer) to the 'AUX' port on the speaker using a 3.5mm audio cable (not included). Press the **MODE** button to switch to AUX mode. Audio will now play through the speaker from your connected device.

6.4 Using USB Input

Insert a USB flash drive containing audio files into the 'USB' port. The speaker will automatically switch to USB mode and begin playing audio from the drive. If it does not switch automatically, press the **MODE** button to select USB mode.

6.5 Microphone Usage

Once the microphone is connected, you can use it for karaoke or public speaking. Adjust the microphone volume using the **M.VOL-** and **M.VOL+** buttons on the top panel.

6.6 RGB Light Control

Press the **Light Button** on the top panel to cycle through different RGB light modes or to turn the lights off.

6.7 Volume Control

Adjust the main speaker volume using the **Volume -** and **Volume +** buttons on the top panel.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker fully.
No sound from speaker.	Volume is too low; incorrect input mode; device not connected.	Increase volume; press MODE button to select correct input; ensure device is properly connected (Bluetooth, AUX, USB).
Bluetooth not connecting.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode; turn on Bluetooth on your device; move device closer to speaker (within 10 meters).
Microphone not working.	Microphone not properly connected; microphone volume too low.	Ensure microphone is fully plugged into the 'MIC' port; increase microphone volume using M.VOL+ button.
RGB lights not working.	Lights are off or in a static mode.	Press the Light Button to cycle through modes or turn lights on.

9. SPECIFICATIONS

Feature	Detail
Model Name	DW Savage
Speaker Type	Rechargeable Speaker
Special Features	Bluetooth, RGB Lights, Integrated Microphone
Compatible Devices	Laptop, Smartphone, Tablet, Television
Product Dimensions (D x W x H)	25 x 25 x 35 centimeters
Product Weight	3.2 Kilograms

Feature	Detail
Connectivity Technology	Bluetooth
Speaker Size	8 Inches
Power Source	Rechargeable Battery
Max Speaker Output Power	30 Watts
Frequency Response	10 GHz
Control Method	Tactile Buttons
Components Included	Microphone

10. WARRANTY AND SUPPORT

The Select Sound DW Savage speaker comes with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or contact Select Sound customer support. For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact Select Sound customer support through their official channels. You can typically find contact information on the product packaging or the brand's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question