

Manuals.plus /

› Braun Household /

› Braun MultiFry 3 Hot AirFryer User Manual

Braun Household HF 3030 BK

Braun MultiFry 3 Hot AirFryer User Manual

Model: HF 3030 BK

Brand: Braun Household

1. INTRODUCTION

Thank you for choosing the Braun MultiFry 3 Hot AirFryer. This appliance is designed to provide a healthier way to cook your favorite foods, utilizing super-hot air circulation for crispy results with significantly less fat. Please read this manual thoroughly before first use to ensure safe and optimal operation of your new air fryer.

1.1. Safety Information

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances, to allow sufficient air circulation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep children and pets away from the appliance during operation. Hot surfaces can cause burns.
- Unplug the air fryer from the power outlet when not in use and before cleaning.
- Do not block any air vents during operation.
- Only use accessories recommended by the manufacturer.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.

2. PRODUCT OVERVIEW

The Braun MultiFry 3 Hot AirFryer features a compact design with a generous 4.3-liter capacity, digital touch screen, and 8 automatic programs for versatile cooking.

2.1. Key Features

- **RealAIR Technology:** Circulates super-hot air for crispy, tender results with up to 90% less fat compared to conventional deep frying.
- **8 Automatic Programs:** Pre-set time and temperature settings for popular dishes, simplifying cooking.
- **4.3 Litre Capacity:** Spacious drawer suitable for cooking meals for families, such as 1.2 kg of chicken or 1 kg of frozen fries.
- **Energy Saving:** Designed to save up to 70% energy compared to a traditional oven.
- **Ultimate Convenience:** No preheat time required for many dishes, and the non-stick coated drawer is dishwasher safe for easy cleaning.
- **Digital Touch Screen:** Intuitive interface for precise control over cooking settings.

2.2. Components

- Main Unit with Digital Control Panel
- Removable Frying Basket
- Removable Grid/Crisper Plate

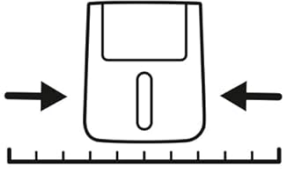 


Image: The Braun MultiFry 3 Hot AirFryer in black, showcasing its digital display and removable basket filled with cooked food, with a

plate of crispy chicken pieces in the foreground.

Braun MultiFry 3

 
Your easy way to delicious food.



**Compact
shape**



**Energy
saving**

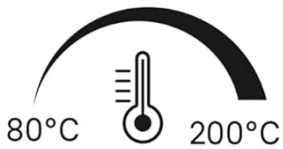

**Adjustable
temperature**



**Easy
cleaning**



*** Compared to homemade fresh potatoes prepared in conventional deep fryer.**

Image: Diagram highlighting key features of the Braun MultiFry 3, including compact shape, 70% energy saving, adjustable temperature (80°C-200°C), and easy cleaning, with the air fryer shown on the right.

3. SETUP

3.1. Unboxing and Initial Placement

1. Carefully remove the air fryer and all packaging materials from the box.
2. Remove any stickers or labels from the appliance.
3. Place the main unit on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space at the back and sides, and 20 cm above the appliance for proper ventilation.

3.2. Before First Use

1. Wash the frying basket and grid thoroughly with hot water, dish soap, and a non-abrasive sponge.
2. Rinse and dry all parts completely.
3. Wipe the inside and outside of the main unit with a damp cloth.

4. Insert the grid into the frying basket, then slide the basket back into the main unit until it clicks into place.

4. OPERATING INSTRUCTIONS

The Braun MultiFry 3 features an intuitive digital touch screen for easy operation.

4.1. Basic Operation

1. Plug the power cord into a grounded wall outlet. The display will light up.
2. Pull out the frying basket. Place your ingredients into the basket. Do not exceed the MAX fill line.
3. Slide the frying basket back into the air fryer.
4. Press the Power button to turn on the appliance.
5. Use the temperature control buttons (+/-) to set the desired cooking temperature (e.g., 180°C).
6. Use the time control buttons (+/-) to set the desired cooking time (e.g., 15 minutes).
7. Press the Start/Pause button to begin cooking.
8. During cooking, you may pull out the basket to shake or turn ingredients. The air fryer will pause automatically and resume when the basket is reinserted.
9. When the cooking time is complete, the air fryer will beep and automatically shut off. Carefully pull out the basket and empty the contents.

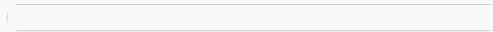 


Image: A hand touching the digital display of the Braun MultiFry 3, showing the temperature setting of 180°C and various program icons.

4.2. Automatic Programs

The air fryer comes with 8 pre-set programs for common dishes. To use an automatic program:

1. After placing ingredients in the basket and reinserting it, press the Power button.
2. Press the Program Selection button (usually an icon with multiple squares or a menu symbol) to cycle through the available programs.
3. Once the desired program icon is highlighted, press the Start/Pause button to begin. The air fryer will automatically set the optimal temperature and time.

8 Automatic programs

Enjoy fantastic versatility to prepare all-time favourites.



Image: A collage of four different dishes (roasted vegetables, donuts, meatballs, and sliced vegetables) demonstrating the versatility of the 8 automatic programs.

4.3. Cooking Tips

- For best results, shake or toss ingredients halfway through cooking, especially for smaller items like fries or nuggets.
- Lightly brush or spray a small amount of oil on fresh ingredients for extra crispiness.
- Pre-packaged frozen foods often require less cooking time than fresh ingredients. Refer to the food packaging for recommended air frying times.
- You can use oven-safe dishes or molds in the air fryer basket for baking items like muffins or small casseroles.

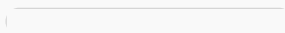 


Image: Three muffins in small white ramekins placed inside the air fryer basket, demonstrating the ability to bake in the appliance.

5. MAINTENANCE

5.1. Cleaning

Clean the air fryer after every use.

1. Unplug the appliance and allow it to cool down completely before cleaning.
2. Remove the frying basket and grid. These parts are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. Clean the interior of the appliance with a damp cloth and mild detergent if necessary.
5. Ensure all parts are completely dry before reassembling or storing.

Easy to clean

Basket and grid are easily removable and dishwasher safe.



Image: The removable basket and grid of the Braun MultiFry 3 placed inside a dishwasher, illustrating their dishwasher-safe feature for easy cleaning.

5.2. Storage

Store the air fryer in a cool, dry place. Ensure the appliance is clean and dry before storing.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet not working.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overloaded. Ingredients not shaken/tossed.	Cook smaller batches. Shake or toss ingredients halfway through cooking.
White smoke coming from the appliance.	Fat residue from previous use. Cooking fatty ingredients.	Clean the basket and grid thoroughly. Remove excess fat from ingredients.
Food is not crispy.	Not enough oil on fresh ingredients. Temperature too low or time too short.	Lightly brush or spray oil on fresh food. Increase temperature or cooking time.

7. SPECIFICATIONS

Specification	Value
Brand	Braun Household
Model Number	HF 3030 BK
Color	Black
Product Dimensions	26.2 x 36.2 x 30.1 cm
Capacity	4.3 Liters
Power / Wattage	1500 watts
Special Features	Automatic Shut-Off
Item Weight	4 Kilograms

8. WARRANTY AND SUPPORT

8.1. Warranty Information

The Braun MultiFry 3 Hot AirFryer (HF 3030 BK) comes with a 1-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

8.2. Customer Support

For any questions, technical assistance, or warranty claims, please contact Braun Household customer support. Refer to the product packaging or the official Braun Household website for specific contact details in your region.

