Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Pyle /
- > Pyle PPHP1028 Bluetooth PA and Karaoke Speaker System User Manual

Pyle PPHP1028

Pyle PPHP1028 Bluetooth PA and Karaoke Speaker System User Manual

Model: PPHP1028

Brand: Pyle

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Pyle PPHP1028 Bluetooth PA and Karaoke Speaker System. Please read this manual thoroughly before using the product to ensure proper function and to maximize your user experience. This system features dual 10-inch speakers, a wireless microphone, Bluetooth connectivity, multiple input options, and dynamic LED lights.

WHAT'S IN THE BOX

Upon unpacking, please ensure all items listed below are present and in good condition:

- PA Speaker System
- (1) Wireless Microphone
- Power Cord
- Remote Control



Figure 1: Included components of the Pyle PPHP1028 system. This image displays the main speaker unit, a wireless microphone, a power cord, and a remote control, illustrating the complete package.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, fire, or injury, always follow basic safety precautions when using this product. Read all instructions before use.

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this appliance during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PRODUCT OVERVIEW AND CONTROLS

Familiarize yourself with the main components and control panel of your Pyle PPHP1028 speaker system.



Figure 2: Side panel controls and inputs. This image highlights the various knobs, buttons, and ports available on the speaker's control panel, including volume, EQ, and input jacks.

Control Panel Features:

- Volume Control: Adjusts the overall output volume.
- Treble/Bass Controls: Adjusts high and low frequencies for sound customization.
- Echo Control: Adds echo effect to microphone input.
- Mic Priority: Automatically lowers music volume when microphone is in use.
- Mode Button: Switches between input sources (Bluetooth, USB, SD, AUX, FM).
- USB/SD Card Slots: For media playback.
- AUX Input: 3.5mm jack for external audio devices.
- 6.5mm Mic Input: For wired microphones.
- LED Light Switch: Controls the dynamic LED lighting.

SETUP GUIDE

1. Charging the Speaker

Before initial use, fully charge the speaker's built-in rechargeable battery. Connect the provided power cord to the speaker's power input and then to a standard wall outlet. The charging indicator will illuminate. A full charge typically takes 6-8 hours and provides up to 8 hours of usage.



Figure 3: Battery charging and usage information. This graphic illustrates the typical charging time (6-8 hours) and playing time (2-8 hours) for the built-in rechargeable battery.

2. Powering On/Off

Locate the power switch on the control panel. Flip the switch to the "ON" position to power on the speaker. To power off, flip the switch to the "OFF" position.

3. Connecting the Wireless Microphone

The included wireless microphone is pre-paired with the speaker. Simply insert batteries into the microphone and power it on. The speaker will automatically detect the microphone. Adjust the microphone volume and echo effect using the dedicated controls on the speaker's panel.

4. Speaker Placement

For optimal sound distribution, place the speaker on a stable, flat surface. Ensure there are no obstructions directly in front of the speaker grilles. The integrated wheels and extendable handle facilitate easy transport.



Figure 4: Portability feature. This image shows a person easily transporting the speaker using its extendable handle and integrated wheels.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

- 1. Power on the Pyle PPHP1028 speaker.
- 2. Press the "MODE" button on the control panel or remote control until "Bluetooth" mode is selected. The display will show "BLUE" and a pairing indicator will flash.
- 3. On your smartphone, tablet, or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
- 4. Select "PYLEUSA" from the list of devices.
- 5. Once paired, the speaker will emit a confirmation tone, and the Bluetooth indicator will stop flashing. You can now stream audio wirelessly.

2. USB/Micro SD Playback

- 1. Insert a USB flash drive or Micro SD card (pre-loaded with MP3 audio files) into the respective slot on the control panel.
- 2. The speaker will automatically switch to USB/SD mode and begin playing audio. If not, press the "MODE" button to select the correct input.
- 3. Use the Play/Pause, Next, and Previous buttons on the control panel or remote to manage playback.

3. AUX Input

- 1. Connect an external audio device (e.g., MP3 player, laptop) to the speaker's 3.5mm AUX input jack using a standard audio cable (not included).
- 2. Press the "MODE" button until "AUX" mode is selected.
- 3. Control playback and volume from your connected device.

4. FM Radio

- 1. Press the "MODE" button until "FM" mode is selected.
- 2. Press the Play/Pause button to initiate an automatic scan for available FM stations. The speaker will save detected stations.
- 3. Use the Next and Previous buttons to navigate through the saved FM stations.

5. Karaoke Features

- Microphone Usage: Ensure the wireless microphone is powered on. Adjust its volume using the dedicated MIC VOL knob.
- Echo Effect: Use the ECHO knob to add a reverberation effect to your vocals.
- **Mic Priority:** Activate the Mic Priority function (if available on your model) to automatically lower background music when speaking into the microphone.

6. LED Lights

The speaker features dynamic LED lights that can sync with the music. Use the LED light switch on the control panel to turn the lights on or off, or to cycle through different lighting modes.

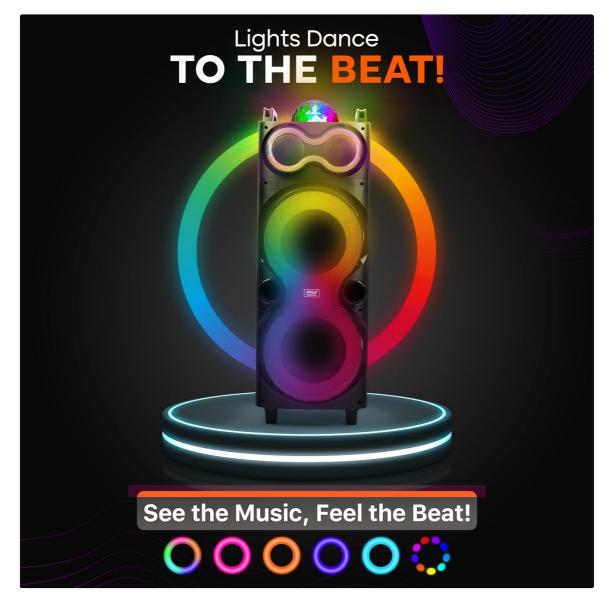


Figure 5: Dynamic LED lighting. This image shows the speaker illuminated with vibrant, multi-colored LED lights, illustrating the visual effects that can accompany audio playback.

MAINTENANCE

Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the finish. Ensure no liquids enter the speaker grilles or control panel openings.

Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to partially charge the battery every few months to maintain its lifespan.

Battery Care

The Pyle PPHP1028 features overcharge and over-discharge protection to ensure battery longevity. To maximize battery life, avoid completely draining the battery frequently and store the unit with some charge.

TROUBLESHOOTING

Problem	Possible Cause	Solution		
No power	Battery drained; Power cord not connected; Power switch off.	Charge the battery; Ensure power cord is securely connected; Turn power switch to ON.		
No sound output	Volume too low; Incorrect input mode selected; Audio cable faulty.	Increase volume; Press MODE button to select correct input; Check/replace audio cable.		
Bluetooth not connecting	Speaker not in Bluetooth mode; Device too far; Device already connected to another speaker.	Select Bluetooth mode; Move device closer; Disconnect from other devices and try again.		
Microphone not working	Microphone off; Batteries low/dead; MIC VOL too low.	Ensure microphone is on; Replace batteries; Increase MIC VOL.		

SPECIFICATIONS

Feature	Detail		
Model Number	PPHP1028		
Power Output	240 Watts		
Speaker Configuration	Dual 10-inch Speakers, 2-inch Tweeters		
Impedance	4 Ohm		
Connectivity Technology	Bluetooth, USB, Micro SD, AUX, FM Radio		
Audio Inputs	AUX (3.5mm), USB, Micro SD, 6.5mm Microphone Input		
Battery Type	Rechargeable Lithium-ion		
Battery Capacity	4000mAh		
Battery Life	Up to 8 hours (usage)		
Charging Time	6-8 hours		
Product Dimensions (L x W x H)	13 x 13.2 x 39 inches		
Item Weight	28 pounds		
Material	Metal, Plastic		
UPC	842893165349		

WARRANTY AND SUPPORT

Pyle products are designed and manufactured to the highest quality standards. For warranty information, technical support, or service inquiries, please refer to the official Pyle website or contact their customer support directly. Keep your purchase receipt as proof of purchase.

Pyle Customer Support: Please visit www.pyleusa.com for contact information and support resources.

Related Documents - PPHP1028



PYLE PWMA285BT Portable Wireless BT Karaoke Speaker System User Manual

Comprehensive user manual for the PYLE PWMA285BT Portable Wireless BT Karaoke Speaker System. This guide details features like DJ lights, rechargeable battery, wireless microphone, recording capabilities, and connectivity options for Bluetooth, MP3, USB, SD, and FM radio.

User Manual of Product 1:
Pyle Custon Peratise Wileless Silveton Narosine PA Loud
speaker. ** ("Subrother Sound System with OU Lights.
Hischarpalaid States", JRM Flads USEI / Micro SCI Reader,
Microphone, Remote - ProMASSIST

User Manual of Predicts 21
Pyle Provide 149* Wileless Microphone System - Professional
Billitery.

Pyle PWMA335BT Bluetooth Speaker and PDWM91 VHF Microphone System User Manual

Comprehensive user manual detailing the features, operation, and specifications for the Pyle PWMA335BT Portable Wireless Bluetooth Karaoke PA Loudspeaker and the Pyle PDWM91 Professional VHF Handheld Microphone System.



Pyle PWMA335BT.5 Portable Wireless BT Karaoke Speaker System User Manual

User manual for the Pyle PWMA335BT.5 portable wireless Bluetooth karaoke speaker system. Details features, recording functions, wireless BT pairing, operational controls, remote instructions, technical specifications, and support contact information.



PYLE PHP18DJT 8" Portable Wireless BT Speaker System User Guide

User guide for the PYLE PHP18DJT 8" Portable Wireless BT Speaker System, detailing features, technical specifications, control functions, and troubleshooting.



Pyle Wireless Karaoke Player PKRK9CR Instruction Manual

Comprehensive instruction manual for the Pyle Wireless Karaoke Player, Model PKRK9CR. This guide details product specifications, operational functions, connection methods for car audio, smartphones, and computers, music recording and playback, charging instructions, safety precautions, and troubleshooting tips.



Pyle Portable PA Speaker User Manual: PPHP842B, PPHP1042B, PPHP1242B, PPHP1542B

Comprehensive user manual for Pyle Portable PA Speakers (PPHP842B, PPHP1042B, PPHP1042B, PPHP1542B). Learn about features, controls, TWS function, troubleshooting, and technical specifications for these wireless BT speakers.