

## SUSTEAS LS-1070

# SUSTEAS Rotary Cheese Grater with Handle - Instruction Manual

Model: LS-1070

## INTRODUCTION

---

Thank you for choosing the SUSTEAS Rotary Cheese Grater with Handle. This versatile kitchen tool is designed to simplify your food preparation, offering efficient shredding, slicing, and grating for a variety of ingredients. Crafted with durable, food-grade materials and featuring a strong suction base for stability, this grater ensures a safe and enjoyable cooking experience. Please read this manual thoroughly before use to ensure proper operation and maintenance.

## PRODUCT FEATURES

---

- **Durable Construction:** Components made of 18/10 stainless steel blades and BPA-free food-grade materials for safety and longevity.
- **Efficient Shredding:** Chops ingredients up to 12 times faster than traditional graters, reducing prep time.
- **5 Replaceable Blades:** Includes blades for slicing, thick shredding, fine shredding, julienne, and wavy slicing to meet various cutting needs.
- **Strong Suction Base:** Ensures stability during use by securely fixing the grater to clean, smooth countertops.
- **Safe Design:** Fingers and palms do not directly contact the blades, enhancing user safety.
- **Anti-Clogging Design:** Features a sloping curve that allows grated ingredients to fall smoothly without clogging.
- **Easy to Clean and Store:** All parts are easily disassembled for thorough cleaning, and a compact design with an included blade storage case simplifies storage.

## PACKAGE CONTENTS

- 
- SUSTEAS Rotary Cheese Grater Main Unit
  - 5 Interchangeable Stainless Steel Blades (Slicing, Wavy Slicing, 2mm Julienne, 4mm Shredding, 6mm Shredding)
  - Food Pusher
  - Handle
  - Blade Storage Box

## SETUP INSTRUCTIONS

---

1. **Secure the Suction Base:** Place the main unit on a clean, smooth, and dry countertop. Push down the lever on the side of the base to activate the suction cup, securing the grater firmly in place.
2. **Install the Transparent Barrel:** Align the transparent barrel with the main unit and gently push it into place until it clicks securely.
3. **Insert the Food Pusher:** Place the food pusher into the top opening of the transparent barrel.
4. **Select and Install a Blade:** Choose the desired blade from the storage box. Insert the blade into the transparent barrel, ensuring it is properly seated.
5. **Fix the Handle:** Attach the handle to the side of the transparent barrel, twisting it clockwise until it locks into position.

# INSTALLATION STEPS

Convenient installation saves effort



Figure 1: Step-by-step assembly of the rotary cheese grater.

## OPERATING INSTRUCTIONS

Once assembled, the grater is ready for use. Ensure your ingredients are cut into pieces that fit comfortably into the feeding chute.

1. **Place Ingredients:** Insert the food item (e.g., cheese, vegetables) into the top opening of the transparent barrel.
2. **Apply Pressure:** Use the food pusher to gently press the ingredient down towards the blade.
3. **Turn the Handle:** Rotate the handle clockwise to engage the blade and begin grating or slicing. The processed food will exit through the chute into your bowl.
4. **Change Blades (if needed):** To change blades, first release the suction base and disassemble the handle and transparent barrel. Carefully remove the current blade and insert a new one, then reassemble.



## EASY INSTALLATION OF SHREDDING BLADES

It is also suitable for cheese, chocolate, peanuts, potatoes, cookies, and nuts.



POTATO



PEANUT



NUT



CHOCOLATES



CHEESE



BISCUIT

Figure 2: Easy installation of shredding blades for various foods.

# MEET DIFFERENT CUTTING NEEDS



Figure 3: Examples of different cuts achievable with the 5 interchangeable blades.

## CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your SUSTEAS Rotary Cheese Grater. All parts are designed for easy disassembly and cleaning.

1. **Disassembly:** To disassemble, lift the lever on the suction base to release it from the countertop. Twist the handle counter-clockwise to remove it. Press the release button (if applicable) or twist the transparent barrel to detach it from the main unit. Carefully remove the blade.
2. **Washing:** All disassembled parts can be washed by hand with warm, soapy water. Use a brush to remove any food residue from the blades. The product is also dishwasher safe.
3. **Drying:** Ensure all parts are thoroughly dried before reassembly or storage to prevent rust and maintain hygiene.
4. **Storage:** Store the blades in the provided storage box to keep them organized and safe. Store the main unit in a dry place.

## TROUBLESHOOTING

- **Grater not stable:** Ensure the suction base is placed on a clean, smooth, and dry surface. Press the lever firmly to activate the suction.
- **Food not grating/slicing properly:** Check if the blade is correctly installed and locked into place. Ensure the food item is not too large or too hard for the selected blade.
- **Food getting stuck:** Do not overfill the feeding chute. Apply steady, gentle pressure with the food pusher. The sloping design helps prevent clogging, but very soft or sticky foods may require slower operation.
- **Difficulty turning the handle:** Ensure the blade is clean and free of obstructions. If grating hard foods, apply consistent pressure and turn steadily.

## SPECIFICATIONS

---

Attribute	Detail
Brand	SUSTEAS
Model Number	LS-1070
Color	Red
Material	PC+PP+ABS+TPR+SUS430 (18/10 Stainless Steel Blades)
Product Dimensions	11.22"L x 7.87"W x 5.69"H
Item Weight	2.66 pounds
Dishwasher Safe	Yes

## WARRANTY AND SUPPORT

---

SUSTEAS is committed to providing high-quality products. For any concerns regarding the quality or performance of your Rotary Cheese Grater, please contact our customer support. We are dedicated to addressing your needs and ensuring your satisfaction.