

[Manuals.plus](#) /

› [webeauty](#) /

› WeBeauty 5-in-1 High-Speed Hair Dryer Brush Instruction Manual (Model F9)

webeauty F9

WeBeauty 5-in-1 High-Speed Hair Dryer Brush Instruction Manual

Model: F9 | Brand: WeBeauty

INTRODUCTION

Thank you for choosing the WeBeauty 5-in-1 High-Speed Hair Dryer Brush. This versatile styling tool is designed to provide a comprehensive hair care experience, combining the functions of a high-speed hair dryer, air curler, volumizer, and straightener. Featuring ionic technology and multiple heat and speed settings, it helps achieve salon-quality results while minimizing heat damage. Please read this manual thoroughly before use to ensure safe and effective operation.

IMPORTANT SAFETY INFORMATION

- Keep out of reach of children.
- Do not rinse or submerge the device in water.
- Keep the power plug and cord away from heated surfaces.
- Do not use the hair dryer while bathing.
- This device is rated for 100-120V and is only for use in the US and CA. It is not dual voltage.
- Equipped with an ALCI safety plug that detects current imbalance and shuts off to prevent electrocution.

PRODUCT OVERVIEW & COMPONENTS

The WeBeauty 5-in-1 Hair Dryer Brush includes a main unit and several interchangeable attachments for various styling needs.



Figure 1: Main unit with all included attachments: high-speed hair dryer nozzle, two air curler wands, oval volumizing brush, and round brush.

Main Unit Features:

- **Power/Speed Control:** Two wind speed settings (High, Medium, ON/OFF).
- **Temperature Control:** Three temperature modes (Cool, Warm-160°F, Hot-210°F).
- **Ionic Technology:** Releases negative ions for smooth, shiny, frizz-free hair.
- **Detachable Air Inlet & Filter:** For easy cleaning and maintenance.
- **360° Rotatable Power Cord:** Prevents tangling during use.

Included Attachments:

1. **High-Speed Hair Dryer Nozzle:** For ultra-fast drying.
2. **32mm Air Curler Wands (2):** For left and right-direction curls using Coanda effect.

3. **60mm Oval Volumizing Brush:** For volumizing, straightening, and smoothing.
4. **32mm Round Brush:** For natural fluffy curls, especially suitable for bangs.

SETUP AND ATTACHMENT INSTALLATION

Ensure the main unit is unplugged before attaching or detaching any accessories.

To Install an Attachment:

1. Align the "▼" mark on the attachment with the "▲" mark on the main unit.
2. Insert the attachment firmly into the main unit.
3. Rotate the clasp gold ring until the "▲" mark on the attachment lines up with the "▼" mark on the main unit to lock it in place. You should hear a click.

To Detach an Attachment:

1. Rotate the clasp gold ring until the "▲" mark on the attachment lines up with the "▲" mark on the main unit (unlock position).
2. Gently pull the attachment head upward to remove it.



Figure 2: Visual guide for installing and detaching accessories.

OPERATING INSTRUCTIONS

General Operation:

- Plug the device into a standard 100-120V AC outlet.
- Use the ON/OFF switch to power on the device and select your desired wind speed (Medium or High).
- Adjust the temperature setting (Cool, Warm, Hot) using the temperature control button.

Using the High-Speed Hair Dryer Nozzle:

- Attach the high-speed hair dryer nozzle to the main unit.
- Use to quickly dry hair, ensuring even airflow distribution.
- For best results, rough-dry hair until it is about 80% dry before styling with other attachments.

Your browser does not support the video tag.

Video 1: Demonstration of the WeBeauty 5-in-1 Multi Air Styler, including the high-speed hair dryer function. This video shows how to use the various attachments for different styling needs.

Using the 32mm Air Curler Wands:

- Select the appropriate curler wand for your desired curl direction (left or right).
- Ensure hair is 80%+ dry before curling.
- Hold the wand vertically and bring a thin section of hair (about 1 inch) towards the barrel. The Coanda effect will automatically wrap the hair around the barrel.
- Hold for a few seconds until the curl is formed.
- For longer-lasting curls, use the cool shot function for about 8 seconds before releasing the curl.
- Avoid brushing curls out too soon; allow them to cool and set.



Figure 3: Proper technique for using the air curler wand, demonstrating how hair wraps around the barrel.

Your browser does not support the video tag.

Video 2: Detailed instructions on the correct way to use the Air Curler and common mistakes to avoid, ensuring optimal curling results.

Using the 60mm Oval Volumizing Brush:

- Attach the oval volumizing brush.
- Use on damp or dry hair to add volume, straighten, or smooth.
- Brush from roots to ends, lifting at the roots for maximum volume.




Figure 4: Demonstrating the use of the 60mm oval volumizing brush for styling.

Using the 32mm Round Brush:

- Attach the round brush.
- Ideal for creating natural fluffy curls, especially for bangs or shorter hair sections.
- Wrap sections of hair around the brush and apply heat, then use the cool shot to set.

Get Luxury Salon Hair Care

Effectively smooth the static frizz, keep volumizing and shiny

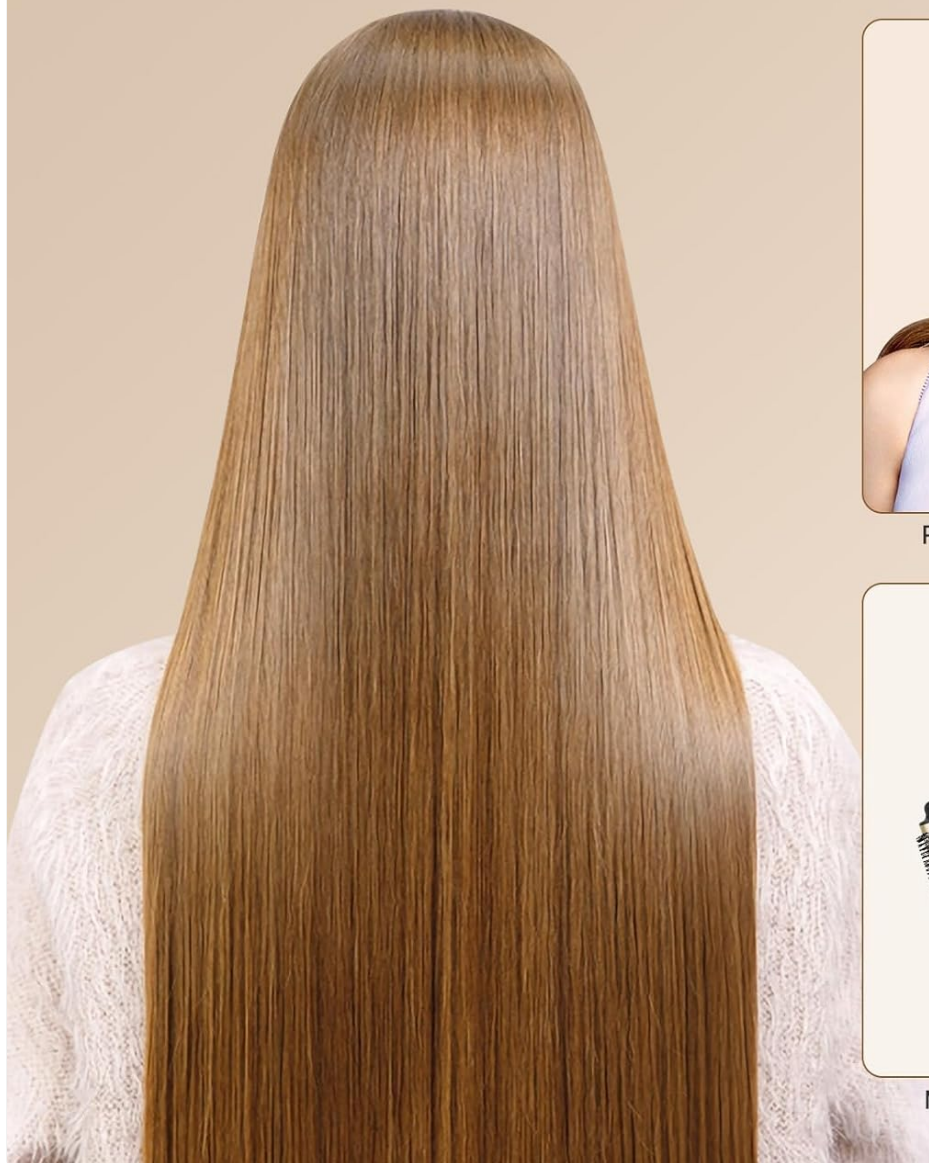

Powerful 360° airflow coverage



Most suitable for bangs create a natural fluffy curl

Figure 5: Illustrating the use of the 32mm round brush for creating soft curls.

MAINTENANCE

Cleaning the Air Inlet & Filter:

- Regularly check and clean the detachable air inlet and filter to prevent blockages and maintain optimal performance.
- Twist the bottom part of the main unit to detach the filter.
- Remove any accumulated dust or hair with a soft brush or cloth.
- Reattach the filter by aligning and twisting until locked.

General Cleaning:

- Wipe the main unit and attachments with a soft, damp cloth.
- Do not use abrasive cleaners or immerse any part of the device in water.
- Store the device and its attachments in the protective hard case when not in use.

TROUBLESHOOTING

- **Device not turning on:** Ensure the power cord is securely plugged into a functional outlet and the ALCI safety plug is reset if tripped.
- **Weak airflow or overheating:** Check if the air inlet filter is clean and free from obstructions. Clean if necessary.
- **Hair not curling effectively with air curler:** Ensure hair is 80%+ dry. Use smaller sections of hair. Verify the hair tail is directed towards the arrow on the wand. Use the highest heat and speed settings for curling, then cool shot to set.
- **Attachments not staying in place:** Ensure the attachment is correctly aligned and the gold ring is rotated to the locked position.

SPECIFICATIONS

Feature	Detail
Model Number	F9
Rated Power	1000 W
Rated Voltage	100-120 V
Motor Speed	110,000 RPM
Temperature Settings	Cool, Warm (160°F), Hot (210°F)
Wind Speed Settings	2 (Medium, High) + ON/OFF
Safety Feature	ALCI Safety Plug
Product Dimensions	16.9 x 8.85 x 5.5 inches
Item Weight	4.19 Pounds

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact WeBeauty customer service directly. Keep your purchase receipt for any warranty claims.
Visit the official WeBeauty Store for more products and information:[WeBeauty Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question