

A30C

Generic A30C Mini Portable LED Projector User Manual

Model: A30C | Brand: Generic

INTRODUCTION

This manual provides essential information for the safe and effective operation of your Generic A30C Mini Portable LED Projector. Please read this manual thoroughly before using the product and retain it for future reference. This compact, high-definition LED projector is designed to transform any space into a vibrant viewing experience, perfect for movies, gaming, and family entertainment.



Image: The Generic A30C Mini Portable LED Projector, a compact black device with a lens and control buttons on top.

SETUP GUIDE

1. Unpacking

Carefully remove all components from the packaging. Ensure the following items are present:

- Generic A30C Mini Portable LED Projector
- Power Adapter
- Remote Control (if included)
- User Manual (this document)

2. Placement

Place the projector on a stable, flat surface. For optimal viewing, position the projector perpendicular to the projection surface (wall or screen). The projection distance directly affects the screen size. Refer to the diagram below for recommended distances and corresponding screen sizes.



Image: A diagram illustrating recommended projection distances and corresponding screen sizes, ranging from 33 inches at 3.28 feet (1m) to 300 inches at 29.52 feet (9m). A recommended range of 1.5m-3m is highlighted.

Ensure adequate ventilation around the projector to prevent overheating. Do not block the ventilation openings.

3. Power Connection

Connect the power adapter to the DC input port on the projector. Plug the other end of the power adapter into a suitable electrical outlet. The power indicator light will illuminate.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the power button on the projector or the remote control to turn the device on. Press it again to turn off the projector.

2. Input Source Selection

The projector supports multiple input sources including HDMI, USB, SD card, and audio jack. Use the "Source" button on the projector or remote control to cycle through available input options and select your desired source.



Image: An illustration showing the projector connecting wirelessly via WiFi to Android and iOS devices, and wired via USB cable to other devices, highlighting its versatile connectivity.

- **HDMI:** Connect to laptops, gaming consoles, Blu-ray players, etc.
- **USB:** Play media files directly from a USB flash drive.
- **SD Card:** Play media files directly from an SD memory card.
- **Audio Out:** Connect external speakers or headphones.
- **Bluetooth Connectivity:** Connect to Bluetooth-enabled audio devices.

3. Focusing and Keystone Correction

Adjust the focus ring near the lens until the projected image is clear and sharp. If the image appears trapezoidal, use the keystone correction feature (if available on your model, typically a manual dial or digital setting) to adjust the image to a rectangular shape.

4. Display Quality

The A30C projector features an LCD imaging system and LED light source, supporting up to 1920 x 1080 pixels for crisp and clear images. Its advanced display technology provides enhanced brightness and contrast compared to standard projectors.

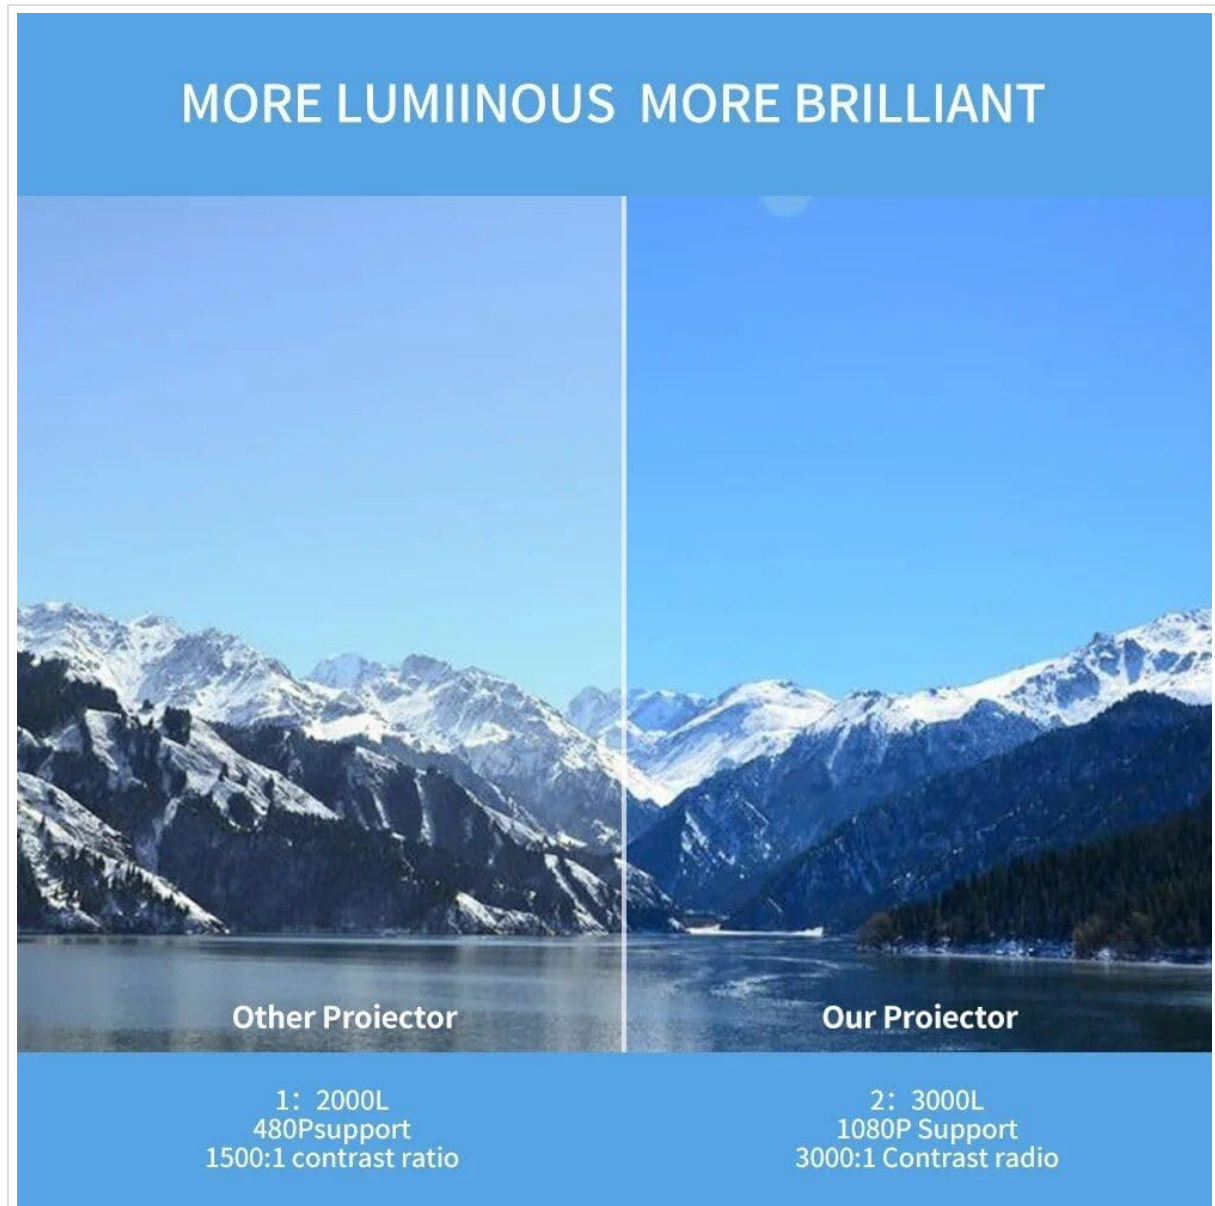


Image: A side-by-side comparison showing the superior brightness and clarity of "Our Projector" (3000L, 1080P Support, 3000:1 Contrast Ratio) versus "Other Projector" (2000L, 480P Support, 1500:1 Contrast Ratio), demonstrating the enhanced visual experience.

MAINTENANCE

1. Cleaning

- **Lens:** Use a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners or solvents.
- **Exterior:** Wipe the projector's exterior with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water.
- **Ventilation Ports:** Periodically check and gently clean the ventilation ports to ensure proper airflow and prevent dust buildup. Use a soft brush or compressed air.

2. Storage

When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to use the original packaging or a protective case to prevent dust accumulation and physical damage.



Image: A hand placing the compact projector into a pant pocket, illustrating its small size and portability for easy storage and transport.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No image projected	Power not connected; Incorrect input source; Lens cap on.	Check power connection; Select correct input source; Remove lens cap.
Image is blurry	Out of focus; Incorrect projection distance.	Adjust focus ring; Adjust projector distance.
Image is trapezoidal	Projector not perpendicular to screen.	Adjust keystone correction; Reposition projector.

Problem	Possible Cause	Solution
No sound	Volume too low; Muted; External audio device not connected properly.	Increase volume; Unmute; Check audio cable connections or Bluetooth pairing.
Overheating	Blocked ventilation; Prolonged use.	Ensure ventilation ports are clear; Allow projector to cool down.

SPECIFICATIONS






Feature	Detail
Brand	Generic
Model	A30C
Display Technology	LCD Imaging System, LED Light Source
Native Resolution	1280 x 720 pixels
Supported Resolution	Up to 1920 x 1080 pixels (1080P)
Connectivity	HDMI, USB, SD Card Slot, Audio Jack, DC Power Input, Bluetooth
Color	Black
Item Weight	14.1 ounces (approx. 400g)
Product Dimensions	6.3 x 4.72 x 2.16 inches (approx. 16 x 12 x 5.5 cm)
Recommended Use	Indoor
Country of Origin	China

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support, troubleshooting assistance, or service inquiries, please contact the Generic customer support team through the contact information provided with your purchase or on the official Generic website. Please have your product model (A30C) and ASIN (B0DM84NGD2) ready when contacting support.

© 2024 Generic. All rights reserved.

Related Documents - A30C

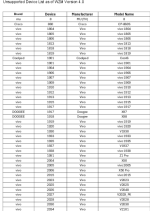	<p>Blurams A30/A30C Smart Pan-Tilt Camera User Manual and Setup Guide</p> <p>Comprehensive user manual and setup guide for the blurams A30/A30C Smart Pan-Tilt Camera, detailing packing list, appearance, installation, quick setup, features, troubleshooting, and FCC compliance.</p>
	<p>Catalogue Produits 2026 : Calendriers, Agendas et Livres de Notes</p> <p>Découvrez la gamme complète de calendriers, agendas et livres de notes 2026 de PCA, Division de Blueline. Trouvez des produits promotionnels personnalisables de haute qualité, y compris des articles certifiés FSC®.</p>
	<p>PCA 2026 Product Catalog: Calendars, Planners & Notebooks</p> <p>Explore the PCA 2026 Product Catalog from Blueline, featuring a wide range of customizable calendars, planners, notebooks, and promotional products. Enhance your brand visibility with quality items.</p>
	<p>Hangzhou Vision Insight Technology Co., Ltd. Smart Pan-Tilt Camera Model Differences</p> <p>Details on model differences for Hangzhou Vision Insight Technology Co., Ltd.'s Smart Pan-Tilt Camera series, including model names, trade names, and FCC ID. All models share the same core circuit and RF module.</p>
	<p>WZM Version 4.0 Unsupported Device List: Comprehensive Guide</p> <p>A comprehensive list of mobile devices and models that are not supported by WZM Version 4.0, including brands like Vivo, Samsung, Nokia, and more. Essential for compatibility checks.</p>