

## GTKZW Electric Stove 2 Burners

# GTKZW Electric Stove 2 Burners User Manual

Model: Electric Stove 2 Burners

Brand: GTKZW

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- **Electrical Safety:** Ensure the cooktop is connected to a properly grounded 110-120V outlet. Do not use extension cords or adapters.
- **Hot Surface Warning:** The cooktop surface will remain hot after use. Avoid touching the hot surface until it has cooled down. The 'H' indicator will illuminate to warn of residual heat.
- **Child Safety:** Always activate the child safety lock to prevent accidental operation by children. Keep children away from the cooktop during and after use.
- **Ventilation:** Ensure adequate ventilation around the cooktop, especially if built-in, to allow proper heat dissipation.
- **Proper Cookware:** Use only suitable cookware as described in this manual. Ensure pots and pans are stable on the cooking zones.
- **Overheat Protection:** The cooktop is equipped with overheat protection. If the temperature becomes too high, the unit will automatically shut off.

## 2. PRODUCT OVERVIEW

The GTKZW Electric Stove 2 Burners is a versatile and efficient cooking appliance designed for both built-in and countertop use. It features intelligent touch sensor controls and a durable black ceramic glass surface.



Front view of the GTKZW Electric Stove 2 Burners, showcasing its sleek design and touch controls, with a pot of soup on the right burner.

## Key Features:

- **Dual Burners:** Two independent cooking zones (1200W + 1200W) for simultaneous cooking.
- **110-120V Compatibility:** Designed for standard household electrical outlets, plug-and-play convenience.
- **LED Touch Screen Control:** Intuitive and easy-to-operate touch panel for precise control.
- **9 Power Levels:** Offers a wide temperature range (176-518°F) for various cooking needs.
- **8 Cooking Functions:** Includes functions for melting, simmering, steaming, boiling, frying, roasting, stir-frying, and fast heating.
- **Safety Features:** Equipped with child safety lock, timer (1-240 minutes), and overheat protection.
- **Durable Surface:** Made of black ceramic glass, which is scratch-resistant, wear-resistant, and high-temperature resistant.
- **Versatile Installation:** Can be used as a portable countertop unit or built-in.

# HOT WARNING

"H" to remind you that the temperature is too high, do not touch it.



Detailed view of the LED touch screen, highlighting the heating area, lock, timer, power level indicators, function, and ON/OFF buttons.

## 3. SETUP AND INSTALLATION

The GTKZW Electric Stove offers flexible installation options to suit your kitchen layout.

### Countertop Use:

- Place the cooktop on a stable, flat, heat-resistant surface.
- Ensure there is adequate clearance around the unit for ventilation.
- Plug the cooktop directly into a grounded 110-120V electrical outlet.

### Built-in Installation:

For built-in installation, ensure your countertop cutout meets the specified dimensions.

- **Cooktop Size:** 23.62 x 13.78 x 2 inches (600 x 350 x 50 mm).
- **Cut-out Size:** 22.44 x 12.6 inches (570 x 320 mm).
- Ensure sufficient space below the cooktop for proper ventilation and cooling. The unit features two low-

noise cooling fans for improved heat dissipation.

- Consult a qualified electrician for permanent wiring if required, or use the provided plug if suitable for your setup.



Illustration of the cooktop's dimensions and the required cutout size for built-in installation, showing 600mm length, 350mm width, and 80mm height, with a cutout of 570mm by 320mm.

## Two Installation Methods



Visual comparison demonstrating the two installation methods: built-in design for seamless integration and countertop use for

portability.

## 4. OPERATING INSTRUCTIONS

The GTKZW Electric Stove features intuitive touch controls for easy operation.

### Basic Operation:

1. **Power On/Off:** Touch the **ON/OFF** button to turn the cooktop on or off.
2. **Select Burner:** Once powered on, select the desired cooking zone by touching its corresponding control area.
3. **Adjust Power Level:** Use the **+** and **-** buttons to adjust the power level from 1 to 9. Level 9 provides maximum heat (1200W per burner).
4. **Cooking Functions:** The cooktop offers 8 cooking functions. Select the desired function using the **Function** button. These functions optimize heating for tasks like melting, simmering, boiling, frying, etc.

# 9 POWER LEVELS & 9 TEMPERATURE SETTINGS



A family preparing a meal using the electric cooktop, demonstrating its versatility with 9 power levels and 9 temperature settings for precise cooking control.

## Timer Function:

- Touch the **Timer** button to activate the timer.
- Use the **+** and **-** buttons to set the desired cooking time, from 1 to 240 minutes.
- The cooktop will automatically shut off when the set time expires.



A couple enjoying cooking, with an overlay indicating the 240-minute timer setting, allowing for precise cooking duration control.

## Child Safety Lock:

- To activate the child lock, touch and hold the **Lock** button for a few seconds until the lock indicator appears.
- This will disable all controls, preventing accidental changes or activation.
- To deactivate, touch and hold the **Lock** button again until the indicator disappears.

## Child Safety Lock



The electric cooktop with a prominent child safety lock icon, emphasizing the feature that prevents unintended operation.

## Cookware Compatibility:

This electric cooktop is suitable for most types of cookware, including:

- Ceramic pots
- Iron pots
- Stone pots
- Copper pots

- Stainless steel pots
- Glass pots
- Aluminum pots
- Casseroles
- Barbecue pans

*Note: Plastic appliances are not suitable for use on this cooktop.*



# SUITABLE FOR ALL KINDS OF COOKWARES



An array of cookware types, including iron, stainless steel, casserole, aluminum, glass, copper, barbecue, and ceramics, all suitable for use on the electric cooktop.

## Suitable for All Kinds of POTS



The electric cooktop displayed with a graphic indicating compatibility with aluminum, stainless steel, cast iron, glass, ceramic, and copper pots.

### 5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your electric cooktop.

#### Daily Cleaning:

- Always ensure the cooktop is cool before cleaning. The 'H' indicator will turn off when it's safe to touch.
- Wipe the black ceramic glass surface with a soft, damp cloth and mild detergent.
- For stubborn stains, use a non-abrasive ceramic cooktop cleaner.
- Dry the surface thoroughly with a clean cloth to prevent water spots.

# EASY TO CLEAN

High quality glass surface, just wipe it with a cleaning cloth.



A hand wiping the smooth black ceramic glass surface of the cooktop with a cleaning cloth, demonstrating its ease of cleaning.


## Easy to Clean



The electric cooktop being cleaned, with an inset showing a knife attempting to scratch the surface, emphasizing its scratch-proof panel and smooth black crystal glass.

### General Care:

- Avoid dropping heavy objects on the glass surface, as this may cause damage.
- Do not use abrasive cleaners, scouring pads, or sharp objects that could scratch the surface.
- Ensure the cooling fans at the bottom of the unit are not obstructed to maintain proper heat dissipation.

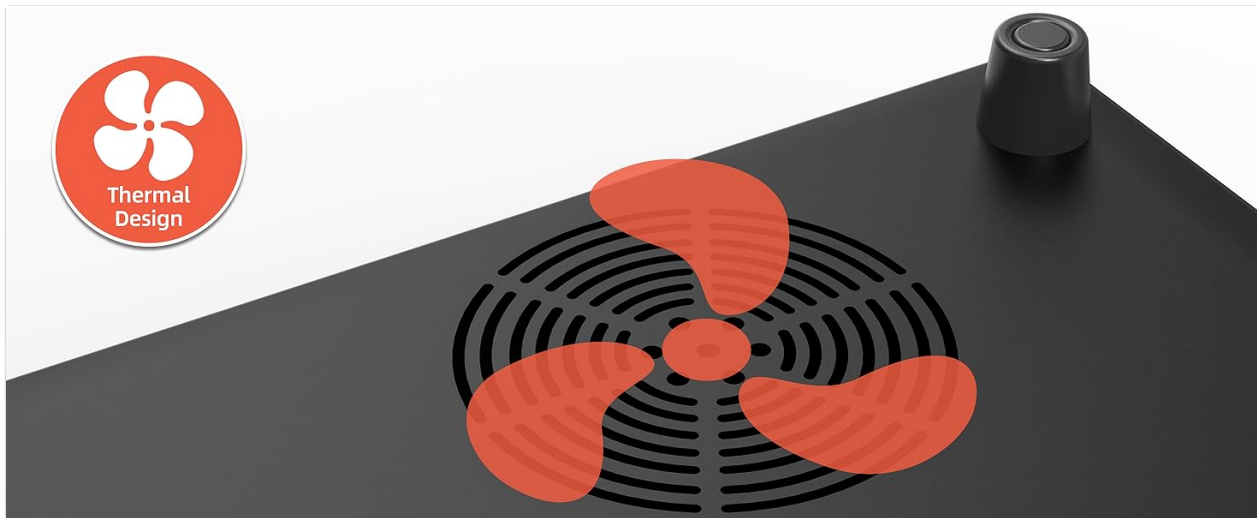

A close-up diagram illustrating the thermal design of the cooktop, specifically highlighting the cooling fan for efficient heat dissipation.

## 6. TROUBLESHOOTING

If you encounter issues with your GTKZW Electric Stove, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Child lock activated.	Check if the plug is securely in the outlet and the circuit breaker is not tripped. Deactivate the child lock by pressing and holding the lock button.
Cooktop shuts off during use.	Overheat protection activated; Timer expired.	Allow the unit to cool down. Ensure proper ventilation. Check if the timer has reached zero.
Controls are unresponsive.	Child lock activated; Wet surface; Foreign object on controls.	Deactivate child lock. Ensure the control panel is dry and clean. Remove any objects from the control area.
Cooktop is not heating efficiently.	Incorrect power level; Unsuitable cookware.	Increase the power level. Ensure you are using compatible cookware with a flat bottom that covers the heating zone.
'H' indicator remains on.	Residual heat.	This is normal. The 'H' indicates the surface is still hot. Wait for it to cool down before cleaning or touching.

## 7. SPECIFICATIONS

Specification	Detail
Brand Name	GTKZW
Model Info	Electric Stove 2 Burners
Item Weight	15.62 pounds
Product Dimensions	23 x 3 x 14 inches (600 x 350 x 50 mm)
Cut-out Size	22.44 x 12.6 inches (570 x 320 mm)
Installation Type	Drop-In, Freestanding
Special Features	Electric Stovetop Compatible
Burner Type	Radiant
Heating Elements	2
Color	Black
Control Console	Touch
Voltage	110 Volts
Wattage	2400 watts (1200W per burner)
Fuel Type	Electric
Material Type	Ceramic Glass
Included Components	Electric Stove 2 Burners

---

## 8. WARRANTY INFORMATION

Specific warranty details are not provided in the product information. Please refer to the product packaging or contact GTKZW customer support for warranty terms and conditions.

---

## 9. CUSTOMER SUPPORT

For any questions, technical assistance, or support regarding your GTKZW Electric Stove 2 Burners, please contact GTKZW customer service through the following channels:

- Visit the official GTKZW store on Amazon: [GTKZW Store](#)
- Refer to the contact information provided on your product packaging or purchase receipt.

Thank you for choosing GTKZW. We hope you enjoy your new electric cooktop!

