

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Portronics](#) /

> [Portronics Luxcell C 10K Power Bank Instruction Manual](#)

Portronics POR-2263

Portronics Luxcell C 10K Power Bank Instruction Manual

Model: POR-2263

INTRODUCTION

Thank you for choosing the Portronics Luxcell C 10K Power Bank. This device is designed to provide portable and fast charging for your electronic devices. With a 10000mAh capacity and 22.5W fast charging capabilities, it ensures your devices stay powered on the go. Please read this manual carefully to ensure proper use and maintenance of your power bank.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1N Portronics Luxcell C 10K Power Bank
- 1N Documentation (User Manual)
- 1N Charging Cable (Type-C to Type-C or USB-A to Type-C, depending on model variant)

PRODUCT OVERVIEW

The Portronics Luxcell C 10K Power Bank features a compact design with multiple charging ports and an LED indicator for battery status.

10000mAh

POWER BANK

Convenience & Speed Combined



Image: Top and bottom view of the Portronics Luxcell C 10K Power Bank, highlighting its sleek design and 10000mAh capacity.

Power at a Glance

Track Your Power Bank And Device's Charge Effortlessly



LED Battery Indicator



Wake Button

Image: Close-up of the power bank showing the LED battery indicator lights and the wake button.

- **10000mAh Capacity:** Provides extended power for multiple device charges.
- **22.5W Max Output:** Supports fast charging for compatible smartphones, tablets, and other devices.
- **Mach USB-A Output:** Universal USB-A port for charging various devices.
- **Type C PD Output:** Delivers fast charging speeds using Power Delivery (PD) technology.
- **Type C Input:** For recharging the power bank itself, compatible with modern tech devices.
- **LED Indicator:** Displays the remaining power level of the power bank.
- **Wake Up Button:** Activates the power bank to begin charging or check battery status.
- **Durable & Sturdy Build:** Features a rugged body and matte finish for protection against scratches and fingerprints.
- **Compact Design:** Lightweight (275g) and ultra-slim for easy portability.

SETUP AND INITIAL CHARGING

Before first use, fully charge your Portronics Luxcell C 10K Power Bank.

1. **Connect to Power Source:** Use the provided Type C charging cable to connect the power bank's Type C input port to a compatible USB wall adapter (not included). For optimal charging speed, use a fast-charging adapter.

2. **Monitor Charging Status:** The LED indicator lights will illuminate to show the charging progress. When all LED lights are solid, the power bank is fully charged.

3. **Disconnect:** Once fully charged, disconnect the power bank from the power source.

Note: It is recommended to fully charge the power bank every 3 months if not in regular use to maintain battery health.

OPERATING INSTRUCTIONS

Charging Your Devices

The Luxcell C 10K Power Bank can charge two devices simultaneously using its USB-A and Type C PD output ports.

1. **Connect Device:** Use your device's charging cable to connect it to either the Mach USB-A output port or the Type C PD output port on the power bank.
2. **Initiate Charging:** The power bank should automatically begin charging your device. If not, press the "Wake Up Button" once to activate it.
3. **Monitor Device Charge:** Your device's screen will indicate charging status. The power bank's LED lights will show its remaining battery level.
4. **Disconnect:** Once your device is charged, disconnect it from the power bank.

3X FASTER

High Capacity Power Bank



Image: The power bank connected to a smartphone, demonstrating 22.5W fast charging capability.

22.5WATT

PD+Mach Charging

Charge **2 devices** at once



PD Type C Port

20W

(Input/Output)



Mach USB A Port

22.5W

(Output)

Image: Close-up of the power bank's ports, indicating the 20W PD Type C port (input/output) and the 22.5W Mach USB A port (output).

One Power Bank for All Your Gadgets

Comes with a Charging Cable



Image: Illustration showing the power bank's compatibility with a wide range of gadgets including Android phones, iPhones, tablets, iPads, earphones, and smartwatches.

Checking Battery Level

Press the "Wake Up Button" once to view the current battery level on the LED indicator. Each illuminated LED light represents a portion of the remaining charge.

Your browser does not support the video tag.

Video: A short demonstration of the Portronics Luxcell C 10K Power Bank's features, including its LED battery indicator, charging capabilities, and compact design.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the power bank. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Health:** To prolong battery life, fully charge the power bank at least once every three months, even if not in use.
- **Avoid Drops:** While durable, avoid dropping the power bank to prevent internal damage.

SAFETY INFORMATION

Observe the following safety guidelines to prevent damage to the device or injury:

- Do not expose the power bank to water, moisture, or high humidity.
- Do not disassemble, modify, or attempt to repair the device.
- Keep away from heat sources, open flames, and direct sunlight.
- Do not use if the power bank is damaged, swollen, or leaking.
- Keep out of reach of children.
- Dispose of the power bank responsibly according to local regulations.

Advanced Multilayer Protection

BIS CERTIFIED



Overcharge Protection



Short Circuit Protection



Fireproof Casing



Advanced Temperature Control



Image: Diagram illustrating the power bank's advanced multilayer protection, including overcharge protection, short circuit protection, fireproof casing, and advanced temperature control. The device is BIS certified.

TROUBLESHOOTING

- **Power bank not charging:**
 - Ensure the charging cable is securely connected to both the power bank's Type C input and the wall adapter.
 - Verify that the wall adapter is functioning and connected to a live power outlet.
 - Try a different charging cable or wall adapter.

- **Device not charging from power bank:**

- Press the "Wake Up Button" on the power bank to ensure it is active.
- Check that the charging cable is securely connected to both the power bank's output port and your device.
- Ensure your device's charging port is clean and free of debris.
- Try a different charging cable or a different output port on the power bank.
- Verify that the power bank has sufficient charge (check LED indicator).

- **Slow charging:**

- Ensure you are using a compatible fast-charging cable and adapter for both the power bank and your device.
- Some devices may limit charging speed if they are heavily in use or overheating.

SPECIFICATIONS

Feature	Detail
Model Number	POR-2263
Battery Capacity	10000 mAh
Max Output	22.5W
Input Port	Type C (PD, 20W)
Output Ports	Mach USB-A (22.5W), Type C (PD, 20W)
LED Indicator	Yes, for power status
Weight	275 g
Color	Black
Special Features	10000mAh Slim Powerbank, 22.5W Max Output, LED Indicator Lights, Type C PD Output, USB A Mach Output

WARRANTY AND SUPPORT

Portronics products come with a standard warranty. For warranty details, product support, or technical assistance, please contact Portronics customer service.

- **Email:** help@portronics.com
- **Phone:** +91 9555-245-245
- **Manufacturer:** Portronics Digital Pvt. Ltd.

You may also visit the official Portronics website for more information and support resources.