

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Lemorele](#) /

> [Lemorele HDMI Switch G96 User Manual](#)

## Lemorele G96

# Lemorele HDMI Switch G96 User Manual

Model: G96

## INTRODUCTION

---

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Lemorele HDMI Switch Model G96. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your user experience. Keep this manual for future reference.

## PRODUCT OVERVIEW

---

The Lemorele HDMI Switch G96 allows you to connect multiple HDMI source devices to a single HDMI display. It supports high-resolution video and audio transmission, simplifying your entertainment setup.



*Image: The Lemorele HDMI Switch G96 unit and its accompanying remote control. The switch features multiple HDMI input ports and one HDMI output port, along with indicator lights for active inputs.*

### Key Features:

- Connects up to three HDMI source devices to one HDMI display.
- Supports video output up to 4K resolution (3840x2160 pixels) at 60Hz refresh rate.
- Compatible with HDMI 2.0 specifications, ensuring stable, high-resolution video and audio.
- Features smart switching functionality to automatically detect and switch to the latest active input source.
- Manual switching via button on the device or included IR remote control.
- Supports HDCP 2.2, HDR, and 3D content.

### PACKAGE CONTENTS

---

Please check the package contents upon opening. If any items are missing or damaged, contact customer support.

- Lemorele HDMI Switch G96 Unit
- IR Remote Control
- USB Power Cable (for optional power)
- User Manual (this document)

### SETUP

Follow these steps to set up your HDMI switch:

1. **Connect HDMI Output:** Connect one end of an HDMI cable (not included) to the "HDMI OUT" port on the switch and the other end to an HDMI input port on your display (TV, monitor, projector).
2. **Connect HDMI Inputs:** Connect your HDMI source devices (e.g., PS5, Xbox, Blu-Ray player, PC) to the "HDMI IN 1", "HDMI IN 2", or "HDMI IN 3" ports on the switch using HDMI cables (not included).
3. **Connect Power (Optional):** For stable performance, especially with high-resolution signals or long HDMI cables, connect the provided USB power cable to the switch's power input port and to a 5V USB power adapter (not included) or a USB port on your display device.
4. **Power On Devices:** Power on your HDMI display and all connected HDMI source devices.



*Image: An illustration showing the HDMI switch connected to a television and two gaming consoles (PS5 and Xbox Series X), demonstrating a typical setup for multiple input devices.*

## OPERATING INSTRUCTIONS

---

The Lemorele HDMI Switch G96 offers two methods for switching between input sources:

### 1. Using the Remote Control

- Point the IR remote control towards the front of the HDMI switch.
- Press the corresponding number button (1, 2, or 3) to select the desired HDMI input source.
- Alternatively, press the "NEXT" button to cycle through the input sources sequentially.

### 2. Using the Manual Button

- Press the "Select" button located on the top of the HDMI switch unit to cycle through the HDMI input sources (1, 2, 3).
- The LED indicator lights on the switch will show which input is currently active.

### Smart Switching Function

The switch features an automatic smart switching function. When a new HDMI source device is powered on or connected, the switch will automatically detect it and switch to that input. If the currently active source is turned off, the switch will automatically switch to the next active input.

# Two Ways To Switch

Select your favorite media between 3 HDMI input devices



*Image: Demonstrates the two ways to switch HDMI inputs: using the included IR remote control and pressing the manual button on the top of the HDMI switch unit.*

## MAINTENANCE

To ensure the longevity and optimal performance of your Lemorele HDMI Switch G96, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

- **Handling:** Avoid dropping or subjecting the device to strong impacts.
- **Ventilation:** Ensure the device has adequate ventilation and is not covered, to prevent overheating.
- **Cable Management:** Ensure HDMI cables are not excessively bent or strained, which can damage the cables or ports.

## TROUBLESHOOTING

If you encounter issues with your HDMI switch, refer to the following common problems and solutions:

| Problem                              | Possible Cause   | Solution  |
|--------------------------------------|--|---|
| No video/audio output                | <ul style="list-style-type: none"> <li>o Loose cable connections</li> <li>o Incorrect input selected</li> <li>o Power issue</li> <li>o Incompatible resolution/refresh rate</li> </ul> | <ul style="list-style-type: none"> <li>o Ensure all HDMI cables are securely connected.</li> <li>o Verify the correct input source is selected on the switch and your display.</li> <li>o Connect the USB power cable to the switch and a 5V power adapter.</li> <li>o Try a lower resolution or refresh rate on your source device.</li> <li>o Restart all connected devices.</li> </ul> |
| Flickering screen or unstable signal | <ul style="list-style-type: none"> <li>o Long or low-quality HDMI cables</li> <li>o Insufficient power</li> <li>o Interference</li> </ul>  | <ul style="list-style-type: none"> <li>o Use high-quality, shorter HDMI cables (certified HDMI 2.0).</li> <li>o Ensure the switch is powered via the USB cable.</li> <li>o Move the switch away from other electronic devices that may cause interference.</li> </ul>   |
| Remote control not working           | <ul style="list-style-type: none"> <li>o Battery depleted</li> <li>o Obstruction to IR sensor</li> </ul>   | <ul style="list-style-type: none"> <li>o Replace the battery in the remote control.</li> <li>o Ensure there is a clear line of sight between the remote and the switch's IR sensor.</li> </ul>  |

If the problem persists, please contact Lemorele customer support.

## SPECIFICATIONS

| Feature                | Detail   |
|------------------------|--|
| Brand                  | Lemorele   |
| Model Number           | G96  |
| Connector Type         | HDMI   |
| Compatible Devices     | PS3, PS4, PS5, Nintendo Switch, Blu-Ray DVD Player, etc. |
| Color                  | Black  |
| Max Resolution Support | 4K (3840x2160) @ 60Hz                                    |
| HDMI Standard          | HDMI 2.0   |
| HDCP Support           | HDCP 2.2   |
| Additional Features    | HDR, 3D, Smart Switching, Remote Control                 |

## WARRANTY AND SUPPORT

---

Lemorele products are designed for reliability and performance. For warranty information and technical support, please refer to the official Lemorele website or contact their customer service directly.

**Online Support:** Visit the [Lemorele Brand Store on Amazon](#) for product information and support resources. Please retain your proof of purchase for warranty claims.