

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Monster](#) /

> [Monster Open AC601 Bluetooth Earbuds User Manual](#)

Monster AC601 (E62)

Monster Open AC601 Bluetooth Earbuds User Manual

Model: AC601 (E62)

INTRODUCTION

Thank you for choosing the Monster Open AC601 Bluetooth Earbuds. These open-ear headphones are designed to provide a high-fidelity audio experience with advanced features such as Environmental Noise Cancellation (ENC) for clear calls, Bluetooth 5.4 for stable connectivity, and an IPX5 waterproof rating for durability. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

WHAT'S IN THE BOX

- Monster Open AC601 Bluetooth Earbuds
- Charging Case
- USB-C Charging Cable (not explicitly listed but standard for USB-C charging products)
- User Manual

PRODUCT OVERVIEW

Earbud Components

The Monster Open AC601 earbuds feature a 13mm PVK composite sound film and an acoustic cavity structure for enhanced sound quality.



Monster Open AC601

Pure Monster Sound. Enjoy the charm of music.



Image: Exploded view of an earbud highlighting the 13mm speaker and acoustic cavity.

Environmental Noise Cancellation (ENC)

The earbuds are equipped with ENC technology to reduce background noise during calls, ensuring clear communication.



Image: Illustration of ENC Call Noise Reduction in action.

Bluetooth 5.4 Technology

Experience enhanced connectivity with Bluetooth 5.4, offering a stable connection and improved transmission speed for synchronized audio-visual playback.



Image: Bluetooth 5.4 technology overview.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the USB-C charging cable to the charging port on the case and a power source. The indicator lights on the case will show the charging status.

- **Earbuds Playtime:** Up to 8 hours on a single charge.
- **Total Playtime with Charging Case:** Up to 32 hours.
- **Fast Charging:** Approximately 1 hour for a full charge of the case.

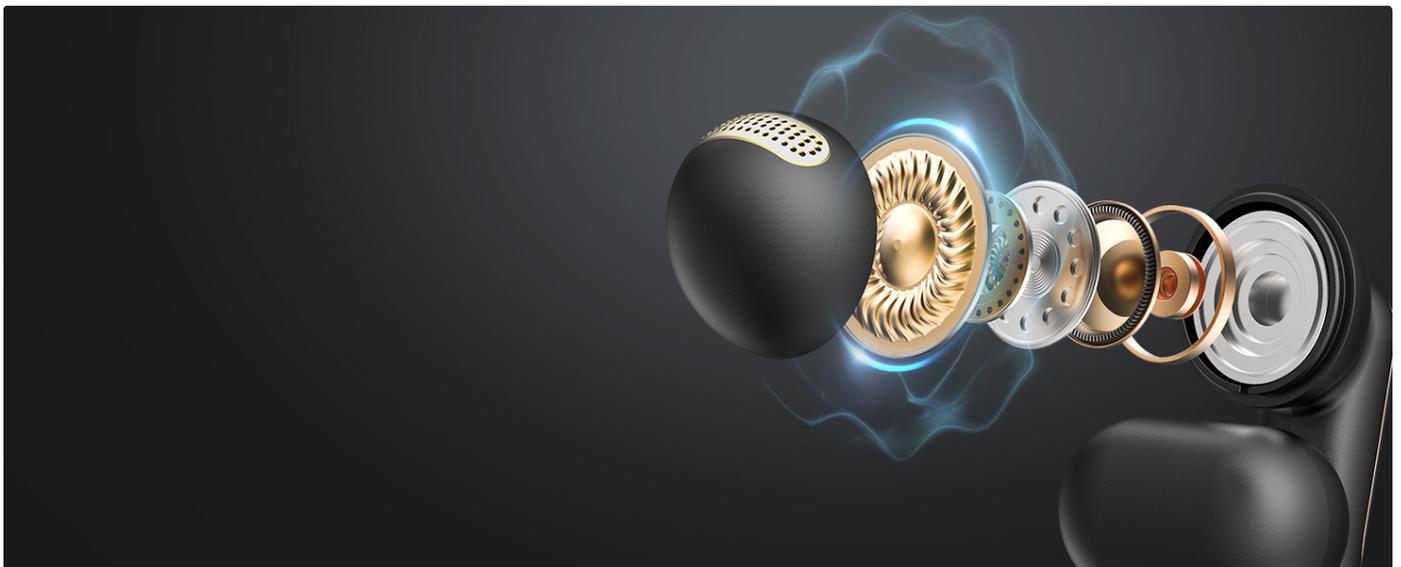


Image: Charging and battery life information.

2. Pairing with Your Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices and select "Monster Open AC601" from the list.
5. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

OPERATING INSTRUCTIONS

Wearing the Earbuds

The Monster Open AC601 earbuds feature a comfortable clip-on design. Follow these steps for optimal fit:

1. Place the small part of the earbud into your ear canal.
2. Clip the larger part of the earbud onto your outer ear.
3. Adjust the earbud to a comfortable and secure position.

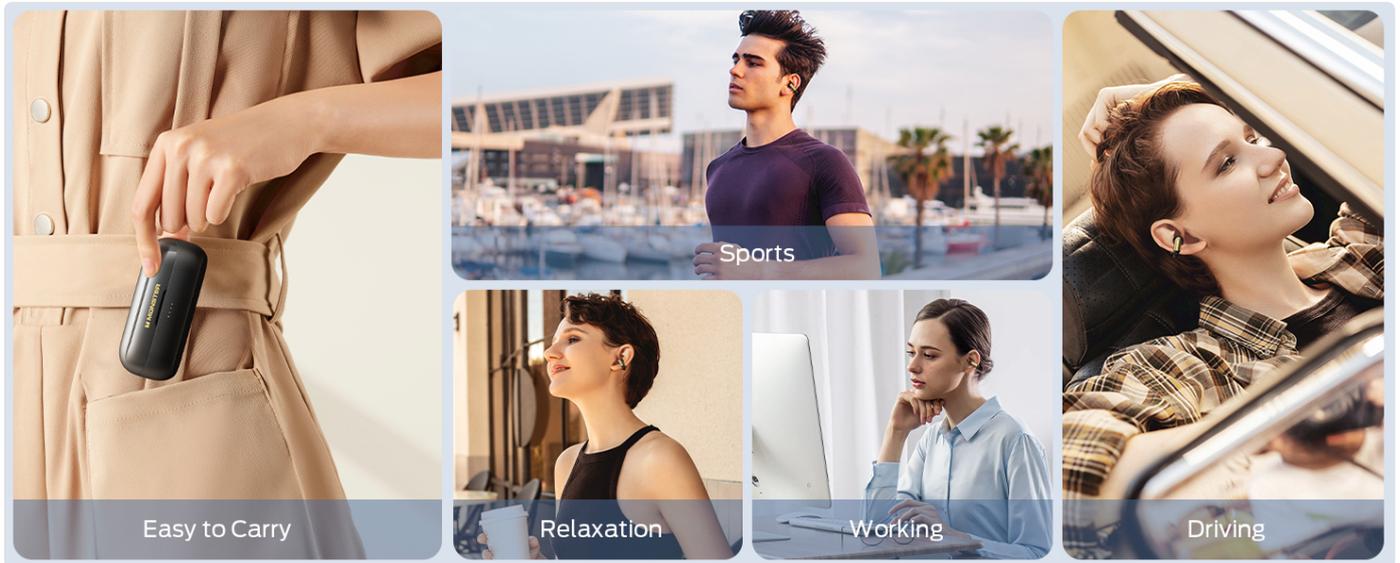


Image: How to wear the earbuds correctly.

The ergonomic design ensures a secure fit, even during intense activities, and is designed to prevent ear pain or discomfort often associated with other earbud types.



Image: Ear clip design comfort comparison.

Touch Controls

The earbuds feature intelligent touch controls for easy management of calls, music, and voice assistant functions.

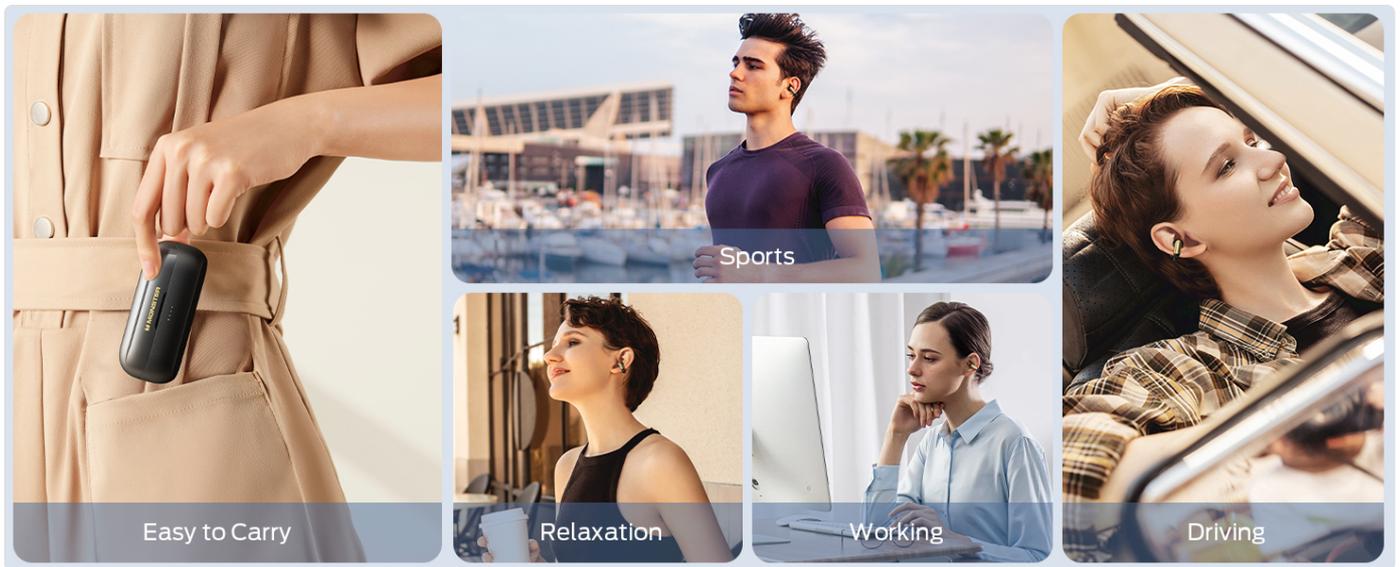


Image: Detailed touch control functions.

Action	Control (L/R Earbud)
Answer/End Call	Double tap (x2)
Play/Pause	Double tap (x2)
Decline Phone Call	Press and hold for 2 seconds (2S)
Previous Song	Triple tap (x3) on Left earbud
Next Song	Triple tap (x3) on Right earbud
Increase Volume	Single tap (x1) on Right earbud
Reduce Volume	Single tap (x1) on Left earbud
Voice Assistant	Press and hold for 2 seconds (2S)

MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.

Water Resistance

The earbuds are IPX5 waterproof, meaning they are protected against low-pressure water jets from any direction. This makes them suitable for workouts and light rain. Do not submerge the earbuds in water or expose them to high-pressure water.



Image: IPX5 Waterproof feature.

TROUBLESHOOTING

- **Earbuds not pairing:** Ensure both earbuds are in the charging case, then open the lid to activate pairing mode. Check your device's Bluetooth settings to ensure it's discoverable and try reconnecting.
- **No sound or low volume:** Check the volume levels on both your device and the earbuds. Ensure the earbuds are properly connected to your device.
- **Charging issues:** Verify the USB-C cable is securely connected to both the charging case and the power source. Ensure the charging contacts on the earbuds and inside the case are clean and free of debris.
- **Call quality issues:** Ensure the earbuds are properly positioned. Environmental Noise Cancellation (ENC) works best in moderately noisy environments. Note: Some less common phone models may experience compatibility issues affecting call quality.
- **Earbuds falling out or discomfort:** Re-adjust the earbuds as shown in the "How to Wear" section to ensure a secure and comfortable fit.

SPECIFICATIONS

Feature	Detail
Model Name	E62
Connectivity Technology	Wireless (Bluetooth 5.4)
Audio Driver Type	Dynamic Driver (13mm)
Battery Life (Earbuds)	Up to 8 hours
Total Battery Life (with Case)	Up to 32 hours
Charging Port	USB-C
Water Resistance Rating	IPX5
Noise Control Features	Environmental Noise Cancellation (ENC)
Control Method	Touch

Feature	Detail
Ear Placement	Open Ear
Material	Plastic
Item Weight	0.14 Kilograms (approx. 5 ounces)
Compatible Devices	Smartphones, Laptops, Desktops, Tablets, Smart Speakers, Televisions

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Monster website. Keep your purchase receipt for warranty claims.