

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [TopMade](#) /

› TopMade MF69 MagSafe Wallet with Apple Find My Tracker - User Manual

## TopMade MF69

# TopMade MF69 MagSafe Wallet with Apple Find My Tracker - User Manual

Model: MF69

## 1. INTRODUCTION

Thank you for choosing the TopMade MF69 MagSafe Wallet. This multi-functional accessory is designed to enhance your iPhone experience with secure card storage, a versatile stand, and integrated Apple Find My functionality. This manual provides essential information for setup, operation, and maintenance to ensure optimal performance.

## 2. SETUP

### 2.1 Initial Activation and Charging

The wallet features a long-lasting battery that supports wireless charging. A single charge can provide up to 4 months of use. To activate the Find My function, ensure the wallet is charged.

- Place the wallet on a compatible wireless charger. The charging indicator light (located near the ID window) will illuminate.
- Once fully charged, the indicator light will change.



Figure 1: Wireless charging of the TopMade MagSafe Wallet. The image shows the wallet placed on a circular wireless charging pad, with a red light indicating charging and a green light for charge complete. A note indicates that the charger is not included.

## 2.2 Connecting to Apple Find My App

The TopMade MF69 wallet is Apple-certified for Find My functionality. Follow these steps to connect it to your iPhone:

1. Ensure your iPhone has Two-Factor Authentication enabled.
2. Press the power button on the wallet once to turn it on. You may hear an audible chime.
3. On your iPhone, open the 'Find My' app and ensure Bluetooth is enabled.
4. In the 'Find My' app, navigate to the 'Items' tab, then select 'Add New Item' and 'Other Supported Item'.
5. Your iPhone will search for the wallet. Once 'TopMade Find Wallet' appears, tap 'Connect' and follow the on-screen prompts to name your item and select an emoji.



Figure 2: Visual guide for connecting the wallet to the Find My app. The image displays four phone screens illustrating the connection process: enabling two-factor authentication, pressing the wallet's power button, opening the Find My app, and adding the wallet as a new item.

## 3. OPERATING INSTRUCTIONS

### 3.1 Attaching to iPhone

The wallet features strong built-in magnets (up to 4200 Gs) for secure attachment to your iPhone 12/13/14/15/16/17 series or MagSafe-compatible cases. Simply align the wallet with the back of your iPhone until it snaps into place.



Figure 3: Demonstration of the wallet's strong magnetic attachment to an iPhone. The image shows magnetic fields connecting the wallet to the phone, emphasizing its secure hold.

### 3.2 Card Storage

The wallet is designed to hold up to 6 cards and some cash. It includes multiple card slots and a clear ID window for quick access and display.

- Use the thumb slot to easily push out cards from the main compartment.
- The clear window allows for quick display of your ID without removal.



Figure 4: A hand demonstrating how to easily slide cards out of the wallet using the thumb slot.



Figure 5: The wallet open, displaying a clear window for an ID card, making it visible without removal.

### 3.3 Multi-view Stand Function

The wallet features a strong hinge that allows it to function as a phone stand, supporting both portrait and landscape orientations at various angles (0° to 180°).

- Fold the wallet to create a stable stand for hands-free viewing.
- Adjust the angle to your preference for watching videos, making video calls, or browsing.

## Multi-function Phone Stand Free Your Hands



Figure 6: An iPhone propped up by the wallet acting as an adjustable stand, showing a person watching content hands-free.



Figure 7: An iPhone positioned horizontally using the wallet as a stand, ideal for watching videos.



Figure 8: An iPhone positioned vertically using the wallet as a stand, suitable for video calls or browsing.

### 3.4 Using Apple Find My Features

Leverage the Apple Find My network to locate your wallet if it's misplaced or lost.

- **Play Sound:** Within Bluetooth range (up to 164 feet), tap 'Play Sound' in the Find My app or ask Siri to trigger an audible alert from your wallet.
- **Left Behind Notifications:** Set up 'Left Behind' notifications in the Find My app to receive an alert on your

iPhone if you leave your wallet behind.

- **Lost Mode:** If your wallet is out of Bluetooth range, activate 'Lost Mode' in the Find My app. This utilizes the global Find My network to help locate your wallet and can display a message and contact information to anyone who finds it.
- **Directions:** Use the 'Directions' feature in the Find My app to navigate to the last known location of your wallet.



Figure 9: An iPhone screen displaying the 'Play Sound' option within the Find My app, with an illustration of sound waves emanating from the wallet.



Figure 10: An iPhone displaying a 'Left-Behind' notification, indicating the wallet is no longer detected nearby.

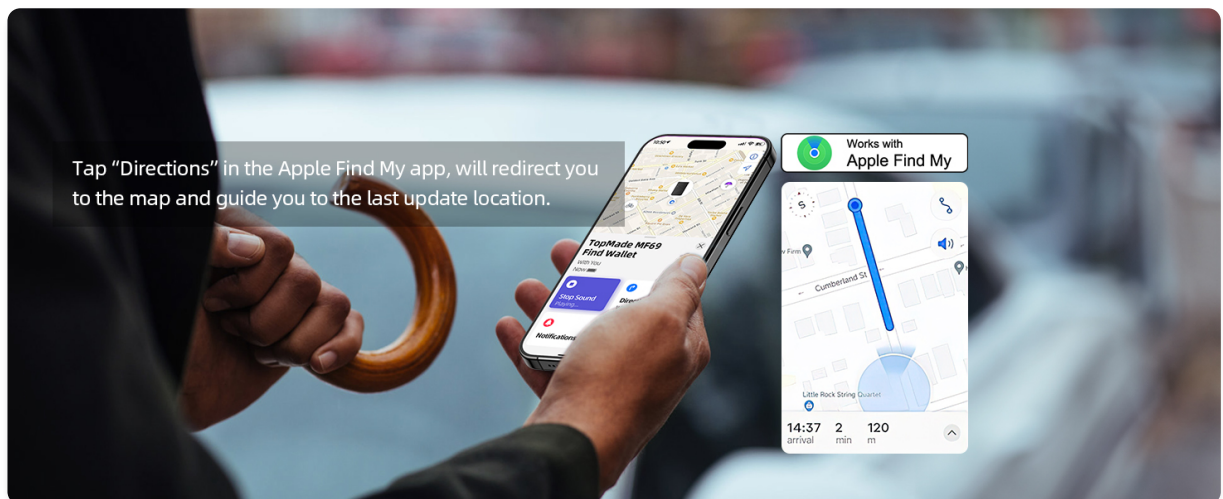


Figure 11: The Find My app showing a map with directions to the last updated location of the wallet.

## 4. MAINTENANCE

---

### 4.1 Charging the Wallet

The wallet is equipped with a rechargeable Lithium Ion battery. It supports wireless charging only and can last up to 4 months on a single charge. To charge, simply place it on any compatible wireless charger or magnetic wireless power bank.

*Note: The wireless charger is not included. The wallet's battery powers only the Find My functions, not your phone.*

### 4.2 Cleaning and Care

To maintain the appearance and functionality of your wallet:

- Wipe with a soft, damp cloth as needed.
- Avoid harsh chemicals or abrasive materials.
- Keep away from extreme temperatures and direct sunlight.

## 5. TROUBLESHOOTING

---

### 5.1 Find My Function Not Working

- **Check Battery:** Ensure the wallet is sufficiently charged. A low battery can affect Find My functionality.
- **Re-pair Device:** If the connection is lost, try removing the wallet from the Find My app and re-pairing it following the steps in Section 2.2.
- **Bluetooth:** Verify that Bluetooth is enabled on your iPhone.
- **App Permissions:** Ensure the Find My app has necessary permissions enabled on your iPhone.

### 5.2 Magnetic Attachment Issues

- **Case Compatibility:** Ensure your iPhone case is MagSafe-compatible. Non-magnetic cases may prevent a secure attachment.
- **Obstructions:** Check for any debris or foreign objects between the wallet and your iPhone/case that might interfere with the magnetic connection.

## 6. SPECIFICATIONS

---

Feature	Detail
Product Dimensions	4.09 x 2.66 x 0.24 inches
Item Weight	3.84 ounces
Model Number	MF69
Battery	1 Lithium Ion battery (included)
Special Features	Long-Lasting Battery, Multi-view Stand, Pocket Friendly, Slim, Lightweight, RFID Blocking, Works with Apple Find My App
Compatibility	iPhone 17/16/15/14/13/12 series and MagSafe Case (not compatible with iPhone 13/12 mini)
Color	Black Carbon Fiber

## 7. WARRANTY AND SUPPORT

TopMade is committed to providing high-quality products and customer satisfaction.

- **Customer Service:** 24 hours friendly customer service is available for any inquiries or assistance.
- **Technical Support:** Enjoy 12 months of full technical support for your TopMade MF69 MagSafe Wallet.



Figure 12: Contents of the product package, including the Magnetic Wallet Stand Tracker and the User Manual.