

FRESKO AutoMax V8-100

FRESKO AutoMax V8 Fully Automatic Vacuum Sealer Instruction Manual

Model: AutoMax V8-100

1. INTRODUCTION

Thank you for choosing the FRESKO AutoMax V8 Fully Automatic Vacuum Sealer. This manual provides essential information for the safe and efficient operation of your new appliance. Please read it thoroughly before first use and keep it for future reference. This vacuum sealer is designed to extend the freshness of your food by removing air from specially designed bags and containers, preventing spoilage and freezer burn.

Included in the Starter Kit:

- Food Vacuum Seal Machine x1
- Foam Gasket x1
- Rolls Bags x2 (8" x 20' & 11" x 20')
- Precut Bags: 6" x 10" (40pcs), 8" x 12" (50pcs), 11" x 16" (10pcs)
- Air Suction Hose x1
- External Interface x1
- User Manual x1

2. PRODUCT OVERVIEW

The FRESKO AutoMax V8 Vacuum Sealer is a powerful and user-friendly device designed for optimal food preservation. It features a 95Kpa powerful suction, auto dry-wet detection, a built-in bag cutter, and an auto-locking system for effortless operation.

2.1 Control Panel and Modes

The control panel offers various modes to suit different food types and sealing needs:

- **Mode:** Toggles between Dry and Moist food settings.
- **Vac & Seal:** Automatically vacuums air and seals the bag.
- **Seal Only (Auto):** Seals the bag without vacuuming.
- **Vacuum Only (Manual):** Manually controls the vacuum process, ideal for delicate foods.

- **Canister:** For use with the external vacuum hose to seal jars, containers, or wine plugs.



Image: FRESKO AutoMax V8 control panel with buttons for Dry, Moist, Mode, Vac&Seal, Seal Only, Vacuum Only, and Canister functions.

2.2 Smart Detection and Powerful Suction

The AutoMax V8 features smart detection for fully automatic vacuum and seal operations, making it convenient and time-saving. With 95Kpa powerful suction, it can seal up to 50 bags continuously within 20 minutes, thanks to its three pumps, high-power motor, and exclusive sealing technology.



Image: FRESKO AutoMax V8 illustrating smart detection for Moist and Dry food types.

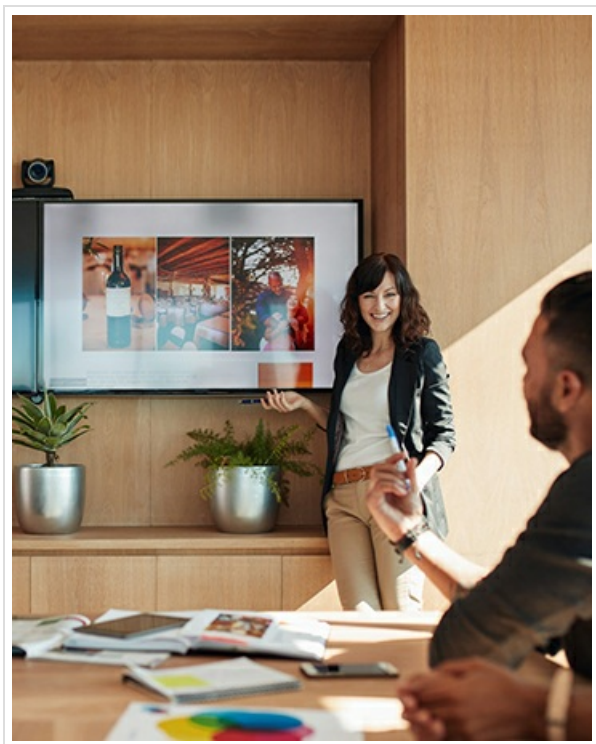 


Image: FRESKO AutoMax V8 showcasing its 95Kpa powerful suction, three pumps, and high-power motor for efficient continuous working.

3. SETUP

Before using your FRESKO AutoMax V8 Vacuum Sealer, ensure all packaging materials are removed and the device is placed on a flat, stable surface. Plug the power cord into a suitable electrical outlet.

3.1 Loading Roll Bags and Using the Built-in Cutter

Your vacuum sealer comes with a built-in roll storage and cutter for convenience. To prepare a custom-sized bag:

1. Open the lid of the vacuum sealer.
2. Place a roll bag into the designated roll storage area.
3. Pull the bag material across the sealing bar to your desired length, ensuring enough space for sealing and food contents.
4. Use the built-in cutter by sliding it across the bag material to create a clean cut.
5. Place one end of the cut bag under the red baffle (Seal Only) and close the lid. Press the 'Seal Only' button to create the bottom seal of your custom bag.

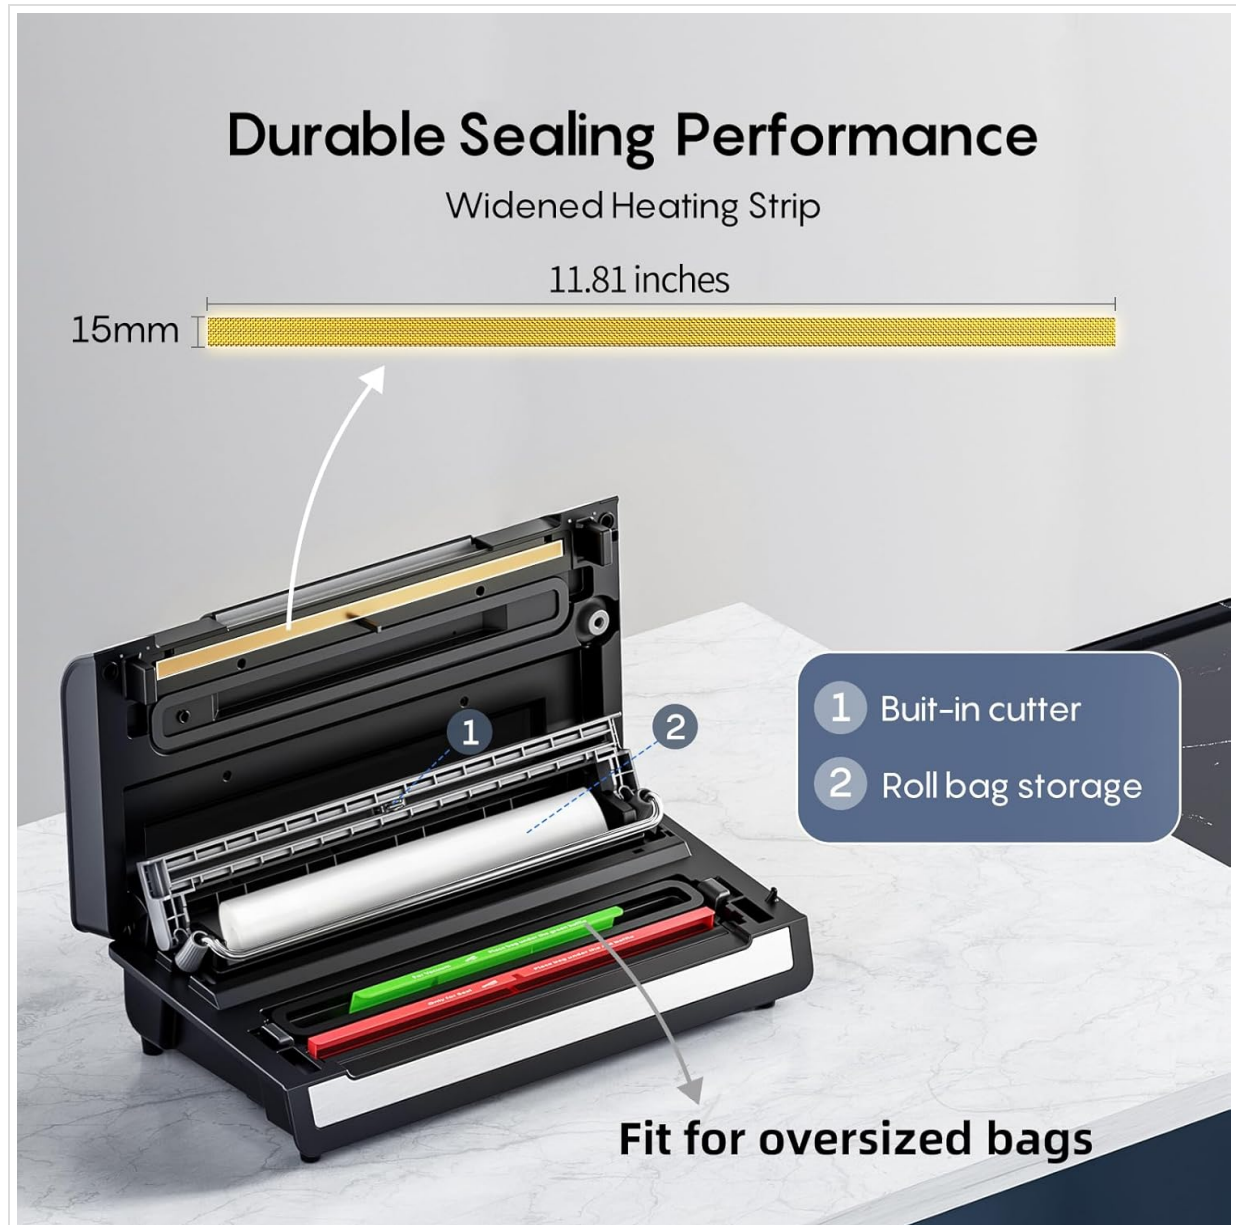 


Image: FRESKO AutoMax V8 demonstrating the built-in cutter and roll bag storage for creating custom-sized bags.

4. OPERATING INSTRUCTIONS

The FRESKO AutoMax V8 offers several modes for various food types and sealing preferences. The auto-locking system allows for one-handed lid opening and closing without extra pressing.

4.1 Automatic Vacuum & Seal Mode

This mode is ideal for most dry and moist foods, automatically vacuuming and sealing the bag.

1. Place the bag opening under the green baffle.
2. Close the lid. The machine will automatically vacuum and seal.

3. Once complete, the indicator lights will turn off, and you can open the lid to retrieve your sealed bag.

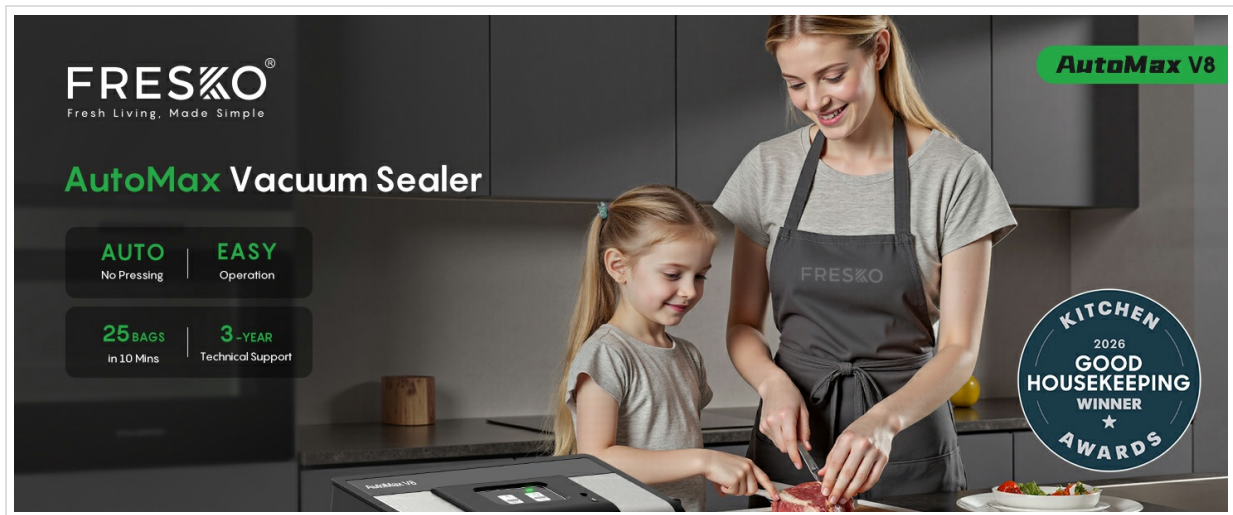 


Image: Step-by-step guide for using the Automatic Vacuum & Seal mode.

4.2 Automatic Seal Only Mode

Use this mode to seal bags without vacuuming, perfect for delicate items or creating custom bag sizes.

1. Place the bag opening under the red baffle.
2. Close the lid. The machine will automatically seal the bag.
3. Once complete, the indicator lights will turn off, and you can open the lid to retrieve your sealed bag.



Image: Step-by-step guide for using the Automatic Seal Only mode.

4.3 Pulse Mode (Manual Vacuum)

This mode provides free control over the vacuum degree, making it ideal for easily deformed or fragile foods.

1. Place the bag opening under the green baffle and close the lid.
2. Immediately press and hold the 'Pulse' button to vacuum. Release the button to seal when desired vacuum is reached.

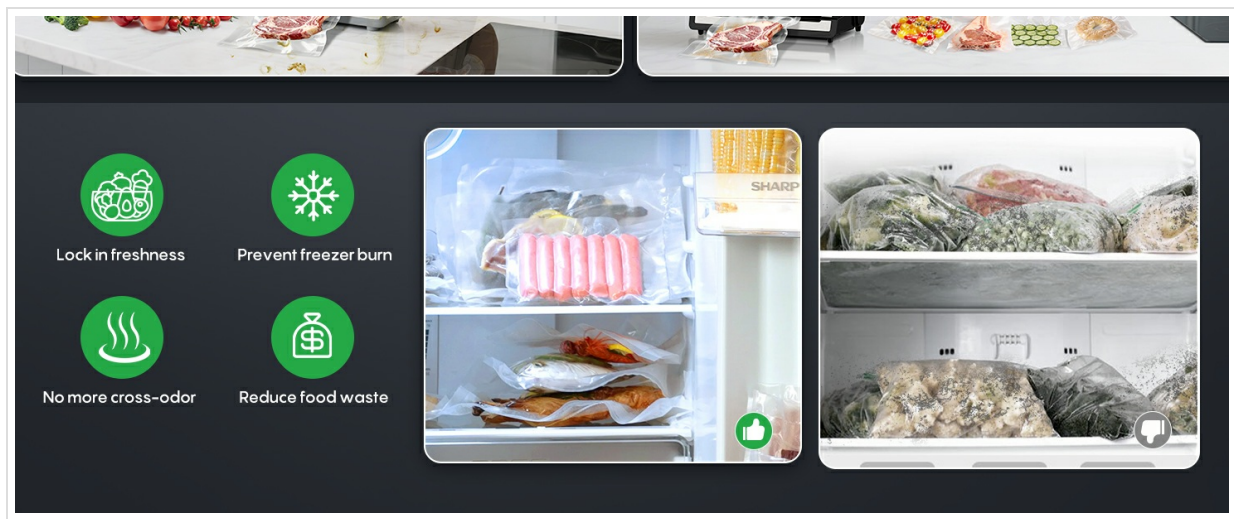 


Image: Step-by-step guide for using the Pulse Mode (Manual Vacuum).

4.4 External Vacuum Mode

Use the external vacuum hose to vacuum jars, sous vide bags, containers, or wine plugs.

1. Connect the accessory hose to the canister port on the sealer and to your jar/container.
2. Press the 'Canister' button to start the vacuum process.

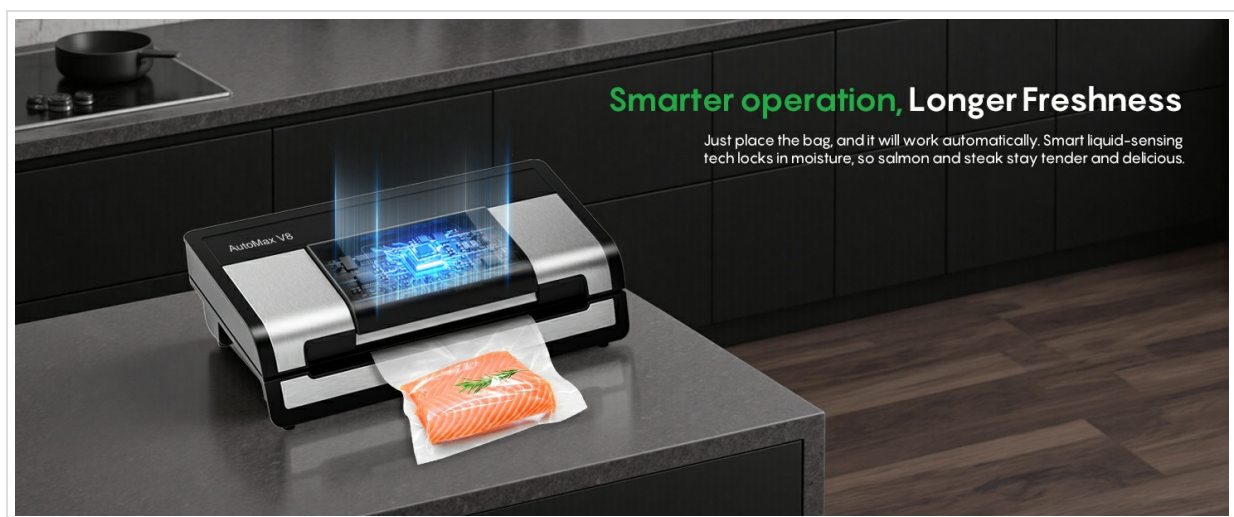 


Image: Guide for using the External Vacuum mode with various containers.

4.5 Food Type Settings

The 'Mode' button allows you to select between 'Dry' and 'Moist' settings, optimizing the vacuum and seal process for different food consistencies.

- **Moist Food:** Ideal for items with moisture, such as fresh meat, fruits, or marinated foods.
- **Dry Food:** Suitable for dry items like nuts, beans, or dehydrated fruits.



Image: Examples of various food types suitable for vacuum sealing, including moist, dry, fragile, soft, and marinated foods.

4.6 Official Product Video: Effortless Operation

Video: This official seller video demonstrates the effortless operation of the FRESKO Automatic Vacuum Sealer, highlighting its automatic vacuum and seal functions for various food items.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your FRESKO AutoMax V8 Vacuum Sealer.

- **Detachable Vacuum Chamber:** The vacuum chamber is detachable for easy cleaning. Remove it and wash with mild soap and water, then dry thoroughly before reattaching.
- **Exterior Cleaning:** Wipe the exterior of the machine with a damp cloth. Do not immerse the unit in water.
- **Sealing Strip:** Ensure the sealing strip is clean and free of food debris for a consistent seal.



Image: FRESKO AutoMax V8 illustrating its user-friendly design with a detachable vacuum chamber for easy cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your FRESKO AutoMax V8 Vacuum Sealer, please refer to the following common troubleshooting tips:

- **Machine Not Turning On:** Ensure the power cord is securely plugged into a working outlet.
- **Bag Not Sealing Properly:** Check that the bag is correctly positioned under the appropriate baffle (red for seal, green for vacuum & seal). Ensure the sealing strip is clean and the bag material is flat.
- **Incomplete Vacuum:** Verify that the bag is free of wrinkles and tears. Make sure the lid is properly closed and the auto-locking system is engaged. For moist foods, ensure excess liquid is not drawn into the vacuum chamber.
- **Moisture in Vacuum Chamber:** Clean the detachable vacuum chamber as described in the Maintenance section.

7. SPECIFICATIONS

Brand	FRESKO
Model Number	AutoMax V8-100
Material	Stainless Steel
Color	Black Silver
Product Dimensions	8"L x 4.7"W x 15.8"H
Item Weight	8.71 Pounds
Power Source	Corded Electric
Operation Mode	Automatic
Wattage	140 watts
Voltage	120 Volts
Manufacture Year	2025

8. WARRANTY AND SUPPORT

FRESKO offers a **3-year quality guarantee** for the AutoMax V8 Vacuum Sealer, ensuring peace of mind with your purchase. The product meets ETL safety standards. For any technical assistance or support, please refer to the contact information provided in your user manual or visit the official FRESKO website.