

**CREATE 172243\_401484**

# CREATE Air Fryer Mist User Manual

Model: 172243\_401484 | Brand: CREATE

## 1. INTRODUCTION AND OVERVIEW

The CREATE Air Fryer Mist is designed to provide a healthier alternative to traditional frying, allowing you to prepare a wide variety of foods with little to no oil. This appliance utilizes hot air circulation to achieve crispy results, similar to deep-frying, but in a clean, healthy, and smoke-free manner. Its innovative steam release function ensures that certain dishes, such as chicken, vegetables, or meat, remain juicy and tender while still achieving a desirable texture.

Featuring a generous 4.2-liter capacity, this air fryer is ideal for preparing 5 to 6 portions, making it suitable for families. The transparent glass bowl allows for easy monitoring of the cooking process without interrupting the cycle, preventing heat loss. With 6 preset programs and intuitive time and temperature controls via an LCD display, cooking your favorite meals is simple and convenient.



Figure 1.1: The CREATE Air Fryer Mist, showcasing its compact design and transparent glass bowl.

## 2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance to prevent personal injury or damage to the product.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Keep children and pets away from the appliance during operation, as surfaces can become very hot.
- Do not touch hot surfaces. Always use oven mitts or the handle provided when handling the glass bowl or frying basket.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling or storing.

- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been damaged in any way. Contact customer support for assistance.
- Do not overfill the frying basket.
- Exercise caution when opening the glass bowl during or after cooking, as hot steam may escape.

### 3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your CREATE Air Fryer Mist:

- **Main Unit:** Contains the heating element, fan, and control panel.
- **Glass Bowl:** The transparent cooking chamber where food is placed. It features a handle for easy removal.
- **Frying Basket:** A removable mesh basket that sits inside the glass bowl, designed to allow hot air to circulate around food.
- **Water Tank (for Steam Function):** Located on top of the main unit, used to add water for the steam cooking mode.
- **Control Panel:** LCD display with touch controls for setting time, temperature, and selecting preset programs.



Figure 3.1: Main components of the CREATE Air Fryer Mist.

## 4. SETUP

Before first use, follow these steps:

1. **Unpack:** Remove all packaging materials and promotional labels from the appliance.
2. **Clean Components:** Wash the glass bowl and frying basket thoroughly with warm, soapy water. Rinse

and dry completely. Wipe the main unit with a damp cloth.

3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the unit for proper air circulation.
4. **Assemble:** Insert the frying basket into the glass bowl, then slide the assembled glass bowl into the main unit until it clicks securely into place.
5. **Fill Water Tank (Optional for Steam Function):** If you plan to use the steam function, fill the water tank located on top of the unit with distilled or filtered water. Do not exceed the maximum fill line.



## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Operation

1. **Connect Power:** Plug the power cord into a grounded electrical outlet. The control panel will illuminate.
2. **Preheat (Recommended):** For best results, preheat the air fryer for 3-5 minutes at the desired cooking temperature.
3. **Load Food:** Carefully pull out the glass bowl by its handle. Place your food into the frying basket. Do not overfill.
4. **Insert Bowl:** Slide the glass bowl back into the main unit until it is securely closed.
5. **Set Time and Temperature:** Use the touch controls on the LCD display to adjust the cooking time and temperature according to your recipe.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
7. **Shake/Flip Food (Optional):** For even cooking, especially with fries or smaller items, pull out the glass bowl halfway through the cooking time, shake the basket, and then reinsert it. The air fryer will resume cooking automatically.
8. **Finish Cooking:** The air fryer will beep when the cooking time is complete. Carefully remove the glass bowl and transfer the cooked food to a serving dish.



Figure 5.1: The intuitive touch control panel for easy operation.

## 5.2 Using Preset Programs

The air fryer comes with 6 automatic preset programs for common dishes. To use a preset program:

1. Place food in the basket.
2. On the control panel, select the desired preset icon (e.g., fries, chicken, vegetables). The air fryer will automatically set the optimal time and temperature for that program.

3. Press Start/Pause to begin.

## 5.3 Steam Release Function

The steam release function helps to keep food moist and tender. This function is automatically integrated into certain preset programs (e.g., chicken, vegetables, meat) or can be manually activated if the water tank is filled.

- Ensure the water tank is filled before starting a program that utilizes steam.
- When a steam-enabled program is selected, the air fryer will automatically release steam at optimal intervals to ensure juicy results.
- You may see steam escaping from the unit during operation, which is normal.





Figure 5.2: Food cooking with the steam release function active.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool Down:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.

2. **Clean Glass Bowl and Frying Basket:** The glass bowl and frying basket are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads, as they can damage the surface.
4. **Clean Water Tank:** Empty any remaining water from the tank after each use. Clean the tank with a damp cloth and allow it to air dry.
5. **Interior Cleaning:** If necessary, gently wipe the interior of the main unit with a damp cloth. Avoid getting water into the electrical components.
6. **Storage:** Once clean and dry, store the air fryer in a cool, dry place.



Figure 6.1: Removing the frying basket for cleaning.

## 7. TROUBLESHOOTING

If you encounter any issues with your CREATE Air Fryer Mist, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; glass bowl not properly inserted.	Ensure the power cord is securely plugged into a working outlet. Check if the glass bowl is fully inserted and locked into place.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped; incorrect temperature/time.	Do not overload the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Greasy food residue; excessive oil.	Clean the glass bowl and basket thoroughly. Remove excess oil from food before air frying.
Steam function not working.	Water tank empty; incorrect program selected.	Ensure the water tank is filled. Select a preset program that utilizes steam or manually activate the steam function if available.
Food is not crispy.	Too much moisture; not enough cooking time/high enough temperature.	Pat food dry before cooking. Increase cooking time or temperature slightly. Ensure basket is not overcrowded.

If the problem persists after trying these solutions, please contact CREATE customer support.

## 8. SPECIFICATIONS

Feature	Specification
Brand	CREATE
Model Number	172243_401484
Capacity	4.2 Liters
Power/Wattage	1300 Watts
Voltage	240 Volts
Product Dimensions (D x W x H)	33.5 x 31 x 39.5 cm
Weight	5.8 kg
Material	Acrylonitrile Butadiene Styrene (ABS), Glass
Color	Off-white
Control Method	Touch
Number of Preset Programs	6

## 9. WARRANTY AND SUPPORT





Your CREATE Air Fryer Mist is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official CREATE website.

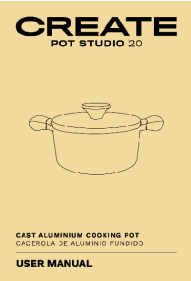

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact CREATE customer service. You can find contact information on the official CREATE brand store or website:

**CREATE Brand Store:** <https://www.amazon.nl/stores/Create/page/92B19167-A285-422E-9F9C-7B799FCC5E49>

Please have your model number (172243\_401484) and purchase date ready when contacting support.

### Related Documents - 172243\_401484

<div><p><b>CREATE</b> FRYER AIR PRO COMPACT</p><p>OIL FREE FRYER 3.5 L FREIDORA SIN ACEITE 3.5 L</p><p>USER MANUAL</p></div>	<p><a href="#">CREATE Fryer Air Pro Compact User Manual</a></p> <p>Comprehensive user manual for the CREATE Fryer Air Pro Compact oil-free air fryer. Learn about safety instructions, operating procedures, cooking tips, and maintenance for optimal use of this healthy cooking appliance.</p>
<div><p><b>CREATE</b></p><p>Air Fryer Mist</p><p>User manual   Manual de instrucciones</p></div>	<p><a href="#">Create Air Fryer Mist User Manual</a></p> <p>Comprehensive user manual for the Create Air Fryer Mist, covering security instructions, preparation, operation, settings, troubleshooting, and cleaning. Includes multi-language support.</p>
<div><p><b>CREATE</b> FRYER AIR</p><p>OIL FREE FRYER FREIDORA SIN ACEITE</p><p>USER MANUAL</p></div>	<p><a href="#">CREATE FRYER AIR User Manual: Safe Operation and Maintenance Guide</a></p> <p>Comprehensive user manual for the CREATE FRYER AIR oil-free fryer, providing essential safety instructions, operating guidelines, cleaning tips, and troubleshooting advice for optimal performance.</p>
<div><p>BY IKOHS</p><p><b>CREATE</b> FRYER AIR</p><p>OIL FREE FRYER USER MANUAL</p></div>	<p><a href="#">CREATE Fryer Air User Manual - Oil-Free Cooking Guide</a></p> <p>User manual for the CREATE Fryer Air by IKOHS. Get detailed instructions, safety precautions, cooking tips, and troubleshooting for your oil-free air fryer.</p>

 <p>The image shows the cover of the user manual for the CREATE POT STUDIO 20. It features a yellow background with a line drawing of a cooking pot. The text on the cover includes 'CREATE POT STUDIO 20', 'CAST ALUMINIUM COOKING POT', 'Cacerola de aluminio fundido', and 'USER MANUAL'.</p>	<p><a href="#">CREATE POT STUDIO 20 Cast Aluminium Cooking Pot User Manual   Care &amp; Instructions</a></p> <p>Comprehensive user manual for the CREATE POT STUDIO 20 Cast Aluminium Cooking Pot. Find detailed instructions for use, care, cleaning, and general characteristics of this high-quality non-stick cookware.</p>
 <p>The image shows the cover of the user manual for the CREATE Fryer Air Smart 5.5L. It features a dark grey background with a line drawing of an air fryer. The text on the cover includes 'CREATE FRYER AIR SMART', 'OIL FREE FRYER 5.5L WITH WIFI AND APP', 'FREIDORA SIN ACEITE 5.5L CON WIFI Y APP', and 'USER MANUAL'.</p>	<p><a href="#">CREATE Fryer Air Smart 5.5L Air Fryer User Manual with WiFi and App</a></p> <p>User manual for the CREATE Fryer Air Smart 5.5L air fryer. Learn about safety, operation, WiFi/app connectivity, settings, and cooking tips for healthier, oil-free meals.</p>