



[Manuals.plus](#) /

› [Devoko](#) /

› Devoko Outdoor Patio Furniture 3-Piece Rattan Sectional Sofa Instruction Manual DV240321-BG-NEW

Devoko DV240321-BG-NEW

Devoko Outdoor Patio Furniture 3-Piece Rattan Sectional Sofa Instruction Manual

Model: DV240321-BG-NEW

INTRODUCTION

Thank you for choosing the Devoko 3-Piece Rattan Outdoor Sectional Sofa. This manual provides essential information for the safe assembly, operation, and maintenance of your new patio furniture. Please read these instructions carefully before assembly and retain them for future reference.

Detail Of The Chair

Convertible outdoor sofa can be used differently according to needs



Removable Cover

Cross-reinforcement

Water-resistant

Image: The Devoko 3-piece rattan outdoor sectional sofa set, arranged in an L-shape with a glass-top coffee table, featuring beige cushions.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product.

- This product requires assembly and adjustment. Keep children and pets away from the assembly area.
- Exercise caution when handling the glass table top, as it may break if not handled properly.
- Be aware that surfaces may be slippery when wet. Always use caution when using or adjusting the product.
- Ensure all bolts and fasteners are securely tightened before use. Periodically check and re-tighten as needed.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Loveseat x 1
- Lounge Sofa x 1
- Coffee Table x 1
- Cushions (for loveseat and lounge sofa)
- Assembly Hardware (bolts, washers, wrench)
- Assembly Instructions



Image: An illustration detailing the dimensions and individual components of the Devoko 3-piece patio furniture set, including a loveseat, lounge sofa, and coffee table.

SETUP AND ASSEMBLY

Assembly is required for this product. Follow the included instructions carefully. It is recommended to partially tighten all bolts initially, then fully tighten them once all components are aligned.

1. Unpack all components and verify against the package contents list.
2. Lay out all parts on a soft, clean surface to prevent scratches.
3. Assemble the loveseat and lounge sofa frames according to the provided diagrams, ensuring all connections are secure.
4. Assemble the coffee table frame, then carefully place the tempered glass top into position.
5. Attach the adjustable feet to the bottom of the furniture pieces.
6. Place the cushions onto the assembled loveseat and lounge sofa.



Image: Close-up of the coffee table, highlighting the tempered glass surface and adjustable feet for stability.



Image: A detailed view of an adjustable foot, allowing for leveling on uneven surfaces.

OPERATING INSTRUCTIONS

The Devoko 3-piece patio furniture set offers versatile configurations to suit your outdoor space and needs.

- **L-Shaped Configuration:** Combine the loveseat and lounge sofa to form a cohesive L-shaped sectional, ideal for corner spaces or creating a unified seating area.
- **Separate Seating:** The loveseat and lounge sofa can be used independently, allowing for flexible arrangement in various outdoor settings such as a balcony, garden, or poolside.
- **Adjustable Table:** The coffee table features adjustable legs to ensure a stable and comfortable surface for drinks and snacks.



Image: The Devoko sectional sofa arranged in an L-shape on a patio, demonstrating a common setup.



Image: The Devoko furniture pieces separated, showing the loveseat and lounge sofa used individually with the coffee table.

MAINTENANCE

Proper care and maintenance will extend the life and appearance of your Devoko patio furniture.

- **Cushion Care:** The cushion covers are removable via a zipper design. Machine wash covers in cold water on a gentle cycle, or hand wash. Air dry only. Do not bleach or iron.
- **Frame Cleaning:** Wipe the rattan and steel frames with a damp cloth. For tougher stains, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly.
- **Glass Table Top:** Clean the heat-resistant glass table top with a wet towel or glass cleaner. For stubborn stains, boiling water can be used carefully.
- **Weather Protection:** While the materials are water-resistant, it is recommended to cover the furniture during prolonged periods of heavy rain or extreme weather to maximize longevity. Store cushions indoors during off-season.

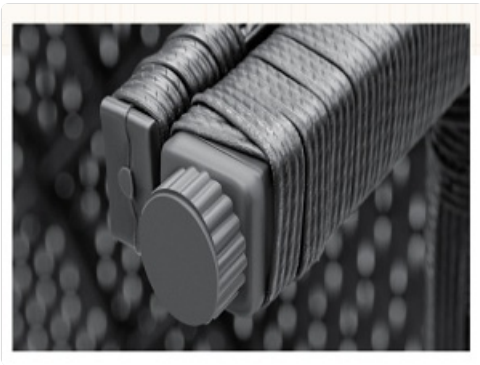


Image: Close-up showing water beading on the water-resistant cushion fabric, indicating its protective quality.



Image: A detailed view of the zipper on a cushion cover, illustrating its removability for cleaning.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Issue	Possible Cause	Solution
Parts do not align during assembly	Bolts overtightened prematurely; slight manufacturing variations.	Loosen all bolts, align parts, then gradually tighten all bolts evenly. Do not fully tighten until all parts are in place.
Cushions slide off easily	Smooth fabric on cushions or frame.	Consider adding non-slip pads or Velcro strips to the underside of the cushions.
Furniture feels unstable or wobbly	Uneven ground; loose connections.	Adjust the leveling feet on each piece. Ensure all assembly bolts are securely tightened.
Water stains on cushions after rain	Prolonged exposure to heavy rain; dirt accumulation.	Remove and clean cushion covers as per maintenance instructions. Consider using furniture covers during heavy precipitation.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	DV240321-BG-NEW
Color	Beige
Material Type	Rattan, Steel
Item Dimensions (Overall L-Shape)	70 x 45 x 26 inches (L x W x H)
Item Weight	79.82 Pounds
Included Components	Loveseat, Lounge Sofa, Coffee Table
Required Assembly	Yes
Product Care Instructions	Wipe with Damp Cloth

WARRANTY AND SUPPORT

This product is sold by FlamakerDirect. For any issues, missing parts, or support inquiries, please contact the seller directly through your purchase platform. The standard return policy allows for returns within 30 days of purchase.

For further assistance, please refer to the contact information provided with your purchase or visit the Devoko brand store online.

- **Seller:** FlamakerDirect
- **Return Policy:** 30-day refund/replacement
- **Devoko Store:** [Visit the Devoko Store](#)