

CREATE AIR FRYER STUDIO CRYSTAL 4.2L

CREATE AIR FRYER STUDIO CRYSTAL 4.2L with Water Sprayer Instruction Manual

Model: AIR FRYER STUDIO CRYSTAL 4.2L

1. INTRODUCTION

Thank you for purchasing the CREATE AIR FRYER STUDIO CRYSTAL 4.2L with Water Sprayer. This appliance is designed to cook a variety of foods using hot air, offering a healthier alternative to traditional deep frying. Its unique water sprayer function allows for steam cooking, enhancing moisture and texture, while the transparent glass basket provides visibility during the cooking process. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. SAFETY INSTRUCTIONS

- Always place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Keep children and pets away from the appliance during operation. The exterior surfaces can become hot.
- Do not block any ventilation openings.
- Never operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Always unplug the air fryer when not in use and before cleaning. Allow it to cool down completely before handling.
- Use only accessories recommended by the manufacturer.
- Exercise extreme caution when removing the hot glass basket and mesh tray. Use oven mitts.
- Do not overfill the basket.
- The water sprayer function uses hot steam; avoid direct contact with steam to prevent burns.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your CREATE AIR FRYER STUDIO CRYSTAL:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Control Panel:** Digital interface for setting time, temperature, and selecting programs.

- **Glass Basket:** Transparent cooking basket with a handle, allowing visual monitoring of food.
- **Mesh Tray:** Removable tray placed inside the glass basket for air circulation and fat drainage.
- **Water Tank:** Located on top of the main unit, used for the water sprayer function.



Image: The CREATE Air Fryer Studio Crystal with its main unit, glass basket, and mesh tray separated, illustrating the individual

components.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels.
2. **Initial Cleaning:** Wash the glass basket and mesh tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 10 cm of clear space around the back and sides, and above the appliance for adequate air circulation.
4. **First Use (Burn-in):** It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) before first use to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Place the mesh tray inside the glass basket.
2. Place your food onto the mesh tray in the glass basket. Do not overfill.
3. Slide the glass basket firmly into the main unit until it clicks into place.
4. Plug the power cord into a grounded electrical outlet. The control panel will illuminate.
5. Use the temperature and time controls on the digital panel to set your desired cooking parameters.
6. Press the Start/Pause button to begin cooking.
7. During cooking, you can pull out the basket to shake or turn food. The air fryer will pause automatically and resume when the basket is reinserted.
8. Once the timer reaches zero, the air fryer will beep and turn off. Carefully remove the basket and transfer food to a serving dish.



Image: A hand touching the digital control panel of the CREATE Air Fryer, demonstrating the interactive interface.

5.2 Pre-set Programs

The CREATE AIR FRYER STUDIO CRYSTAL features 6 automatic programs for common dishes. Select the desired program icon on the control panel, and the appliance will automatically set the optimal time and temperature. You can

manually adjust these settings even after selecting a pre-set program if needed.

5.3 Using the Water Sprayer (Steam Cooking)

The water sprayer function introduces steam during cooking, ideal for dishes like chicken thighs, vegetables, or certain meats to retain moisture and achieve a juicier result.

1. Open the water tank cover located on the top of the main unit.
2. Fill the water tank with clean, distilled water up to the maximum fill line. Do not overfill.
3. Close the water tank cover securely.
4. When selecting specific programs (e.g., chicken thighs, vegetables, meat), an option for steam cooking may become available. Activate this mode.
5. The air fryer will automatically spray water at intervals during the cooking cycle to generate steam.



Image: A hand pouring water into the designated water tank on top of the CREATE Air Fryer, demonstrating how to prepare for steam cooking.



Image: The CREATE Air Fryer in operation, with steam visibly rising from the glass basket containing food, indicating the water sprayer function is active.

5.4 Transparent Glass Basket

The transparent glass basket allows you to monitor your food's progress without opening the basket. This prevents heat loss

and ensures more consistent cooking results.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Glass Basket and Mesh Tray:** Remove the glass basket and mesh tray. These parts are dishwasher safe or can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
4. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food residue. Ensure the appliance is completely cool and unplugged.
5. **Water Tank:** Empty any remaining water from the tank after each use. Clean the tank periodically to prevent mineral buildup.



Image: Hands carefully lifting the mesh tray out of the glass basket, demonstrating the ease of disassembly for cleaning.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the glass basket fully into the unit until it clicks.
Food is not cooked evenly.	Basket overloaded; food not shaken/turned.	Do not overload the basket. Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and mesh tray thoroughly. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture; insufficient oil (if desired).	Pat food dry before cooking. Lightly brush or spray with oil for extra crispiness.
Water sprayer not producing steam.	Water tank empty; tank not properly closed; steam function not activated.	Refill water tank. Ensure tank cover is secure. Activate steam mode for relevant programs.





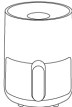
8. SPECIFICATIONS

Feature	Detail
Brand	CREATE
Model	AIR FRYER STUDIO CRYSTAL 4.2L
Capacity	4.2 Liters (suitable for 5-6 servings)
Power	1300 Watts
Voltage	240 Volts
Material	ABS + Glass
Dimensions (L x W x H)	26.1 x 24.8 x 27.3 cm
Weight	5.8 kg
Special Features	Temperature Control, Programmable, Water Sprayer, Transparent Glass Basket
Pre-set Programs	6 automatic programs

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official CREATE website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact CREATE customer service through the contact information provided in your product packaging or on the official brand website.

Related Documents - AIR FRYER STUDIO CRYSTAL 4.2L

<div><div>CREATE</div><div></div><div><div>Air Fryer Mist</div><div>User manual Manual de instrucciones</div></div></div>	<div><div>Create Air Fryer Mist User Manual</div><div>Comprehensive user manual for the Create Air Fryer Mist, covering security instructions, preparation, operation, settings, troubleshooting, and cleaning. Includes multi-language support.</div></div>
<div><div>CREATE</div><div></div><div><div>Warm Crystal</div><div>User manual Manual de instrucciones</div></div></div>	<div><div>CREATE Warm Crystal Heater User Manual</div><div>Comprehensive user manual for the CREATE Warm Crystal electric heater, detailing installation, safety instructions, operation, smart features, maintenance, and troubleshooting. Available in multiple languages.</div></div>
<div><div>CREATE</div><div></div><div><div>Warm Crystal</div><div>User manual Manual de instrucciones</div></div></div>	<div><div>CREATE Warm Crystal User Manual: Safety, Installation, and Operation Guide</div><div>Comprehensive user manual for the CREATE Warm Crystal heater, covering safety instructions, installation steps, Wi-Fi connectivity, app usage, operation, maintenance, and storage. Available in multiple languages.</div></div>
<div><div><div>CREATE</div><div>FRYER AIR SMART</div><div></div><div><div>OIL FREE FRYER 5.5L WITH WIFI AND APP</div><div>FREIDORA SIN ACEITE 5.5L CON WIFI Y APP</div><div>USER MANUAL</div></div></div></div>	<div><div>CREATE Fryer Air Smart 5.5L Air Fryer User Manual with WiFi and App</div><div>User manual for the CREATE Fryer Air Smart 5.5L air fryer. Learn about safety, operation, WiFi/app connectivity, settings, and cooking tips for healthier, oil-free meals.</div></div>
<div><div><div>CREATE</div><div>FRYER AIR</div><div></div><div><div>OIL FREE FRYER FREIDORA SIN ACEITE</div><div>USER MANUAL</div></div></div></div>	<div><div>CREATE FRYER AIR User Manual: Safe Operation and Maintenance Guide</div><div>Comprehensive user manual for the CREATE FRYER AIR oil-free fryer, providing essential safety instructions, operating guidelines, cleaning tips, and troubleshooting advice for optimal performance.</div></div>



[CREATE Fryer Air User Manual - Oil-Free Cooking Guide](#)

User manual for the CREATE Fryer Air by IKOHS. Get detailed instructions, safety precautions, cooking tips, and troubleshooting for your oil-free air fryer.